

# **RT-Range**

**Lane position and  
vehicle-to-vehicle  
measurements**



## **User Manual**

**Covers the use of  
RT-Range features  
on the RT3000v3**

**The inertial experts.**

## Legal Notice

Copyright of Oxford Technical Solutions at [oxts.com](http://oxts.com).

© 2008–2019, Oxford Technical Solutions Ltd.

Unauthorised use, copying or distribution is not permitted. All brand names are trademarks of their respective holders.

The software also includes software in binary form from:

Xiph.Org Foundation at [xiph.org](http://xiph.org).

Copyright (c) 2002, Xiph.org Foundation

QNX at [qnx.com](http://qnx.com).

© 1982–2008, QNX Software Systems Ltd. All rights reserved.

Any redistribution of the software must reproduce the above copyright notices, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

None of the names of the Xiph.org Foundation and QNX, nor the names of its contributors may be used to endorse or promote this product or products using this software without specific prior written permission.

## Environmental protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or OxTS representative for recycling advice.



### Disclaimer

The software is provided by the copyright holders and contributors “as is” and any express or implied warranties, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose are disclaimed. In no event shall the copyright holders or contributors be liable for any direct, indirect, incidental, special, exemplary, or consequential damages (including, but not limited to, procurement of substitute goods or services; loss of use, data, or profits; or business interruption) however caused and on any theory of liability, whether in contract, strict liability, or tort (including negligence or otherwise) arising in any way out of the use of this software, even if advised of the possibility of such damage.

The software is provided by the copyright holders and contributors “as is” and any express or implied warranties, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose are disclaimed. In no event shall the copyright holders or contributors be liable for any direct, indirect, incidental, special, exemplary, or consequential damages (including, but not limited to, procurement of substitute goods or services; loss of use, data, or profits; or business interruption) however caused and on any theory of liability, whether in contract, strict liability, or tort (including negligence or otherwise) arising in any way out of the use of this software, even if advised of the possibility of such damage.

### Contact details

Oxford Technical Solutions Limited  
Park Farm Business Centre  
Middleton  
Stoney  
Oxfordshire  
OX25 4AL  
United Kingdom

Tel: +44 (0) 1869 814 253  
Fax: +44 (0) 1869 251 764  
  
Web: <http://www.oxts.com>  
Email: [support@oxts.com](mailto:support@oxts.com)

### Revision

Document Revision: 190902 (*See Revision History for detailed information*).

## Warranty

Oxford Technical Solutions Limited warrants its products to be free of defects in materials and workmanship, subject to the conditions set forth below, for a period of one year from the Date of Sale.

“Date of Sale” shall mean the date of the Oxford Technical Solutions Limited invoice issued on delivery of the product. The responsibility of Oxford Technical Solutions Limited in respect of this warranty is limited solely to product replacement or product repair at an authorised location only. Determination of replacement or repair will be made by Oxford Technical Solutions Limited personnel or by personnel expressly authorised by Oxford Technical Solutions Limited for this purpose.

In no event will Oxford Technical Solutions Limited be liable for any indirect, incidental, special or consequential damages whether through tort, contract or otherwise. This warranty is expressly in lieu of all other warranties, expressed or implied, including without limitation the implied warranties of merchantability or fitness for a particular purpose. The foregoing states the entire liability of Oxford Technical Solutions Limited with respect to the products herein.

## Table of contents

Warranty	4
Introduction	9
Lane position methodology	9
Distance between multiple vehicles methodology	11
Distance to Fixed points and Feature points methodology	12
Steering robot connection	12
RT-Backpack for pedestrians	12
Outputs	12
Target CAN	13
Scope of Delivery	14
Battery	17
Specification	19
Conformance notices	21
Regulator testing standards	21
Installation	22
RT-Range S connections	22
LED definitions	23
Hunter vehicle wiring	23
Target vehicle wiring	24
Physical Installation	25
RT Configuration	27
RT Processing Platform	27
IP Addresses	27
RT-Range S system	28
Standard RT-Range system	29
Survey Trolley Assembly	30
Survey Trolley installation	31
Software	35
PC configuration	36

Anti-virus software	37
Feature point Survey Wizard	38
Creating Feature points using real-time measurements	39
Deleting Feature points	40
Editing Feature points	40
Main controls	42
View Options control	42
Add Point control	42
Finish Options control	43
Display Data control	43
Lane Survey Wizard	44
Overview	44
Selecting a line filename	45
Connecting to the RT	45
Add point option menu	46
Finish option menu	47
Display data menu	48
Spreadsheet Viewer	52
Map Creation Wizard	52
Selecting a map filename	52
Overview	53
Add Line Options	53
Start Line Option	55
Finish Options	56
View Options	57
Clean Up Line	57
Map View	59
Spreadsheet Viewer	60
Real-Time Display	61
Overview	61
Configure RT-Range menu	62
RT-Range Quick Config	62
File Selection menu	71
Display Data menu	71
Connection configuration using the NAVconnect window	72
Associations and tags	73
Bird's Eye View	73
Save Data	77

Stop Page	83
Display tab	84
RT-Range Configuration Wizard	85
Overview	85
Reading the Initial Configuration	85
Hunter/Targets Setup	86
Lane Measurements	88
Range Measurements	89
Defining polygons	92
Defining Multi-sensor points	95
Options	97
Committing the configuration to the RT-Range	107
Saving a copy of the RT-Range configuration locally	108
RT-Range Post Processing Wizard	109
Overview	109
Select Data Source	111
Read Configuration	112
Lane Tracking Mode	113
Target Setup	114
Lane Measurements Setup	115
Range Measurements	116
Options	116
Select Fields	117
Output Config	118
Output File	119
Finish Page	120
Outputs	121
CAN bus messages	121
Heartbeat messages	123
Table heading definitions	124
Signals	124
Calculation details	139
Range measurement effects	139
2D and 3D measurement planes	139
Polygons	140
Range velocity with polygons	141
Errors in heading	142
Lateral velocity effects	142
Transient errors due to communication link delay	143

Lane position measurement effects	144
Discontinuous distance	145
Co-ordinates for measurements with respect to the Lines	146
Acceleration on curves	147
Effect of the line survey on the accuracy	148
Rules for the Clean Up Line tool in the Map Creation Wizard	149
Line, map and Feature point file format descriptions	150
Line file format	150
Map file format	150
Header fields	151
Line fields	151
Feature point file format	152
RT-Range and the Ibeo feature fusion ADAS reference-system	155
Introduction to the Ibeo Feature Fusion System	155
Benefits of adding the Ibeo Feature Fusion System to the RT-Range system	155
Ibeo Laser View (ILV) visualization	156
Revision history	159



## Introduction

RT-Range is the name given to a function of the RT3000v3.

With the introduction of the RT3000v3 product in September 2019, the installation and operation of RT-Range functionality became more simple. No longer do you need an RT-Range S Hunter device – RT-Range calculations can be made on the RT3000v3 itself and the RT can connect to the RT-XLAN for V2V communication. If you have an RT3000v3 with RT-Range functionality inside, there will be an additional label on top which marks the device as being RT-Range capable.

**Figure 1. RT300 label has a sticker on top to show Range functionality**



If you are using an old RT-Range S Hunter device alongside a previous generation RT device then you should refer to the previous version of the RT-Range manual available for download on the OxTS support website.

RT-Range is the collective name given for two optional features on the RT3000v3. The RT-Range features enable you to perform two tasks:


1. Measure the position of a vehicle relative to lane markings and other objects.
2. Measure the relative position, i.e. range, between multiple vehicles.

The lane position feature is useful for testing and validating other technologies for lane position measurement, such as lasers or vision. The range or distance between multiple vehicles is useful for validating cruise control radar and other advanced accident avoidance systems.

### Lane position methodology (V2L feature code)

Lane position is measured by surveying the road markings using an RT system and generating a map from the data. The RT system is then fitted to the car and the map is downloaded to the RT-Range. The RT-Range compares the current position reported by the RT to the map. The lane position measurements are output over Ethernet and CAN bus. See Figure 2 for details of these steps.

**Figure 2. Steps taken for lane position measurement**

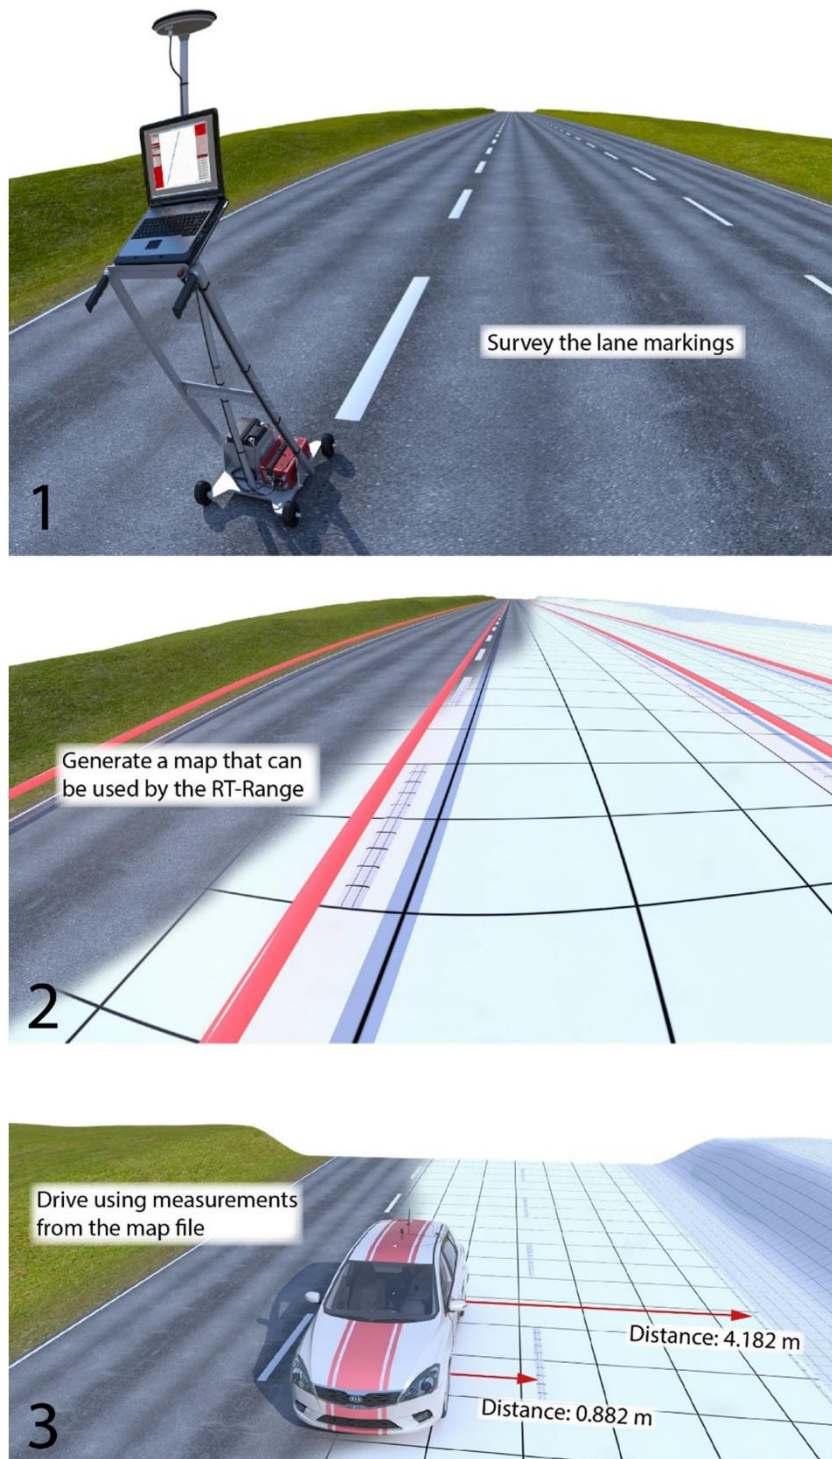

RT-Range allows up to eight lane markings to be measured. In addition, RT-Range provides three separate measurement points on the vehicle and gives the

distances from these three points to the lane markings. As well as distance, RT-Range measures velocity and acceleration relative to the lane markings. To help plot the data, RT-Range also gives the distance travelled along the reference line (Line 1).


### Distance between multiple vehicles methodology (V2V feature code)

Distance measurements are made from the hunter vehicle to each target. The measurements are in the reference frame of the hunter vehicle, so a longitudinal, lateral and resultant range can be measured. RT-Range supports up to four mobile targets.

The measurements made by the RT fitted in each target vehicle are transmitted wirelessly back to the hunter vehicle by high speed Wireless LAN. The RT-Range receives those measurements and computes the distances, velocities, accelerations and other parameters about the vehicles. To allow for radio delays, RT-Range predicts the position of each target vehicle so the measurements can be output in real time with a low latency. The RT-Range can also operate with a fixed delay, so as to give the radio time to transmit the data and reduce the error in the prediction. The effect of prediction is discussed later.

Typically, the radio delay is 10 ms and there is no degradation in performance with this delay. Even when the radio delay is up to 50 ms, the error in range is very small (less than one centimetre).

**Figure 3. Range measurements between two vehicles**

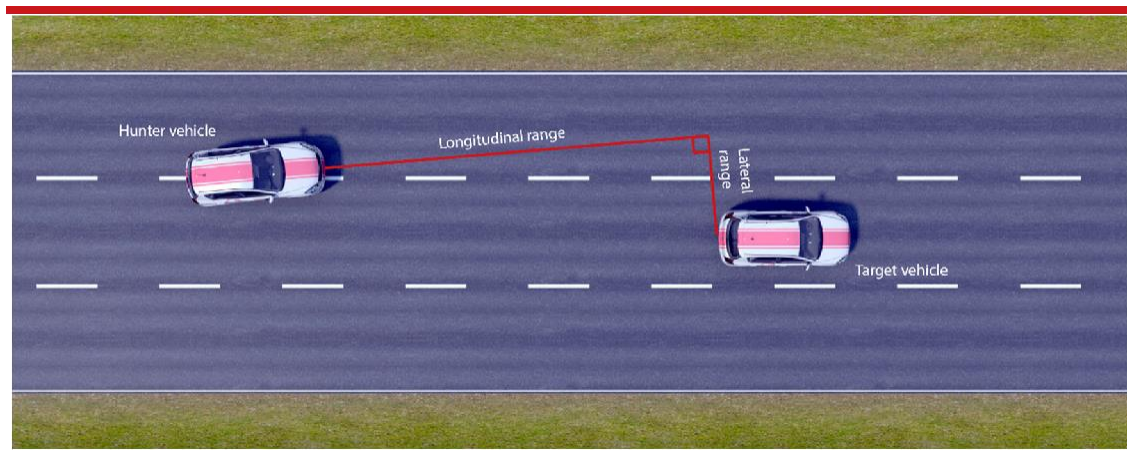

The measurement points on the hunter vehicle and on the target vehicles can be different to the position of the RTs and different to the positions of the lane measurement positions. This makes it easy to compare the RT-Range measurements to those of a radar mounted on the front of the car. The target vehicles can be represented as polygons and the hunter

will then track the closest point on the polygon's perimeter, including interpolating between the polygon points.

### **Distance to Fixed points and Feature points methodology**

Just as the RT-Range measures the distance to a mobile target (another vehicle or pedestrian), it can also measure the distance to a Fixed point (e.g. a balloon car). The RT-Range includes tools to measure the position of Fixed points accurately and quickly.

The RT-Range can also recognise Feature points. Feature points are a large collection of Fixed points representing signs, road markings and other street furniture at known positions. Unlike Fixed points, which are active all the time, a field of view can be defined in the RT-Range to represent a camera. When Feature points enter the "camera's" field of view, the distance to those Feature points can be computed. For example, along a test route on the public highway, the position and classification of 10,000 Feature points is known; as the vehicle drives along the route, the RT-Range will output the distance to the Feature points that are currently in view.

### **Steering robot connection**

The RT3000v3 with RT-Range features can provide feedback to a steering robot like those supplied by AB Dynamics. This allows the robot to trigger tests based on distance measurements, which is useful for repeatability in Adaptive Cruise Control (ACC) tests. Other Advanced Driver Assistance System (ADAS) tests also benefit from having the AB Dynamics robot triggered by distance measurements. The AB Dynamics robot software can also acquire measurements from the RT and merge it with robot data.

### **RT-Backpack for pedestrians**

The RT-Backpack is designed to work with the RT3000v3 with RT-Range features. It is a target system in a backpack that can be carried by a pedestrian. The RT-Backpack transmits all the signals to the hunter vehicle in the same way as a vehicle-based mobile target. The RT-Backpack is designed to be used with the RT3000 and RT1003.

### **RT-Range S Target**

The RT-S Target is an optional accessory for ADAS testing. The RT-Range S connects an RT1003 or previous generation RT3000/RT2000 to an RT-XLAN for V2V communication. It provides interfaces for Ethernet and the RT-XLAN and is powered independently. If you have an RT3000v3 then you do not need the RT-Range S Target as the RT3000v3 comes with additional Ethernet connectors and a power connector to the RT-XLAN directly.

**Table 1. RT-Range S Target vehicle components**

Item	Qty.	Description
1	1	RT-Range S target system unit
2	1	Power cable M12(M) to M12(F) - 14C140A
3	1	Power cable M12(F) to cigarette lighter plug - 77C0002B
4	1	RJ45-RJ45 2 m Ethernet cable (UDP straight)
-	1	RT-Range Software on USB memory stick

**Figure 4. Image of RT-Range S target with components**



Note: The RT-Range S components differ slightly from the standard RT-Range system.



## Survey Trolley

The RT-Range Survey Trolley is an accessory which enables you to accurately survey the position of lanes for vehicle-to-lane testing.

**Table 2. RT-Range Survey Trolley components**

Item	Qty.	Description
1	1	Base plate with wheels attached
1	2	Lower frame assembly with radio antenna plate attached
1	3	Upper frame assembly
1	4	Fixed PC shelf
3	5	Antenna pole sections
1	11	GPS-702-GG antenna
2	6	Joint slugs
12	7	M6 × 12 mm hex socket screws
12	8	M6 washers
4	13	M4 × 40 mm countersunk bolt with locking nuts
4	12	M4 nuts
4	14	M4 washers
1	9	UNC bolt
2	10	1" U-Bolt with plate and nuts
2	15	Bungee straps
1	16	Battery connection cable
1		Battery charger
1		Mains cable
1		Trigger switch

Note: Some of these components might already be pre-assembled on delivery. Item numbers refer to the assembly drawing in Figure 12.

The Survey Trolley will require a battery. Please note that this is not supplied by OxTS and must be purchased by the customer. The ideal battery is a Yuasa NP24-12, a 12 V, 24 Ah lead acid battery measuring 166 × 175 × 125 mm.

**Figure 5. Survey Trolley**



## Specification

The technical specification of the RT3000v3 with RT-Range features depends on both the type of wireless LAN communication link and RT systems being used.

We recommend the use of the RT-XLAN. Using the RT-XLAN will make it possible to achieve longitudinal ranges of around 1 km and will improve the data integrity at the lower ranges. However, its use does depend on your location and the local wireless LAN radio laws governing your particular area for suitability. If you are unsure, please contact your local representative for advice.

---

**Table 3. Technical specification for lane measurements**

Parameter	Range	Accuracy using RT3000
Lateral distance to lane	$\pm 30$ m	0.02 m RMS
Lateral velocity to lane	$\pm 20$ m/s	0.02 m/s RMS
Lateral acceleration to lane	$\pm 30$ m	0.1 m/s <sup>2</sup> RMS

To achieve these accuracies, it is necessary to construct the map correctly. See the Calculation details section. It is also essential to configure the RT correctly. It is not easy to measure all the parameters accurately, but time must be taken to do this.



**Table 4. Technical specification for RT3000v3 with RT-Range features with RT-XLAN**

Parameter	Specification
RT-XLAN radio range	Approx. 1 km line of sight
RT-XLAN Delay	<50 ms RMS

Note: These figures are based on a correctly configured RT-XLAN system.

**Table 5. Technical specification for RT3000v3 with RT-Range features with standard wireless LAN**

Parameter	Specification
Wireless LAN radio range	Approx. 200 m line of sight
Wireless LAN Delay	<70 ms RMS

Note: These figures are based on a typical wireless LAN device such as those used in the original RT-Range system.

**Table 6. Technical specification for range measurements – RT-XLAN**

Parameter	Range	2 × RT3002
Longitudinal Range	±1 km	0.03 m RMS*
Lateral Range	±1 km	0.03 m RMS*
Resulting Range	±1 km	0.03 m RMS*

\*Note: There is an additional component, the heading accuracy, which changes the accuracy of the measurements in the hunter vehicle's co-ordinate frame. In a scenario where the target is ahead of or behind the hunter i.e. approximately 0 or 180 relative heading, then the Lateral Range has an additional error of  $\text{Range} \times 0.00175$  (as a result of the 0.1 deg heading accuracy). So, for example at a range of 100 m then the lateral accuracy is 0.175 m, and for 1000 m the lateral accuracy is 1.75 m. However, for a scenario where the vehicles are adjacent, the situation is reversed so the Lateral Range accuracy is 0.03 m RMS and the Longitudinal Range accuracy is  $0.00175 \times \text{Range}$  RMS.

**Table 7. Technical specification for range measurements – standard wireless LAN**

Parameter	Range	2 × RT3003
Longitudinal Range	±200 m	0.03 m RMS*
Lateral Range	±200 m	$0.00175 \times \text{Range}$ RMS*
Resulting Range	±200 m	0.03 m RMS*

\* Note: In this example, all details are the same as the Note of Table 7, except that for 200 m the lateral accuracy is 0.35 m.

**Note:** If you use alternative wireless LAN devices, you should not expect to achieve the kind of ranges possible with the RT-XLAN. Wireless LAN is also affected by high-power electrical fields such as those found under high-voltage electricity pylons.

## Installation

With the introduction of the RT3000v3 RT product in 2019 you no longer need an RT-Range S Hunter device. Instead, Range calculations can be made on the RT3000v3 itself and the RT can connect to the RT-XLAN directly for V2V communication. If you are using a previous generation RT or a current generation RT1003 in a Target vehicle then you will still need an RT-Range S Target to connect the RT to the RT-XLAN.

There are two feature codes which can be applied to the RT3000v3 in order to use RT-Range functionality. They are:

1. RT-Range V2V

This feature code enables use of the RT-Range software for configuring and displaying data for multiple mobile and fixed point targets

2. RT-Range Vehicle-to-lane

This feature code enables the use of RT-Range software for Lane Survey and Map Creation required for vehicle-to-lane measurements.

You can check which feature codes are enabled on the RT by opening NAVconfig when the RT is connected to your laptop and clicking the 'I' icon to see information about the device. The RT-Range feature codes will be listed as 'enabled' or 'disabled' in the feature code list.

If you are using an RT-Range S Hunter device along with a previous generation RT then you should refer to the previous version of the RT-Range manual available for download on the OxTS support website.

If you have questions about device compatibility in the case where you are using a mixture of new generation and previous generation devices then you can contact [support@oxts.com](mailto:support@oxts.com) for advice.

## RT3000v2 connections

The front panel connections and user cable connections are listed in the RT3000v3 manual available to download on the OxTS support website.

## RT-Range Target connections

The RT-Range Target front panel connections are shown in Figure 6; please refer to Table 8 for a description of each item.

**Figure 6. RT-Range S front panel layout**



**Table 8. RT-Range S Target front panel layout descriptions**

Label	Item	Description
1	Power LED	Unit is powered up when lit
2	RT-XLAN PoE	Dedicated PoE port. Provides Ethernet and power to the RT-XLAN
3,5	12 V Power out	2 × 12-volt power output sockets for an RT and a spare
4	12 V Power in	10–25 V dc power input
6,7,8	Ethernet ports	Built-in 3 port Ethernet switch

### **Hunter vehicle wiring**

If you are using an RT3000v3 with RT-Range features inside, then you can connect the RT3000v3 directly to the RT-XLAN using the J2 connector on the 14C0213D Aux user cable. This is the only connector needed in order to provide PoE to the RT-XLAN for V2V communication.

### **Target vehicle wiring**


If you are using an RT3000v3 in your target vehicle then you can connect the RT directly to the RT-XLAN using the PoE cable 110-00274-301 provided with the RT-XLAN. In this case there is no need to use an RT-Range S Target.

If you are using an RT1003 or previous generation RT3000, an RT2000 or RT4000 in your target vehicle then you will first need to connect the RT to an RT-Range S Target. This device will manage the PoE to the RT-XLAN.

### Physical installation

The antennas for the radio, RT (GNSS) and the RT-XLAN or standard Wireless LAN mag mount antenna should be spaced out across the roof of the vehicle. Putting all the antennas in one spot will cause interference and will reduce the performance of the system. Ideally there should be at least a 1 m separation between each antenna. In addition, the cables for the antennas should not be routed together since this can also cause interference.

**Figure 7. Ideal antenna locations on top of the vehicle**

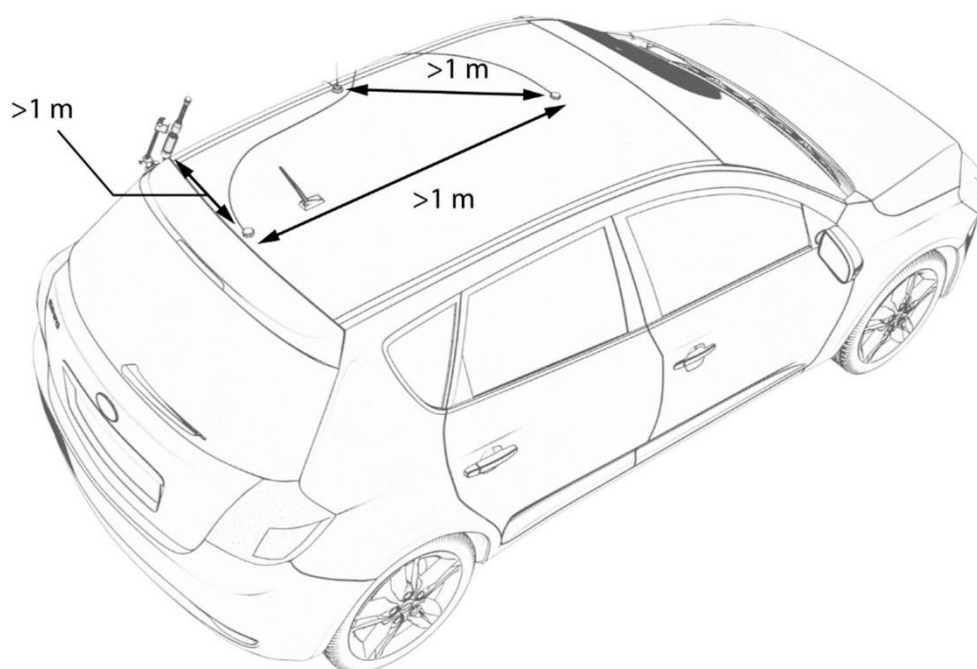

The position where the RT is installed in the vehicle is not critical for the accuracy of the RT measurements. However, normally the user requires the RT to be located at a specific position such as the centre of gravity. The RT-Range configuration includes configurations for the positions of the RT-Range measurements, so these are remote from the RT mounting position. See the section on the RT-Range software for more information on configuring the measurement positions.

The RT-Range S Target box is suitable for mounting on the RT-Strut with the RT.

## **RT configuration**

Full instructions on how to configure the RT are supplied in the RT User Manual. Only the settings applicable to RT-Range features and software are listed here.

The RT can displace its measurements to a remote position. If the RT has a displaced output, RT-Range calculations will work from that displaced output position and not from the mounting location of the RT.

The performance of the wireless LAN can be improved by delaying the Ethernet output of some of the RTs. Normally each target is delayed by a different amount so that their output on the wireless LAN does not clash. This can be configured on the Ethernet option of NAVconfig.

## **IP addresses**

The RT-Range software will identify which RT is performing each task by the IP address of the relevant RT. You must not have two (or more) devices on the same network with the same IP address

Each RT has a static IP address. This is normally in the range 195.0.0.10 to 195.0.0.99. Some early systems are not in this range.

The RT-XLAN will normally be factory configured as follows:

**RT-XLAN Base [Hunter]: 195.0.0.170**


**RT-XLAN Client [Target 1,2,3,4]: In the range of 195.0.0.171 to 195.0.0.174**

Each RT-XLAN will be marked showing its IP address and configuration. This may be especially useful if you have ordered different IP addresses to the standard ones.

For more information about the RT-XLAN configuration please refer to the RT-XLAN user manual.

For alternative wireless LAN devices, the “Base” should be configured as an “Access Point” in “network bridge” mode, and the “Client” should be configured as a “station” in “network bridge” mode. There may be variations to this for different wireless LAN devices and we recommend speaking to the WLAN device manufacturer, asking them for the best way to achieve a Base–Client configuration as specified above.

**Figure 8. Survey Trolley assembly**

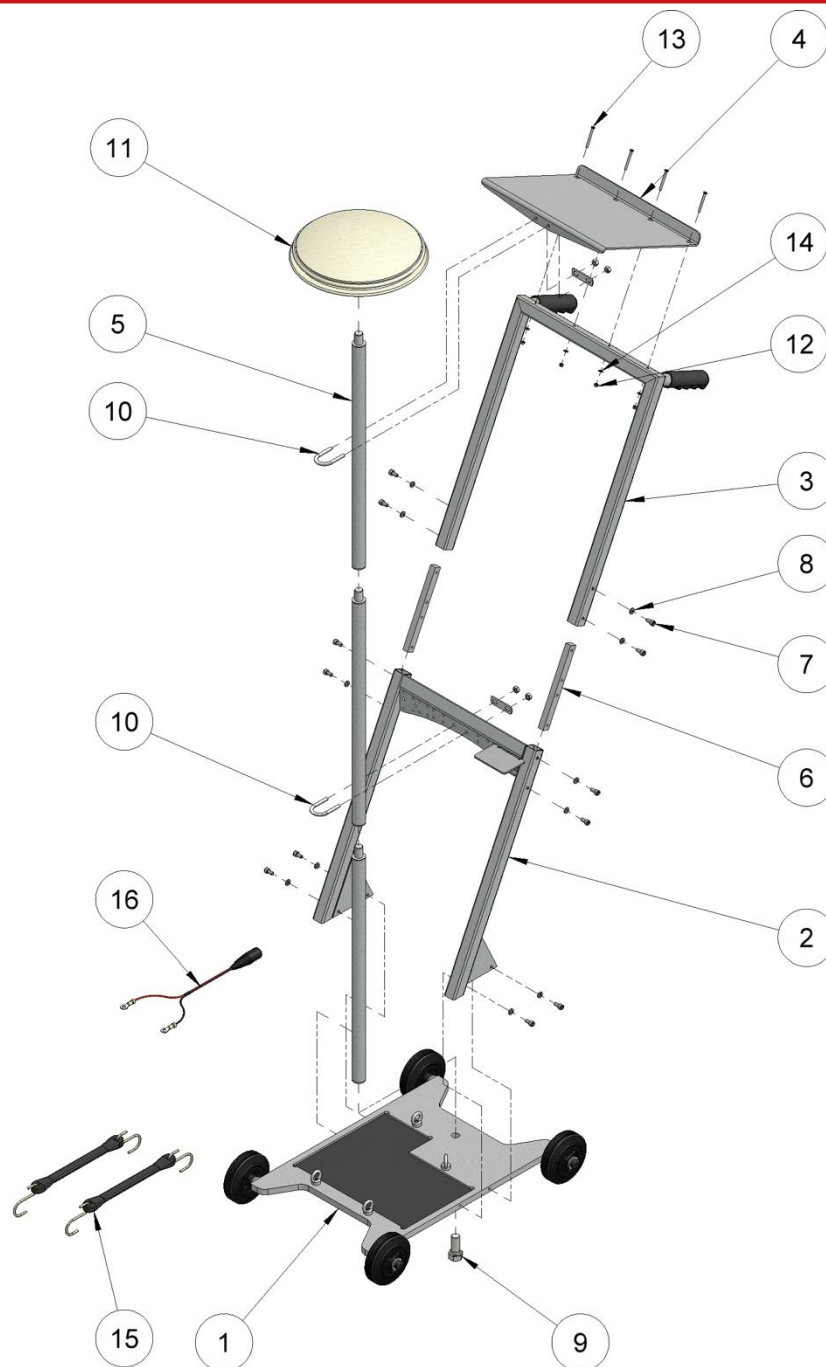

### Survey Trolley installation

The Survey Trolley has been designed to carry the RT, a battery and a laptop computer. The GPS antenna on the Survey Trolley is sufficiently high so that there will be minimal interference from the operator. The position measurements are displaced to the front right



wheel so that this wheel can be pushed along the road markings. The displacement will be accurate even when the Survey Trolley is at a significant angle (e.g. on a road with a large camber).

The RT should be set up on the Survey Trolley facing the rear and clamped down securely so it cannot move. The installation on the Survey Trolley is shown in Figure 9.

**Figure 9. Survey Trolley installation**




An iron plate is provided to hold the magnetic antenna for the radio modem.

The connections for the RT on the Survey Trolley are the same as those on a vehicle and are shown in Figure 10.

If a trigger switch is being used, then it should be connected to J5 of the RT. A trigger event can be made by shorting the Event Input pin on J5 of the 14C0038A User Cable to ground. The trigger event can be used to place a point in the line file for the map. A switch is provided with the Survey Trolley with a pre-wired connector that fits on J5.

**Figure 10. Connection diagram for the RT on the Survey Trolley**

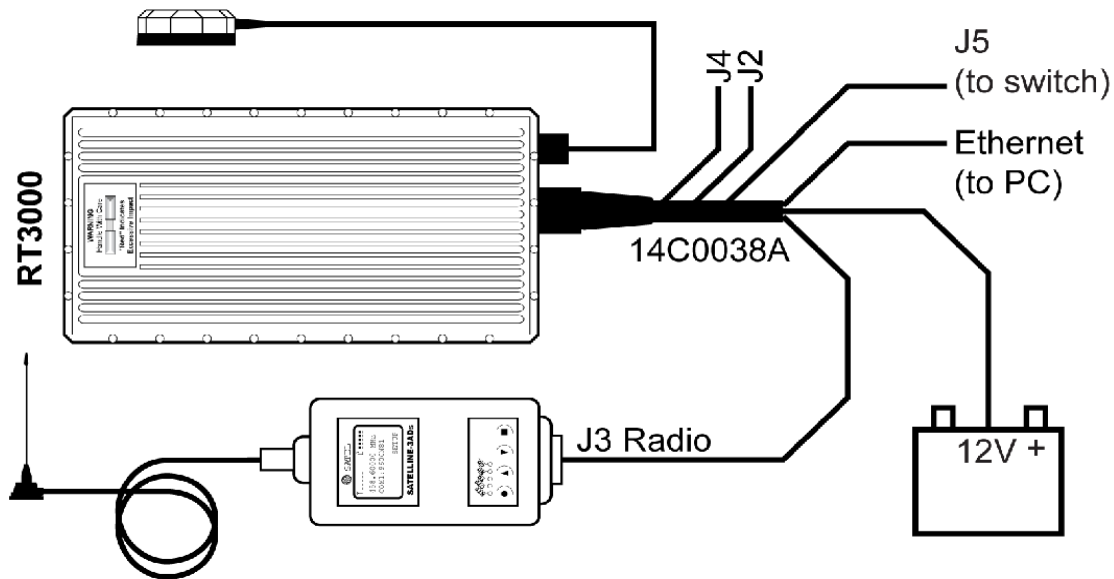

Note: The connection is shown here with the SATEL radio option. The Freewave and other radio options are similar.

The RT will need to be configured correctly for use on the Survey Trolley. Table 9 lists the critical configuration parameters that should be used with the Survey Trolley. Other parameters can be left at the default values.

**Table 9. RT Configuration on the Survey Trolley**

Parameter	Setting
Orientation	Default settings: y-axis right; z-axis down
Primary Antenna	Behind 0.230; left 0.075; above 1.520; overall accuracy 0.01
Dual Antenna	No
Initialisation Speed	1 m/s
Displace Output	Ahead 0.125; right 0.105; below 0.095

This configuration sets the measurement point for the survey at the centre of the wheel contact patch for the front right wheel of the Survey Trolley. It is normally easier to survey using a wheel as a marker rather than a point on the Survey Trolley.

A suitable configuration for the Survey Trolley is installed in the folder:

C:\Program Files (x86)\OxTS\RT-Range\Survey Trolley

This can be installed using NAVconfig.

To initialise the RT on the Survey Trolley push the Survey Trolley in a forward direction at a speed exceeding 1 m/s. You should be going straight when the RT initialises. Afterwards you should make some turns, accelerate and brake so that the RT can estimate some of the errors in its sensors.

The battery recommended for use with the Survey Trolley is a lead-acid battery. This should be kept in a charged state; it should be recharged immediately after each use. Lead-acid batteries tend to degrade if left in an uncharged state.

To charge the battery, connect the charger to the battery and plug the charger into the mains. The light on the charger will indicate green when the battery is fully charged. The charger can be left on the battery at all times when the battery is not in use.

Lead-acid batteries require special disposal in most countries. To dispose of the battery take it to the appropriate waste disposal place.


## Software

RT-Range software consists of five modules. These are:

1. Feature Point Survey – Only accessible if you have the V2L feature code enabled
2. Lane Survey – Only accessible if you have the V2L feature code enabled
3. Map Creation
4. Real-Time Display
5. Post Processing

Figure 11 shows the Initial Page of the RT-Range Software.

**Figure 11. Initial page of RT-Range software**

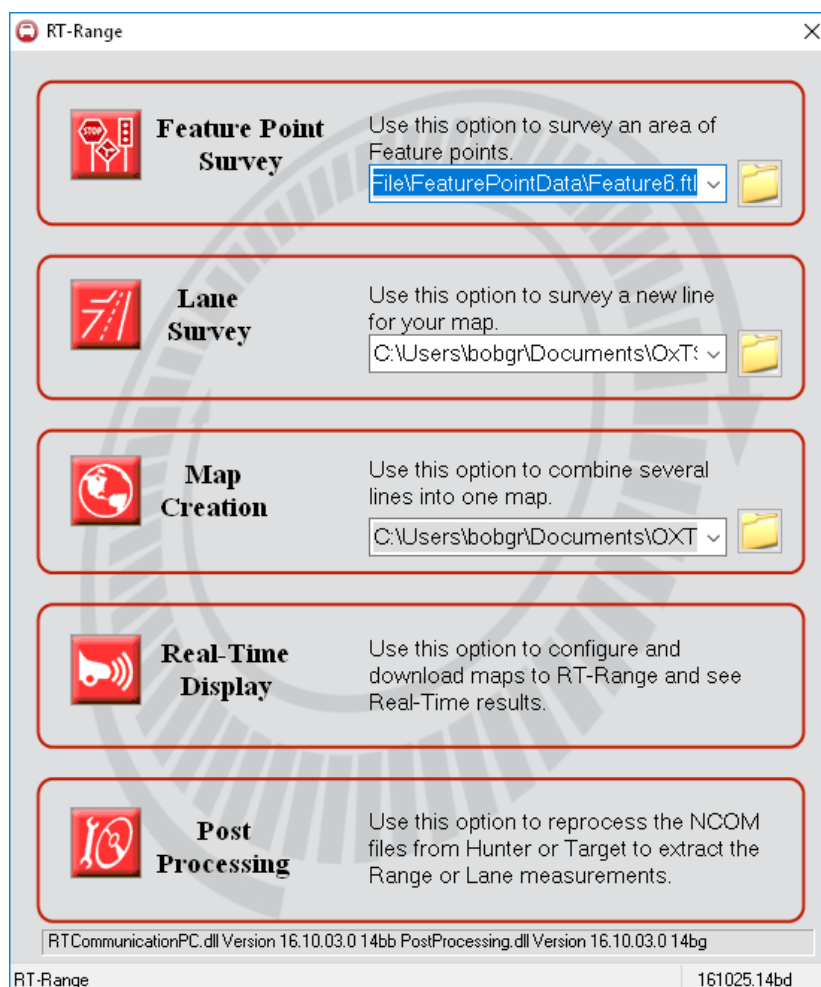

**Feature Point Survey.** The Feature Point Survey Wizard is used to quickly build Feature point files using information from a live RT. Up to 65,000 Feature points can be contained in a single file. The main window of the Feature Point Survey Wizard shows each Feature point and can be used to edit the properties of each point. Once complete, a Feature point map can be uploaded to the RT-Range S.

**Lane Survey.** The Lane Survey Wizard is used to survey the lane markings on the road. Several lines are used to generate a map. Each line file has an RTRL extension and consists of GPS information such as latitude, longitude, altitude, number of satellites and measurement accuracy. The main window of the Lane Survey Wizard will show the position and orientation of added points. It also updates the current position and orientation in real time using the measurements from the RT.

**Map Creation.** The Map Creation Wizard creates maps using the line files that have been recorded using the Lane Survey Wizard. This wizard gives the flexibility of adding new points to a line, deleting points from a line or changing the position of the point on the map using the mouse. Lines added to the map can be deleted from the map and the order of points in the line can be reversed so that surveys conducted in reverse make sense. A map file may contain up to eight lines. The file extension for the map files is RTRM. Using the Map Creation Wizard you can add the start line to the map.

**Real-Time Display.** Once the map files are created the Real-Time Display can be used to download the map files and Feature point files to the RT-Range, configure other RT-Range settings and display the RT-Range measurements in real time. RT-Range measurements can be stored to files using the Real-Time Display.

**Post-Processing Wizard.** The Post-Processing Wizard can be used to reprocess the NCOM files from the hunter vehicle and target vehicles for range measurements; use a map file for lane position measurements and/or use Fixed point file for Fixed point range measurements. The lane and range measurements are saved in a CSV file format. The Post-Processing Wizard can also be used to convert the binary files stored by the Real-Time Display into CSV format.

### PC configuration

The RT-Range software communicates with RTs using Ethernet. For this communication to work, the Ethernet of the PC must be configured correctly.

The PC should have an IP address in the range 195.0.0.2 to 195.0.0.9, or any other Ethernet address on this network that is not used. The subnet mask should be 255.255.255.0.


The RT-Range software needs to open Ethernet port 3000 to communicate with the RT in the hunter (or target) vehicle. This port can only be opened by one application at a time; if any other application is running and has the port open then the error message in

Figure 15 will be shown. For the RT-Range software to operate correctly the other application must be closed.

OxTS has a utility that can be installed on a computer so that the data from each RT can be shared. Contact OxTS support to use this utility.

**Figure 12. Connection error message**

---

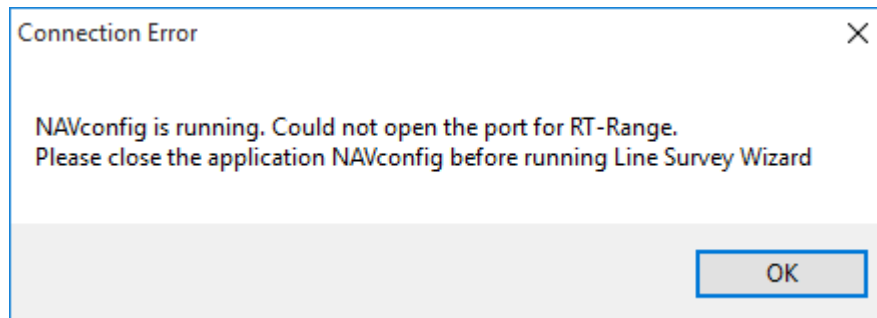

### Anti-virus software

Many anti-virus or firewall programs will block the ports and they give no indication that they are doing so. If you are not receiving data from the RT or RT-Range S then the most likely problem is any anti-virus software. In large companies the anti-virus software is hidden and the users do not even know it is there. It is very hard to debug such systems.

The first time some OxTS applications are run, a firewall warning message like that shown in Figure 13 may be triggered. This is because the program is attempting to listen for, and communicate with, OxTS devices on the network. The firewall must be configured to allow each program to talk on the network, or programs will not work as intended.

**Figure 13. Windows Firewall warning message**

Ensure both Private and Public networks are selected so the software can continue functioning when moving from one type to another.


### Feature point Survey Wizard

The Feature point Survey Wizard is designed to allow you to quickly and efficiently create Feature point files using the real-time position information being output by an INS. Points can be created in response to an input trigger, a button press in the RT-Range software, or at regular time/distance intervals. Each new point is automatically numbered, and is fully defined using the current lat/lon, altitude and heading.

Feature point Surveys conducted over large areas can be carried out swiftly by mounting an INS in a vehicle, and applying a displaced output to the INS. The displaced INS output should relate to a marked position on the vehicle perimeter, such as the front bumper. The driver can then simply drive up to points of interest until the displaced output point is touching the object, then fire a trigger to create a Feature point. All data points can be manually edited at creation time, or afterwards if it's not possible to drive directly to the desired location. Once saved, Feature point files can simply be uploaded to an RT-Range system.


To open the Feature point Survey Wizard, click  on the RT-Range Initial page shown in Figure 14. The Feature point Survey Wizard's main window is shown in Figure 17.

**Figure 14. Feature point Survey Wizard window**

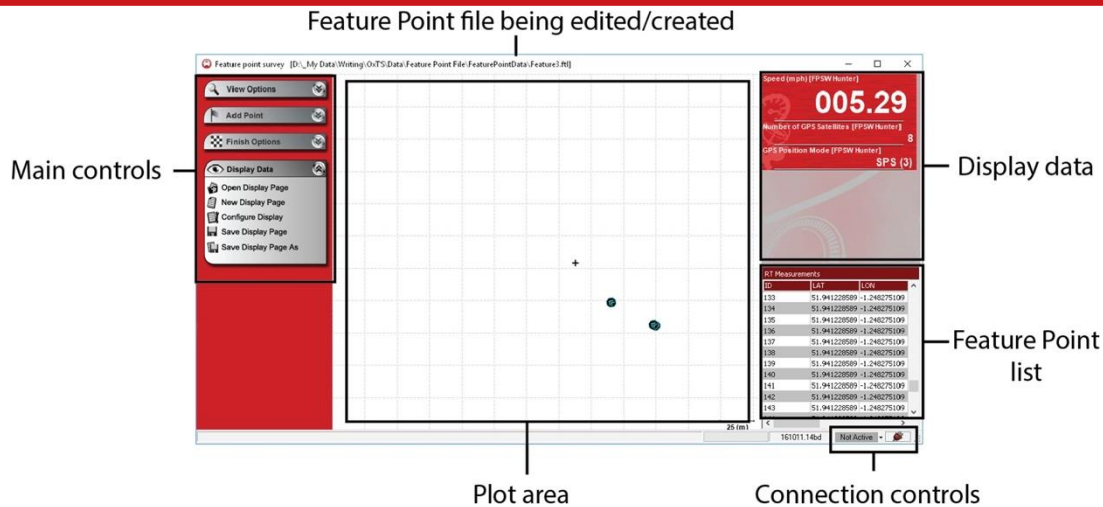

The Feature point file that is being edited is shown at the top in the window's title bar. Upon opening the Feature point Survey Wizard, any Feature points already present in the Feature point file are loaded into the plot area and shown in the Feature point list.


#### *Creating Feature points using real-time measurements*

1. Choose an INS to supply the real-time measurements. This is done via the 'connection controls' in the bottom-right corner of the Survey. Click  to open the NAVconnect window, then select 'Enable' next to the INS product you wish to use.

The easiest way to create Feature points is to use an input trigger. The INS enabled in NAVconnect should have a trigger connected to its user cable and the relevant IO should be configured as an input trigger. If a physical trigger isn't connected to the INS, Feature points can be added by clicking the 'Add Point Here' button in the Add Point control.


2. Once an INS has been enabled, two things happen. First, an icon appears in the plot area to represent the current position, and second, any parameters in the upper-right display area will begin to update. The display area is configured using the Display Data controls in the main control area.
3. To create a new Feature point at the current location, either use the input trigger if connected or click the 'Add Point Here' button. An icon representing the Feature point



 is added. The direction of the arrow within the icon shows the heading. Immediately after a point is created it can be edited by pressing the 'Spacebar', which opens the Feature point editor (Figure 16).


- Feature points rarely follow a regular repeating pattern, but for instances where they do, it is possible to automatically create Feature points based on distance or time. This feature is also enabled via the Add Point control. Clicking on the 'Adjust Auto Add' button opens a settings window where the options can be configured. The Auto Add option can then be toggled on/off via the Add Point control.

**Figure 15. Adjust trigger options**

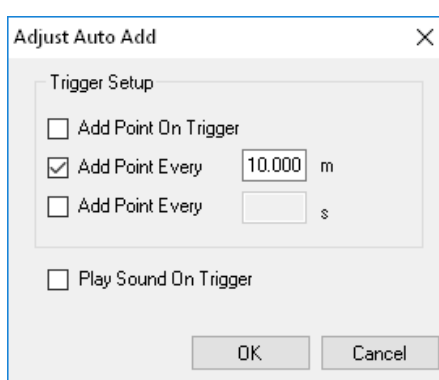

### Deleting Feature points


Feature points may be deleted one at a time. To delete a Feature point:

- Find the Feature point you wish to delete in the Feature point list (RT Measurements), then right-click on the relevant entry.
- Select 'Show this point (x) on the graph'. The plot area will change to show the selected Feature point, which will be highlighted using the edit icon . Right-click on the selected point and choose 'Delete this point'.

### Editing Feature points

Once created, the properties of any Feature point can be edited by double-clicking on the Feature point in the plot area; this brings up the Feature point editor window shown in Figure 16.

**Figure 16. Feature point editor window**

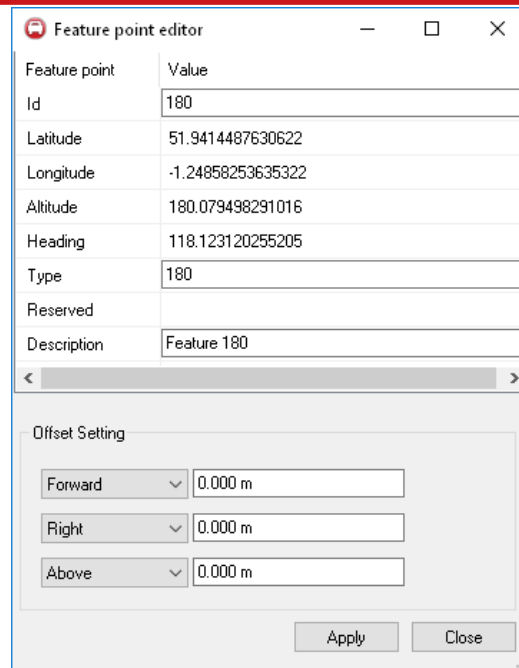

The screenshot shows a window titled "Feature point editor" with a table of fields and an "Offset Setting" section.

Feature point	Value
Id	180
Latitude	51.9414487630622
Longitude	-1.24858253635322
Altitude	180.079498291016
Heading	118.123120255205
Type	180
Reserved	
Description	Feature 180

Below the table is a horizontal scrollbar. Underneath is the "Offset Setting" section, which contains three rows of controls:

- Forward: [Dropdown arrow] [0.000 m]
- Right: [Dropdown arrow] [0.000 m]
- Above: [Dropdown arrow] [0.000 m]

At the bottom right of the window are "Apply" and "Close" buttons.

The *Id* and *Type* are numeric-only values that are used to identify Feature points. Unlike the Description value, which is only used locally, the Id and Type values are transmitted via CAN. Ideally, the Id value should be unique in the Feature point list. It is not necessary for Id numbers to increment sequentially. The Type parameter can be used to identify groups of Feature points. For example, all stop signs might be assigned a Type value of 3.

### Offset Setting

Using the displaced output feature in the INS configuration, it's possible to define a point on a vehicle's perimeter, and to create new Feature points by driving directly up to them. When the new Feature point is created, the lat/lon and altitude values will match the displaced output instead of the IMU measurement origin. However, there will be occasions where it is not possible to drive directly up to the Feature point's location. In this case the Offset Settings can be used to apply an additional offset, in order to make the Feature point. Note these offsets are applied in addition to any displaced output.

## Main controls

### *View Options control*

**Figure 17. View Options control in the Feature point Survey Wizard**



This menu allows you to zoom in or out and pan the map.


**Zoom+.** The maximum zoom level is a 1 metre grid square.


**Zoom-.** The minimum zoom is a 1000 metre grid square.

**Pan.** The pan options allow the user to pan the map to the left, right, up or down. If the user clicks on *Reset*, the map is redrawn centred on the current location given by the INS.

### *Add Point control*

**Figure 19. Add Point control in the Feature point Survey Wizard**

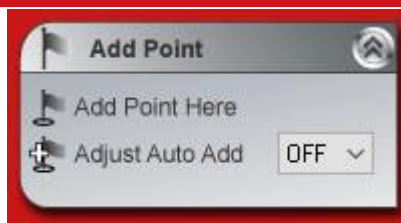

**Add Point Here.** Adds a point using the current lat/lon, heading and altitude information from the INS that is enabled in NAVconnect via  in the connection controls.

**Adjust Auto Add.** Opens the Adjust Auto Add window, which allows Feature points to be created automatically based on time or distance. An On/Off option allows the feature to be quickly toggled.

### Finish Options control

**Figure 18. Finish Options control in the Feature point Survey Wizard**



**Save And Quit.** Clicking this button opens the Save Feature points to file window, where a file description and feature file number can be entered. The file number is encapsulated in the RCOM stream to identify Feature point files, as text descriptions are not available. Upon leaving this window the Feature point Survey Wizard will close.

**Save And Start New Survey.** Clicking this button saves and closes the currently open Feature point file, and creates a new Feature point file with an incremental file name. You will be prompted to enter a description and file number.

### Display Data control

**Figure 20. Display Data control in the Feature point Survey Wizard**



The Display Data control is used to load, configure and save templates for the real-time data display panel located in the upper right-hand corner of the Feature point Survey Wizard. Clicking the 'Open Display Page' button opens a window allowing you to navigate to previously saved templates (\*.RTGL).

By default, the first data display is docked to the main Feature point Survey Wizard window, however more data display windows can be created if required. Clicking the Configure Display window opens the tabbed Configure Display window where the contents and appearance of each display window can be controlled.

**Note:** Measurements can only be added to display windows when an INS has been 'enabled' in NAVconnect.

### Lane Survey Wizard

The Lane Survey Wizard is used with an RT that is mounted on a trolley, such as the Survey Trolley option. It is also possible to survey the lines with the RT in a car but it is very hard, if not impossible, to drive the car along the lane markings accurate to 2 cm or better. The quality of the driving, or how the trolley is pushed, will directly affect the performance of the lane position measurements. The Line Survey software is not designed to add more than one point per second, so car-based surveys will need to be driven slowly or have a large gap between the line points.


Before attempting to use the Lane Survey Wizard module the user must set up the RT on the Survey Trolley. The RT needs to be initialised and operating correctly. Waiting for the warm-up period is not strictly required but the RT will be able to smooth GPS jumps if it is allowed to warm up correctly and if it is given some motion during the warm-up period. More information is given in the Survey Trolley section.

#### *Overview*

The Lane Survey Wizard has four parts to its screen: the menus, the map, the RT measurement viewer and the spreadsheet viewer.

On the left-hand side are the menus and buttons that control the software. In the middle is a map that displays the current position and the position of points that have been added to the line. In the top-right corner is the RT measurement viewer; this can be configured to show measurements from the RT such as velocity, heading, GPS position mode, number of satellites and other measurements useful when surveying. In the bottom-right is the spreadsheet viewer, showing numerical values for the points that have been added to the line.

**Figure 21. Main screen of the Lane Survey Wizard**

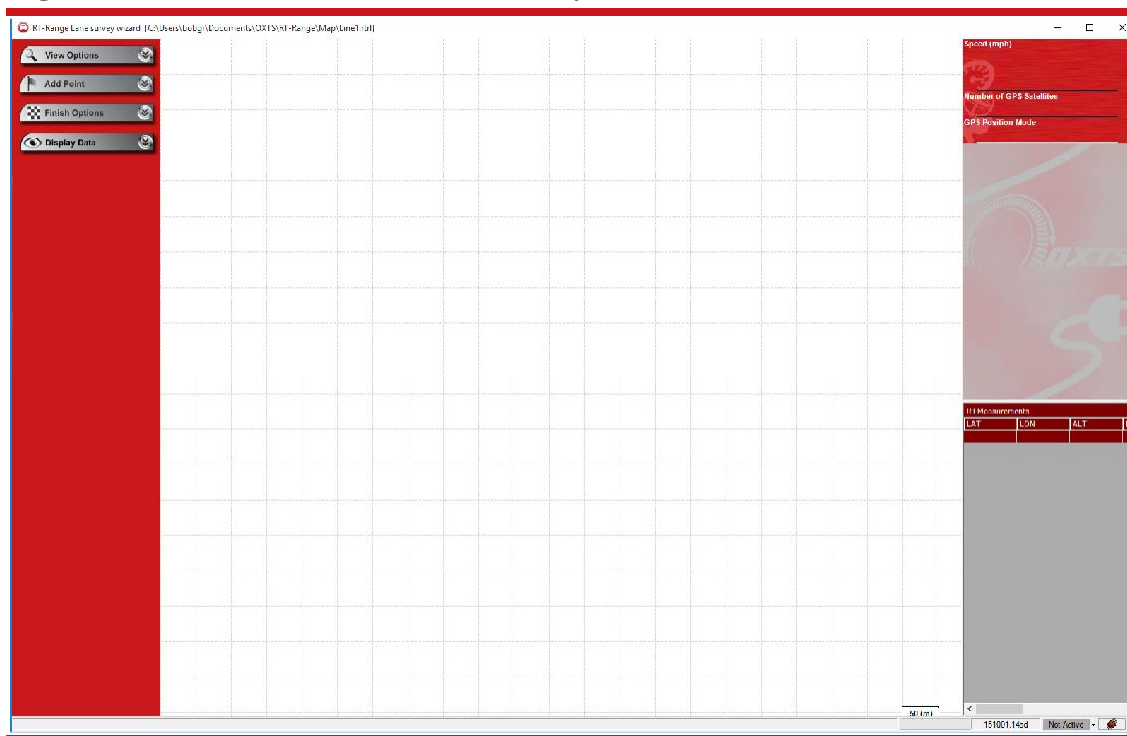

### *Selecting a line filename*

Before running the Lane Survey Wizard, the file that will be used to record the line can be selected on the initial page of the RT-Range software; see Figure 14.

We suggest you put all the line files from one survey in their own directory and name the files Line1, Line2, Line3, etc. By putting a number at the end of the filename, the Lane Survey Wizard will automatically increment the number when you come to survey the next line.


### *Connecting to the RT*

The Lane Survey Wizard will accept data from any RT system on the network. The Lane Survey Wizard will work with multiple RTs on the network as long as the user applies the filter by selecting the relevant RT in the software. This is done using the NAVconnect window.

The NAVconnect window allows you to connect the relevant RT to the Real-Time Display. It can also pass the personalised Association tag and Tag id data onto the Real-Time Display item for personalised reference against each device. The NAVconnect window is described in the Connection configuration using the NAVconnect window and Associations and tags section of this manual.

If you are using the hunter vehicle for a quick survey, then you may have more than one RT on the network at a time. To choose which RT is used for the line survey, click on the connection icon in the bottom-right corner as shown in Figure 22; this will open the NAVconnect window.

**Figure 22. Connection icon in the RT-Range Line Survey status bar**

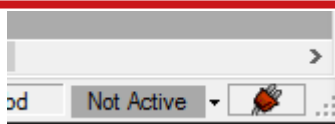

In the NAVconnect window, enable the RT that you want to use by identifying the device against the IP address, then click *Enabled* as shown in Figure 23.

**Figure 23. IP addresses RT-Range NAVconnect window**


[illegible]

The Tag id and Association tag can be renamed to pass through a personalised name to the display.

### Add Point option menu

This menu controls how the points are added to the line file. The Add Point menu is shown in Figure 24.

**Figure 24. Add Point menu of the Lane Survey Wizard**

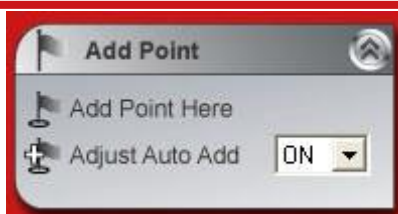


**Add Point Here.** The ‘*Add Point Here*’ menu allows you to add a point to the map at the current point. This can be used as a manual method of adding points; it can be used

to add a point when the auto add feature is off or it can be used to add special points in between the points that are automatically added.

**Adjust Auto Add.** The *Adjust Auto Add* menu allows you to add points without interacting with the laptop. This can be easier to use on a trolley in bright sunlight than the laptop mouse. Figure 25 shows the options for the Auto Add Trigger.

**Figure 25. Adjust trigger options of the Lane Survey Wizard**

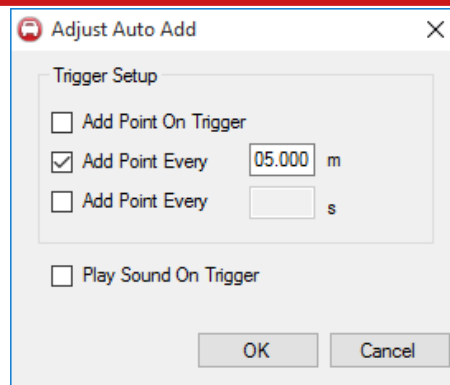

**Add Point On Trigger.** When this option is selected the Lane Survey Wizard will add a point when a trigger is sensed on the RT's Event Input.

**Add Point Every (distance).** When this option is selected the Lane Survey Wizard will add a point after the specified distance is travelled by the RT. This is the most common option.

**Add Point Every (time).** When this option is selected the Lane Survey Wizard will add a point periodically, such as once per second.

**Play Sound On Trigger.** When this option is selected the Lane Survey Wizard will play a sound to indicate that a new point has been added. This is useful since it is often hard to look at the computer while concentrating on the path of the trolley.


A dropdown list is provided so that the Auto Add Trigger can be turned on or off quickly. When the option is *Off* then the Auto Add Trigger is disabled and points are not added automatically.

#### *Finish Option menu*

The Finish Option menu allows the user to save the line file and quit the Lane Survey Wizard or save the line file and start a new line file. The Finish Options are shown in Figure 26.




**Figure 26. Finish Options of the Lane Survey Wizard**

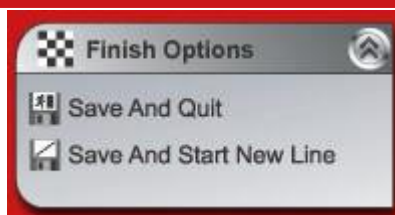

**Save And Quit.** This option saves the current line file and returns to the initial screen of the RT-Range software.

**Save And Start New Line.** This option will save the current line file and start a new line file. The line filename automatically increments; for example, if the current filename was “Line1.rtl” then it will set the new filename “Line2.rtl”. If the current filename does not consist of an incremental number then the software will prompt for the name for the next file, as shown in Figure 27.

**Figure 27. Next Filename dialog of Lane Survey Wizard**

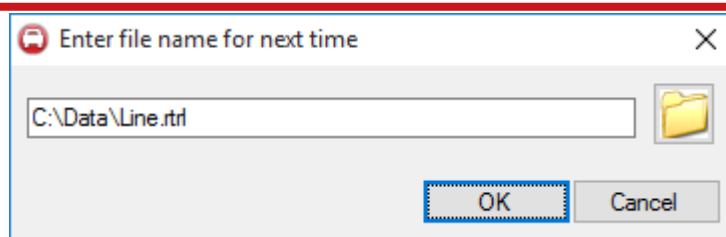

## Display Data menu

This menu allows the user to change the items displayed in the RT measurement viewer. Pages can be saved and loaded or items can be added to the display.

**Figure 28. Display Data options of the Lane Survey Wizard**




**Open Display Page.** This option can be used to load a page that has been previously saved using the *Save Display Page* or *Save Display Page As* options. The extension for the Display Page files is RTGL.


**New Display Page.** This option clears the screen of all the display items.

**Configure Display.** This option is used to add Display Items to the RT measurement viewer. The user can also choose to have multiple windows each showing different measurements. After clicking **Configure Display**, the user can select the required measurements and the number of windows. By clicking 'Add window', the user can add more windows and name them appropriately, as shown in Figure 29.

**Figure 29. Add Windows in the Configure Display window**

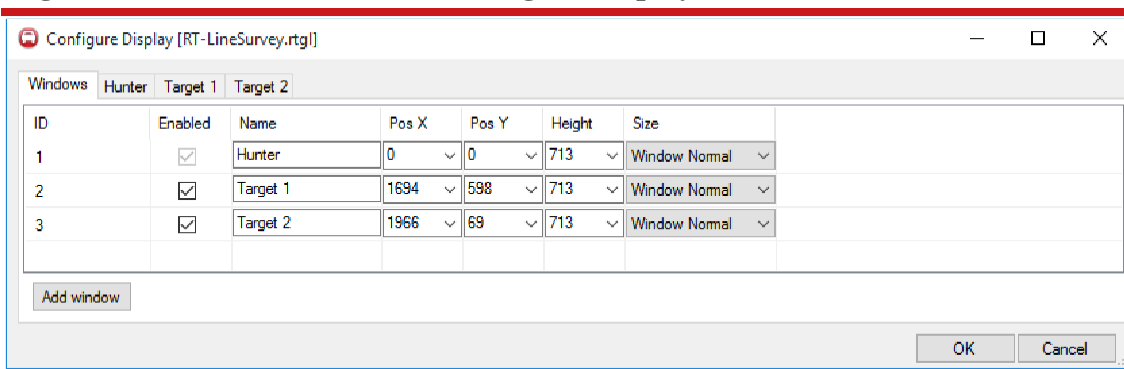

The user can specify the measurements displayed in each window as shown in Figure 30, and described in Table 10.

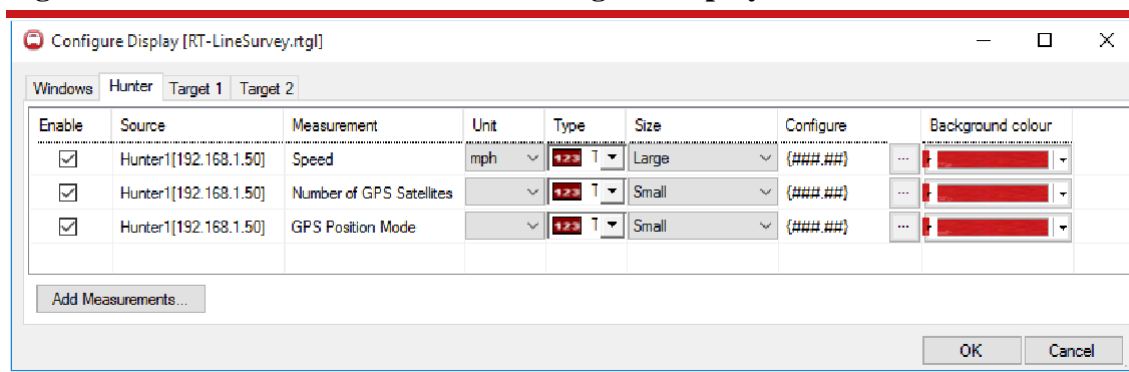**Figure 30. Add Measurements in the Configure Display window****Table 10. Configure Display window descriptions**


Column	Description
Enable	Enabling this check box allows you to display/hide this measurement on the display window
Source	Decoded data provided by the RT-Range or INS system (physical source such as hunter car etc.)
Measurement	Description of the measurement set for the display control
Unit	Unit of measurement
Type	Display type (Text, Graph or Alert bar)
Size	The display control size can be Small, Medium and Large
Configure	Allows to set the properties of the display control format, limits, unit etc.
Background colour	Display control's background colour associate to the physical source colour i.e. red background colour is associated to a red car

There are three types of items that can be inserted: *Graphs*, *Text* or *Alert Bars*. The properties of these items can be set in this window, i.e. measurement unit, unit size, text format (Configure) and background colour. The background colour is useful for quickly identifying different types of measurements in the display.

Clicking '*Add Measurements...*' opens a new window where it is possible to select the required measurements for each individual window, as shown in Figure 31.

The Add Measurements dialog box makes it possible to find and add measurements to the Real-Time Display from any of the available measurements. All the measurement types available from each device are grouped by that device and its associated measurement categories. These are then displayed on the left side in a hierarchical tree structure. The individual measurements available to pick by those categories are displayed on the right. When a category is selected using the mouse or arrow key, all the measurements in the tree structure under that category are displayed.

**Figure 31. Add Measurements window**

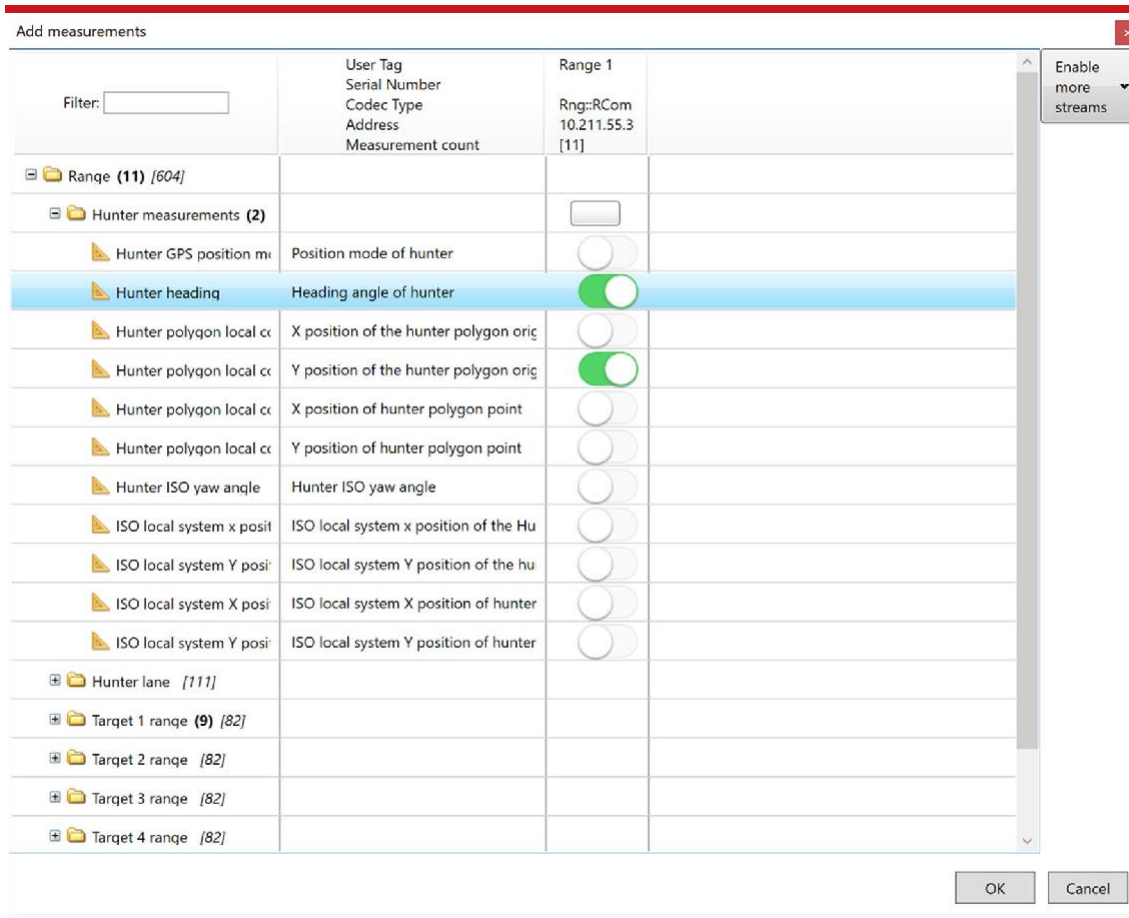


Filter:	User Tag Serial Number Codec Type Address Measurement count	Range 1 Rng::RCom 10.211.55.3 [11]
Range (11) [604]		
Hunter measurements (2)		
Hunter GPS position m	Position mode of hunter	<input type="checkbox"/>
Hunter heading	Heading angle of hunter	<input checked="" type="checkbox"/>
Hunter polygon local c	X position of the hunter polygon orig	<input type="checkbox"/>
Hunter polygon local c	Y position of the hunter polygon orig	<input checked="" type="checkbox"/>
Hunter polygon local c	X position of hunter polygon point	<input type="checkbox"/>
Hunter polygon local c	Y position of hunter polygon point	<input type="checkbox"/>
Hunter ISO yaw angle	Hunter ISO yaw angle	<input type="checkbox"/>
ISO local system x posit	ISO local system x position of the Hu	<input type="checkbox"/>
ISO local system Y posi	ISO local system Y position of the hu	<input type="checkbox"/>
ISO local system X posi	ISO local system X position of hunter	<input type="checkbox"/>
ISO local system Y posi	ISO local system Y position of hunter	<input type="checkbox"/>
Hunter lane [111]		
Target 1 range (9) [82]		
Target 2 range [82]		
Target 3 range [82]		
Target 4 range [82]		

OK Cancel

To select each measurement, choose the category folder followed by which measurements are ready for adding to the Configure Display window. You can select each measurement individually by clicking on the slider button, or by clicking the rectangular button above to select all. To find a measurement, enter your search phrase in the 'Find' text box at the top of the dialog box window. As you enter the search phrase, the Add measurements tool will automatically search through all the available measurements by measurement and description. The search can be restricted to a smaller subset by selecting a category of measurements rather than all the measurements in the file or files. Click 'Add' to complete and add your selections. You can add further measurements at any time by repeating this process.

Once a Display Item has been added to the Real-Time Display window, the user can change its properties by right-clicking on the item. This opens the Text Properties window shown in Figure 32. Please note that the background colour cannot be changed from within the Display Item properties box.

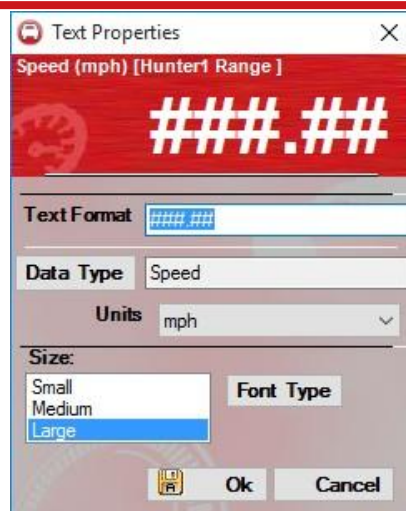**Figure 32. Display Item properties**

Display Items can be moved up and down by dragging and dropping them into the required position. Display Items can also be moved between different windows in the same way.

**Save Display Page.** This option saves the Display Page to the current file.

**Save Display Page As.** This option saves the Display Page to a new file.

#### *Spreadsheet Viewer*

This viewer is the spreadsheet at the bottom right of the window. It shows the points that have been added to the map in numerical format. Measurements of latitude, longitude, altitude, heading, north accuracy, east accuracy, down accuracy, number of GPS satellites and GPS position mode are shown. The user does not have the option to change the measurements properties of the spreadsheet. These are the measurements that are saved in the line file and used to generate the map.

### **Map Creation Wizard**

The Map Creation Wizard takes the line files made by the Lane Survey Wizard and assembles them into a map.

#### *Selecting a map filename*

Before running the Map Creation Wizard, the filename that will be used to save the map can be selected from the initial page of the RT-Range software; see Figure 15. We recommend you create the map file in the same directory as the line survey files as this


will make it quicker to select and add each line survey file. The filename extension for a map file is RTRM.

## Overview

The layout of the Map Creation Wizard is like the Lane Creation Wizard with the exception that the RT measurements are not present.


On the left-hand side are the menus and buttons that control the software. In the middle is a map that displays all the points on the lines that have been added. On the right is the spreadsheet viewer, showing numerical values for the points in the lines that have been added. Each line is shown in a tab. The tab contains a spreadsheet view of the line's measurements such as latitude, longitude, altitude and heading.

**Figure 33. Main screen of the Map Creation Wizard**

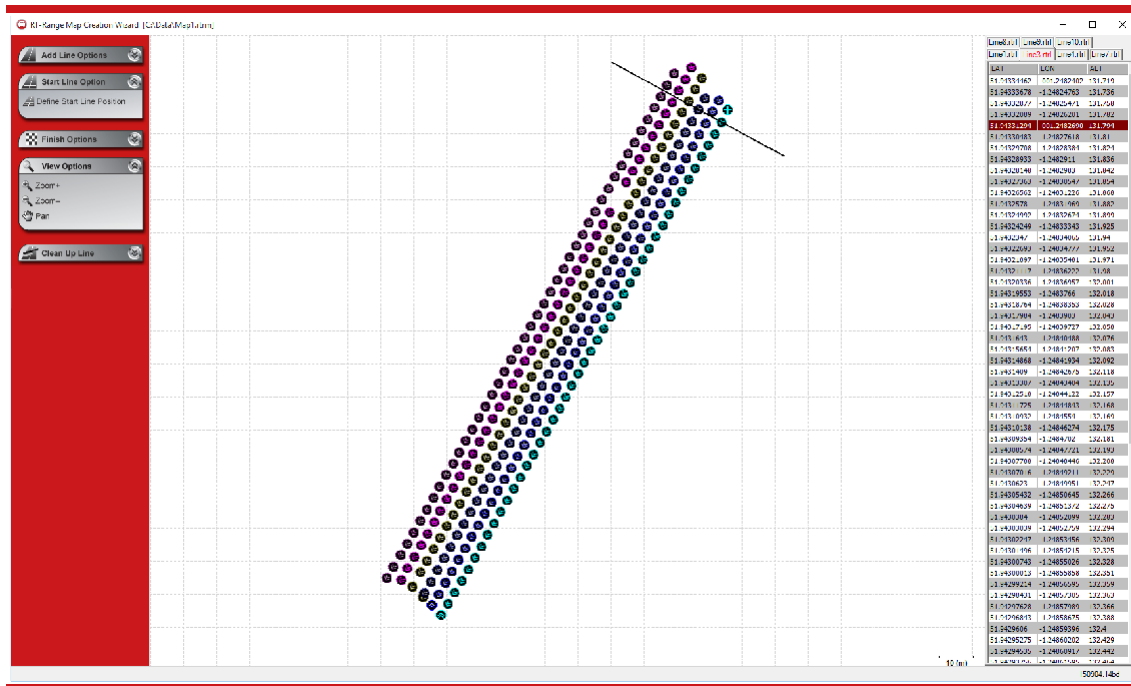


## Add Line Options

The Add Line Options menu allows the user to add additional line files to the map. Figure 34 shows the Add Line Options of the Map Creation Wizard.

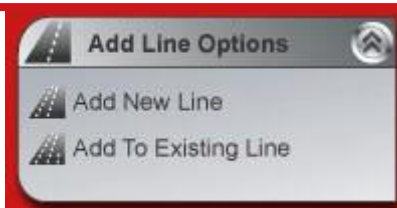
**Figure 34. Add Line Options of the Map Creation Wizard**

**Add New Line.** This option is used to add a new line to the map. From the Open File dialog box select a new line file with an RTRL extension. After the line is selected the *Add Line Options* dialog box will appear. The line can be added in the forward (or normal) direction or in the reverse direction (i.e. the line was surveyed starting at the end and finishing at the start). Figure 35 shows the *Add Line Option* dialog box.

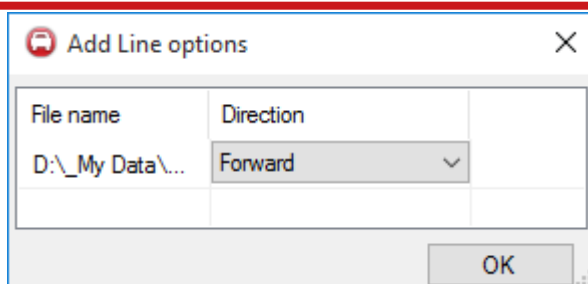**Figure 35. Add Line Options of the Map Creation Wizard**

Users can also select multiple line files and add them to the map by selecting the line files from Windows Explorer and dragging and dropping them onto the map as shown in Figure 36.

**Figure 36. Add Multiple Line Files to the Map Creation Wizard**

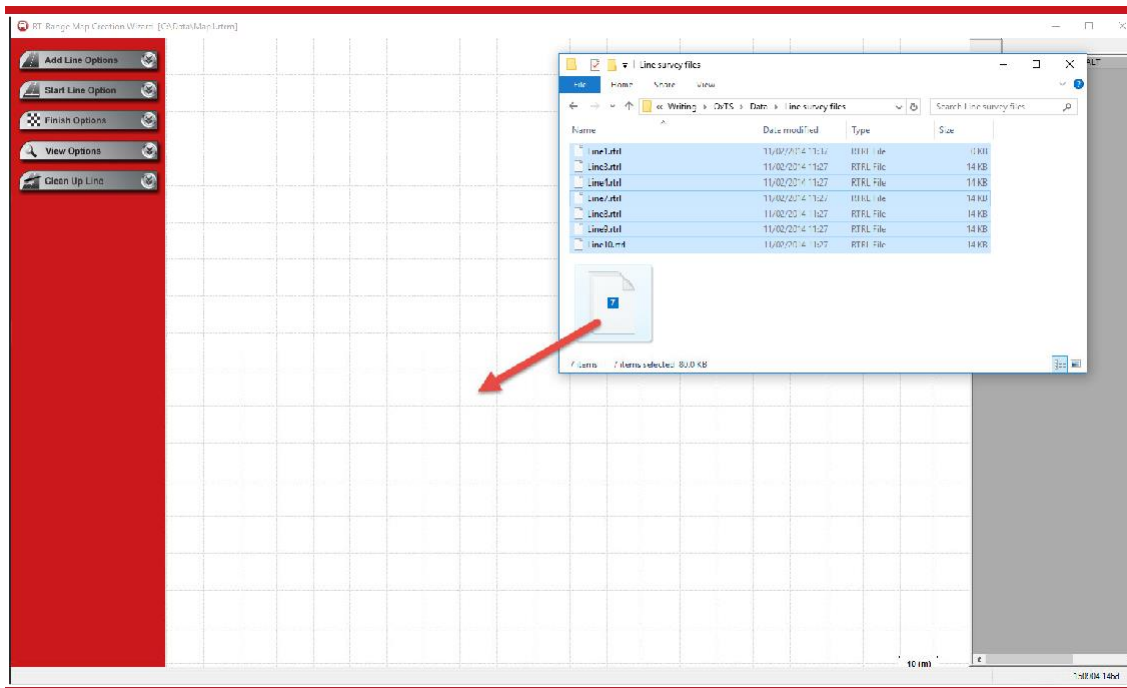

**Add to Existing Line.** This option is used to add one line to another line on the map. The new line will be added to the end of the existing line; there is no way to add the new line to the start of the existing line, so the lines must be added in the correct order. New lines can be added in forward or reverse directions.

#### *Start line option*


The RT-Range lane position measurements start when the vehicle crosses the start line. This reduces the real-time search requirements of the RT-Range and enables the RT-Range to have maps with crossing lines.

It is essential to set the position of the start line before the start line options can be set. The start line is based on one of the points at or near the start of one of the lines (normally the central line).

To add a start line, first select a point on the map by double-clicking the point. In the spreadsheet viewer, the point will be highlighted. Right-click the highlighted point in the spreadsheet viewer and select *'Set Start Line from this point'*, as shown in Figure 37. Now the start line is set and will be drawn on the map display.



Figure 37. Setting the start line in the Map Creation Wizard

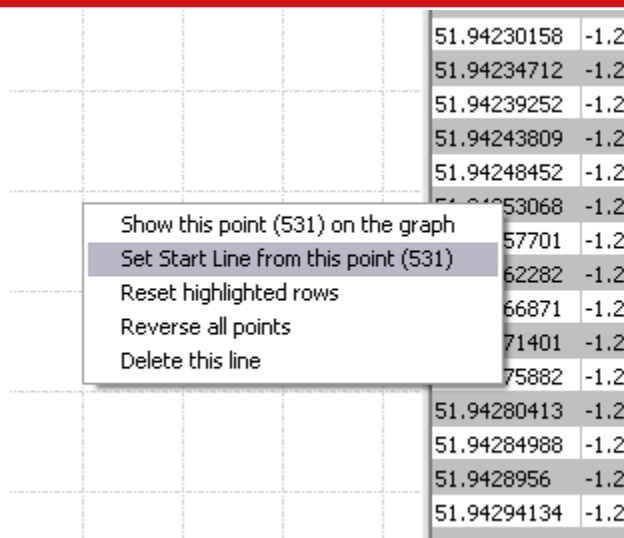


51.94230158	-1.2
51.94234712	-1.2
51.94239252	-1.2
51.94243809	-1.2
51.94248452	-1.2
51.94253068	-1.2
51.94257701	-1.2
51.94262282	-1.2
51.94266871	-1.2
51.94271401	-1.2
51.94275882	-1.2
51.94280413	-1.2
51.94284988	-1.2
51.9428956	-1.2
51.94294134	-1.2

Note that the start line is directional and will only trigger in the direction of the map.

**Define Start Line Position.** Once the start line has been set, the ‘*Define Start Line position*’ option allows the user to change the start line width.

Figure 38. Setting the start line in the Map Creation Wizard

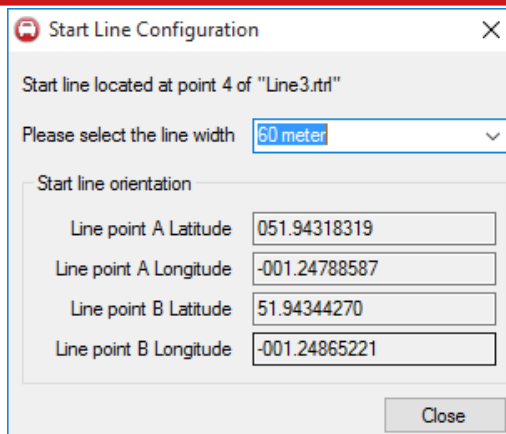

Start Line Configuration

Start line located at point 4 of "Line3.rtl"

Please select the line width: 60 meter

Start line orientation

Line point A Latitude: 051.94318319

Line point A Longitude: -001.24788587

Line point B Latitude: 51.94344270

Line point B Longitude: -001.24865221

Close

### Finish Options

This menu has options to save the map file. Note that map files cannot be saved until a start line has been set.

**Save.** This option saves the map file to the last file that was saved. This will be the file specified in the initial page of the RT-Range software or the last file that was specified using the ‘Save As’ option.

**Save and Quit.** This option performs a *Save* (i.e. to the last file) and then returns to the initial page of the RT-Range software.

**Save As.** This option saves the map file to a new name. Enter the new name in the Save As dialog box that appears.

#### *View Options*

This menu allows you to zoom in or out and pan the map as shown in Figure 20, above. It behaves in the same way as the *View Options* in the Lane Survey Wizard.

**Zoom+.** Click on the *Zoom+* to zoom in to the map; the maximum zoom level is a 1 metre grid square.

**Zoom-.** Click on the *Zoom-* to zoom out of the map. The minimum zoom is a 1000 metre grid square.

**Pan.** The pan options allow the user to pan the map to the left, right, up or down. If the user clicks on the ‘Reset’ of the pan option, then it redraws the map so that the whole survey fits within the window. The keyboard arrow keys can also be used to pan the map.


#### *Clean Up Line*

When surveying using the Lane Survey Wizard you may add some points incorrectly, for example too close together. The Clean Up Line tool identifies Lines that have undesirable points (from a calculation perspective) and steps the user through the process of tidying up the points.

There is some discussion in the Calculation details section on what makes a point undesirable and on the best way to survey lane markings.


Figure 39 shows the Clean Up Line menu.

**Figure 39. Clean Up Line menu in the Map Creation Wizard**

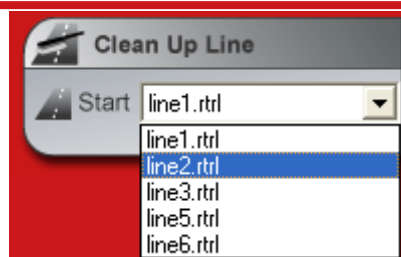

The Clean Up Line tool automatically identifies the lines that need some attention and only shows these in the dropdown list. To start the process of cleaning up a line, select the line from the dropdown list and click on 'Start'. This will display the Clean Up Line dialog box, as shown in Figure 40.


**Figure 40. Clean Up Line dialog box in the Map Creation Wizard**

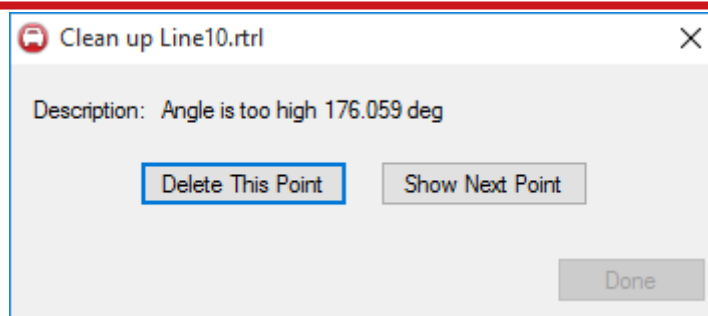

The Clean Up Line tool will zoom the map to a 1 m grid spacing automatically. Then it will highlight the point on the line that has violated the rules. The user has the option of deleting the point or moving to the next point.

The Clean Up Line tool will highlight the *first* point that violates the rules. This violation will be based on points that are both behind and ahead of the current point. It is not necessarily the first point that is wrong. Figure 41 shows a point that has been highlighted by the Clean Up Line tool. This point violates the rules because the angle to the next point is too large, i.e. the line is not straight enough. It is clear to the user that it is the next point that is in error and the current point should not be deleted. By clicking 'Show Next Point' the user can skip this point and move on to the next point.

**Figure 41. Clean Up Line example point**

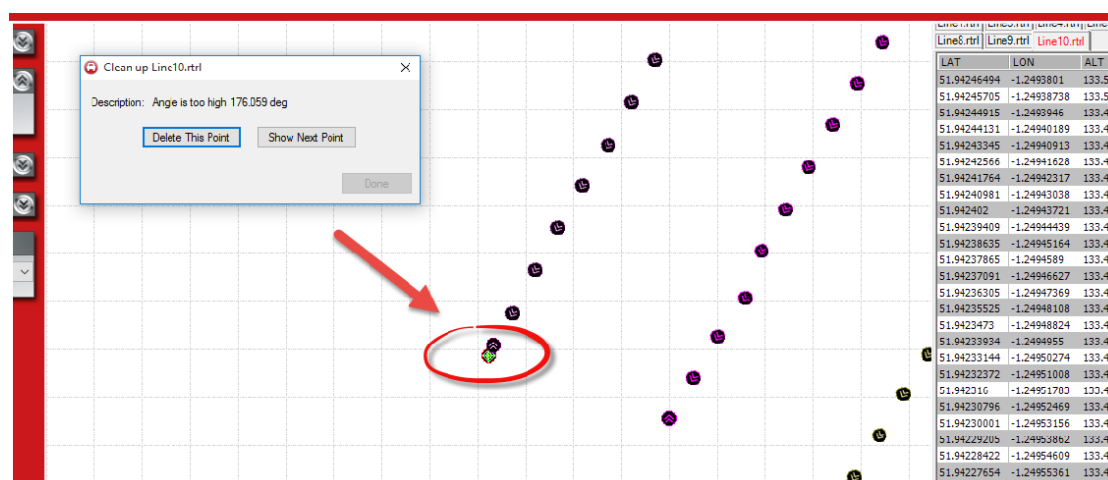


## Map View

The Map View shows all the points in all the lines. Within each point is an arrow showing the direction to the next point.

Points can be selected by double-clicking. Points that are selected appear highlighted in the spreadsheet viewer. Right-clicking on a selected point shows a menu, as shown in Figure 42.

**Figure 42. Map Point menu in the Map Creation Wizard**

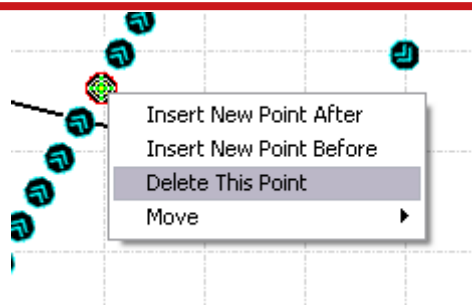

**Insert New Point After.** The *Insert New Point After* function inserts a point half way between the current point and the next point, i.e. further along the line.

**Insert New Point Before.** The *Insert New Point Before* function inserts a point half way between the current point and the previous point, i.e. not as far along the line.

**Delete This Point.** The *Delete This Point* function deletes the selected point.

**Move.** The *Move* function allows the user to move the selected point. It will move the selected point by 1 pixel on the grid. The value of 1 pixel changes depending on the grid size. The scale factors are shown in Table 11.

**Table 11. Scale factors for the move function**

Grid size	'Move' option shifts point by...
1.0m	0.02m
2.5m	0.05m
5.0m	0.10m
10.0m	0.20m
25.0m	0.50m
50.0m	1.00m
100.0m	2.00m
250.0m	5.00m
500.0m	10.00m
1000.0m	20.00m


### Spreadsheet viewer

The spreadsheet viewer shows numerical values for all the points in the correct order. Lines that are loaded in reverse will be shown with the last point of the line in the first row of the spreadsheet viewer.

Points that are highlighted on the Map View will be highlighted in the spreadsheet viewer.

By right-clicking on a row of the spreadsheet viewer, the spreadsheet pop-up menu will appear. This is shown in Figure 43.

**Figure 43. Map Point menu in the Map Creation Wizard**

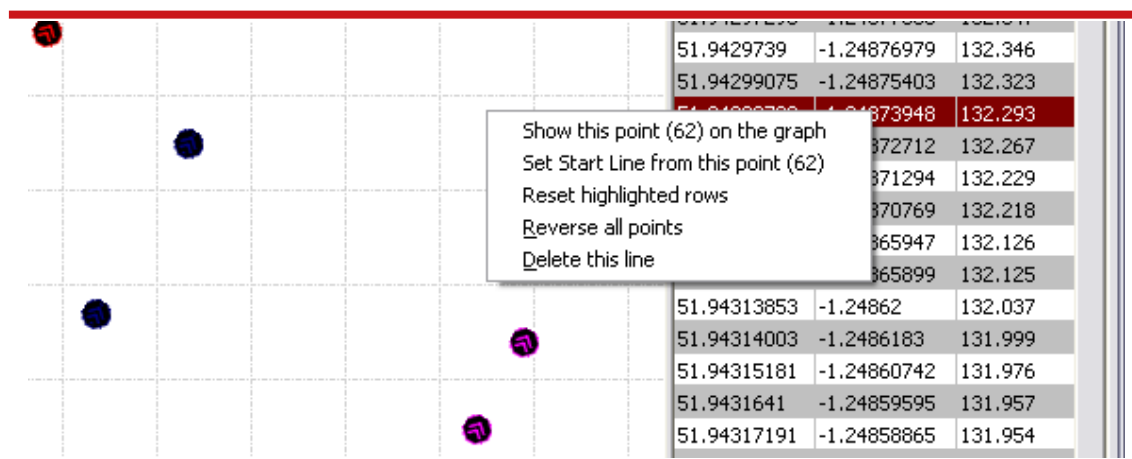

**Show this point (i) on the graph.** This function centres the point corresponding to the spreadsheet row in the map window and highlights (selects) it.

**Set Start Line from this point (i).** This function is used to set the point for this spreadsheet row as the start line. Once set, the user can adjust the start line options using the menu on the left.

**Reset highlighted rows.** This function is used to cancel the selection.

**Reverse all points.** This function reverses all the points in this line. To reverse the entire map each line must be individually reversed.

**Delete this line.** This function removes the line from the map.

## Real-Time Display


The Real-Time Display module can display real-time data, with a high update-rate, from a variety of sources. These include any of the RTs on the network and any associated CAN data – where the CAN acquisition feature has been enabled for the RT in that vehicle.

It is also used to download map files or Feature point files, set the fixed positions, set the ranging mode and configure the RT-Range hardware.

### Overview

The Real-Time Display window has two sections. On the left is the menu system and on the right are the measurements. Additional measurement windows can be opened and configured. The layout of the screen is shown in Figure 44.

**Figure 44. Layout of the Real-Time Display window**

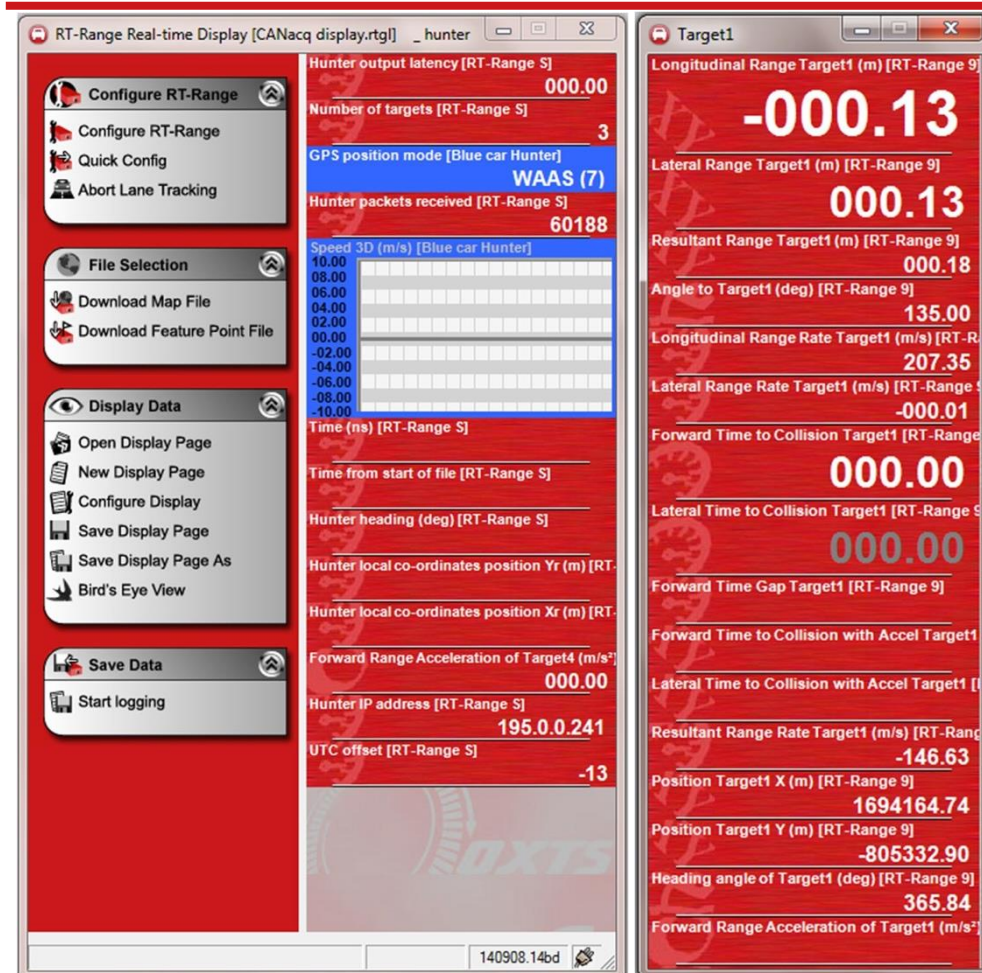

Note: The display items on the right-hand side can be changed; this is just a selection of the available measurements that can be displayed and what they can look like.

### *Configure RT-Range menu*

The Configure RT-Range menu is used to change the setup and operating mode of the RT-Range.

**Configure RT-Range.** This option is used to run the RT-Range Configuration Wizard. This wizard is used to set the more permanent parameters of the RT-Range and will probably only be used for a new installation in a vehicle. There are many parameters in the RT-Range Configuration Wizard and it is described in its own section later in this manual.

**Quick Config.** The Quick Config option is used to change some of the real-time settings of the RT-Range without rebooting. Options that can be changed using the Quick Config window include the lateral and longitudinal offset, range mode, Fixed point locations and the local co-ordinates used for the RT-Range. More details on the Quick Config are given in the section below.

**Abort Lane Tracking.** The RT-Range will continue tracking the lane position until the car drives past the final point on Line 1. The lane position measurement can be aborted early by clicking on this button.


It is not normally necessary to abort the lane tracking since the lane tracking will start from the beginning as soon as the start line is crossed. However, if you need to have negative distance along Lane1 before your test, then you may need to use this feature to cancel the current lane tracking before starting a new test.

### *RT-Range Quick Config*

The RT-Range Quick Config window can be used to modify some of the behaviour of the RT-Range without needing to reboot. Figure 45 shows the introduction window of the RT-Range Quick Config window.

From the Quick Config window, one of the options on the left-hand side needs to be selected. Each of these options is described below.

**Figure 45. RT-Range Quick Config introduction window**

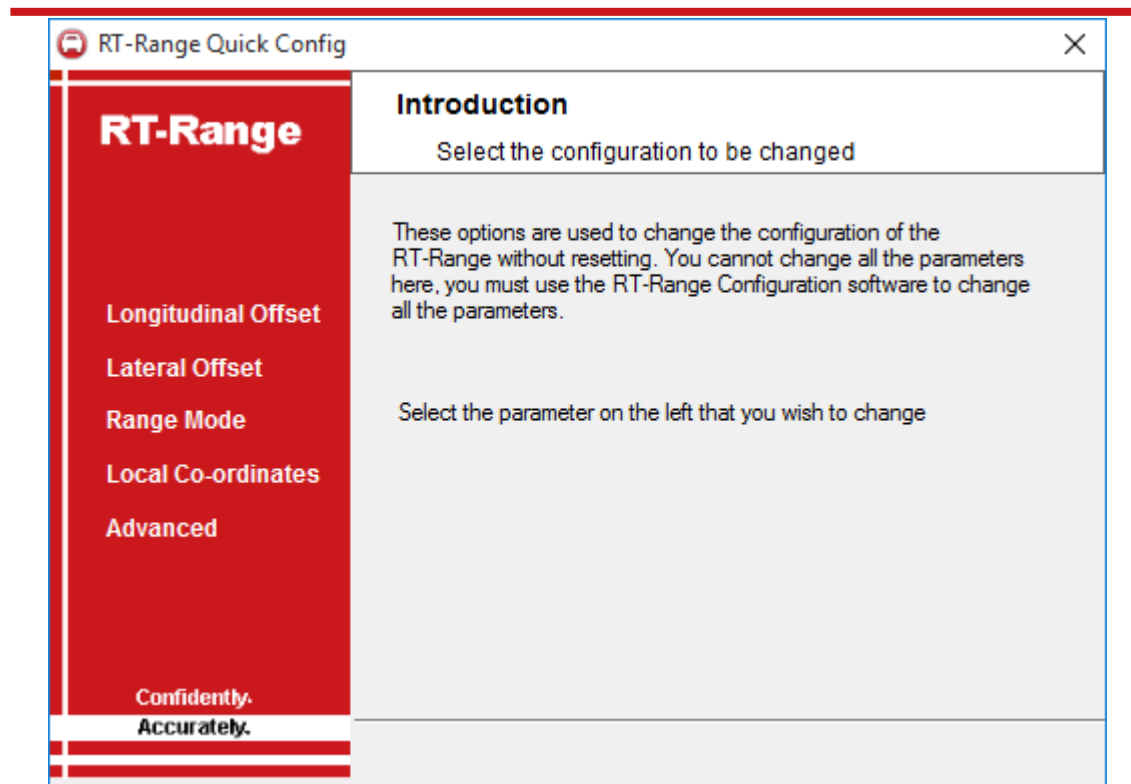


**Longitudinal Offset.** The longitudinal range of the RT-Range can be adjusted or offset to account for small errors in the configuration. This is not a substitute for measuring as accurately as possible; it is a quick technique for making small changes to the longitudinal range.

Clicking on **Longitudinal Offset** brings up the Quick Config window on the Longitudinal Offset page, as shown in Figure 46. There may be a short delay while the software reads the current settings from the RT-Range.



Figure 46. Longitudinal Offset in the Real-Time Display

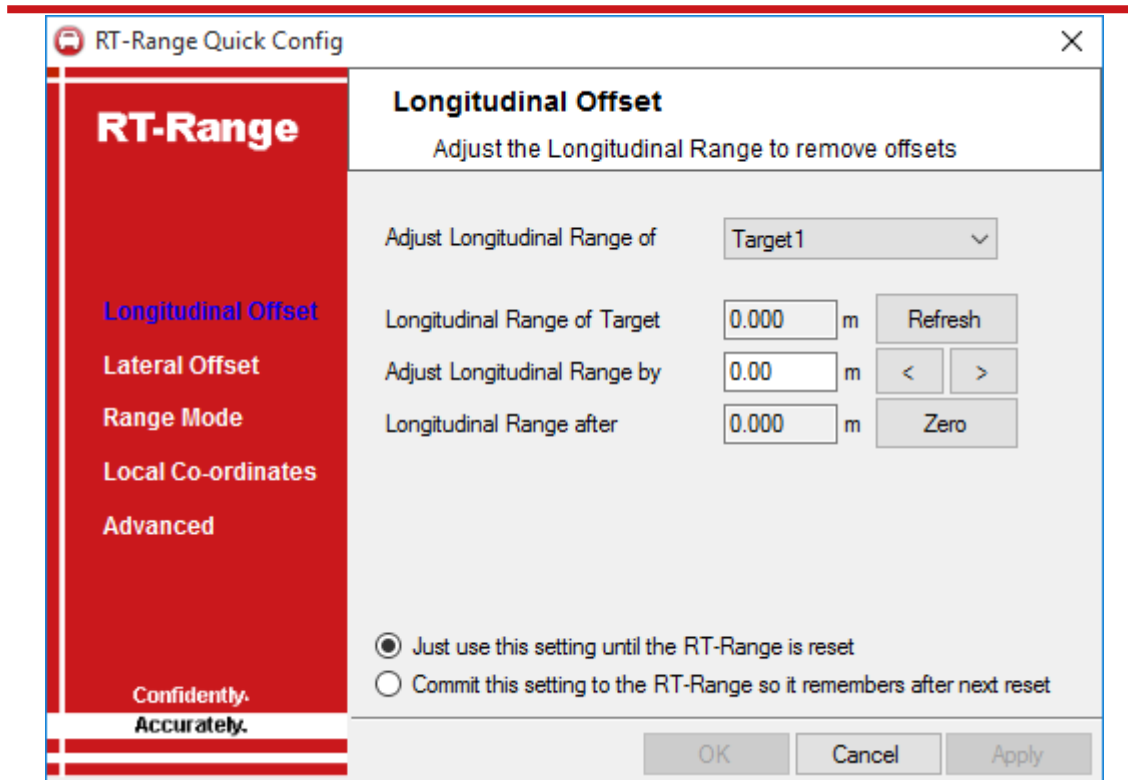

The screenshot shows the 'RT-Range Quick Config' window. On the left is a red sidebar with the 'RT-Range' logo and a list of menu items: 'Longitudinal Offset' (highlighted in blue), 'Lateral Offset', 'Range Mode', 'Local Co-ordinates', and 'Advanced'. At the bottom of the sidebar is the text 'Confidently. Accurately.' Below the sidebar is a horizontal bar with red and white stripes. The main window area is titled 'Longitudinal Offset' with the subtitle 'Adjust the Longitudinal Range to remove offsets'. It contains the following controls:

- 'Adjust Longitudinal Range of' with a dropdown menu set to 'Target1'.
- 'Longitudinal Range of Target' with a text box containing '0.000' and a unit 'm', followed by a 'Refresh' button.
- 'Adjust Longitudinal Range by' with a text box containing '0.00' and a unit 'm', followed by '<' and '>' buttons.
- 'Longitudinal Range after' with a text box containing '0.000' and a unit 'm', followed by a 'Zero' button.
- Two radio buttons at the bottom:
  - ☒ Just use this setting until the RT-Range is reset
  - ☐ Commit this setting to the RT-Range so it remembers after next reset
- At the bottom right are three buttons: 'OK', 'Cancel', and 'Apply'.

The display shows the current longitudinal range to the selected target. This is only refreshed when **Refresh** is pressed. To adjust the longitudinal range, enter the adjustment in the **Adjust Longitudinal Range by** edit box or use the < and > buttons to increment or decrement the value. The **Longitudinal Range after** box shows longitudinal range after the offset has been applied. To zero the longitudinal range press the **Zero** button.


After the adjustment has been entered, press 'O'K' or 'Apply' in order to send the new longitudinal offset to the RT-Range.

The longitudinal offset can be saved permanently in the RT-Range or just be used until the RT-Range is reset. To save it permanently select the 'Commit this setting to the RT-Range so it remembers after next reset' option.

**Lateral Offset.** The lateral range of the RT-Range can be adjusted or offset to account for small errors in the configuration. This is not a substitute for measuring as accurately as possible; it is a quick technique for making small changes to the lateral range.

Clicking on 'Lateral Offset' brings up the Quick Config window on the Lateral Offset page, as shown in Figure 47. There may be a short delay while the software reads the current settings from the RT-Range.

**Figure 47. Using lateral offsets causes problems on turns**

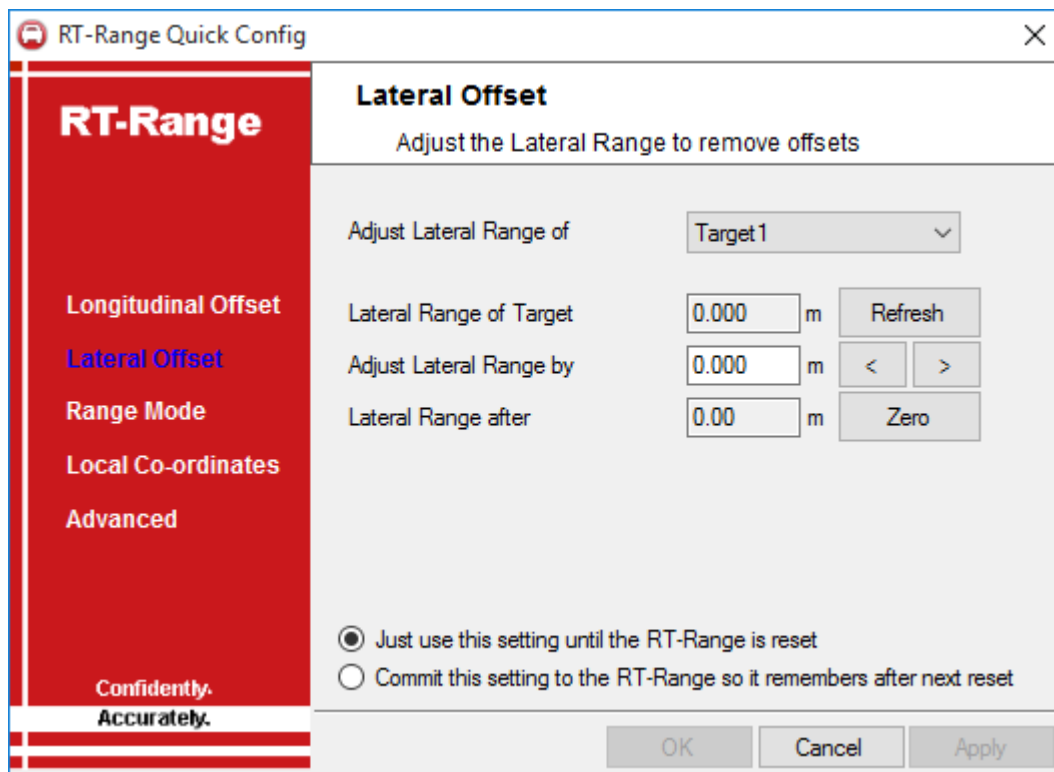


The screenshot shows the 'RT-Range Quick Config' window. On the left is a red sidebar with the 'RT-Range' logo and a menu containing 'Longitudinal Offset', 'Lateral Offset' (highlighted in blue), 'Range Mode', 'Local Co-ordinates', and 'Advanced'. At the bottom of the sidebar is the text 'Confidently. Accurately.' The main window has a title bar with a close button. Below the title bar is a section titled 'Lateral Offset' with the subtitle 'Adjust the Lateral Range to remove offsets'. The settings include: 'Adjust Lateral Range of' set to 'Target1' in a dropdown; 'Lateral Range of Target' set to '0.000 m'; 'Adjust Lateral Range by' set to '0.000 m' with '<' and '>' buttons; and 'Lateral Range after' set to '0.00 m' with a 'Zero' button. There is a 'Refresh' button next to the 'Lateral Range of Target' field. At the bottom, there are two radio buttons: 'Just use this setting until the RT-Range is reset' (selected) and 'Commit this setting to the RT-Range so it remembers after next reset'. At the very bottom are 'OK', 'Cancel', and 'Apply' buttons.

The display shows the current lateral range to the selected target. This is only refreshed when 'Refresh' is pressed. To adjust the lateral range, enter the adjustment in the 'Adjust Lateral Range by' edit box or use the < and > buttons to increment or decrement the value. The 'Lateral Range after' box shows lateral range after the offset has been applied. To zero the lateral range press 'Zero.'

After the adjustment has been entered, press 'OK' or 'Apply' in order to send the new lateral offset to the RT-Range.

The lateral offset can be saved permanently in the RT-Range or just be used until the RT-Range is reset. To save it permanently select the 'Commit this setting to the RT-Range so it remembers after next reset' option.

The lateral range is particularly susceptible to unexpected errors when using the offsets to configure the vehicle. Consider the situation in Figure 48.

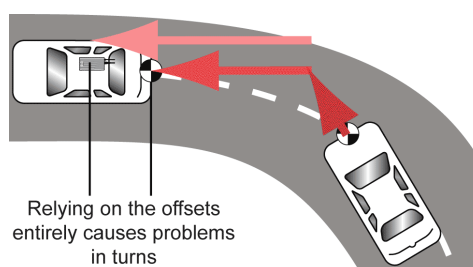**Figure 48. Lateral Offset in the Real-Time Display**


The RT-Range measures the range between the sensor position (on the hunter vehicle) and the bulls-eye position (on the target vehicle). This is shown using the darker red arrows.

Assume that the bulls-eye position on the target vehicle is not entered, so that the RT-Range measures to the RT's position and the longitudinal offset is used to correct this. If the vehicle now turns then the lateral range will track the pink arrow, which is clearly different to the result expected.

It is best to measure the sensor and bulls-eye position as accurately as possible and only rely on the longitudinal and lateral offsets for small adjustments.

**Range Mode.** There are three ranging modes in the RT-Range: car-to-car, Fixed point and Feature point. In Fixed point mode, the RT-Range measures the distance from the hunter vehicle to a Fixed point rather than the distance to the target vehicle. A Fixed point might be the corner of a parked car or a stationary target. In Feature point mode, a file containing thousands of Feature points can be loaded into the RT-Range. These can represent objects such as road signs or traffic lights and the RT-Range can measure the distance from the hunter vehicle to these Feature points. The range mode of the RT-Range is shown in Figure 49.

**Figure 49. Fixed Target Setup window in the Real-Time Display**

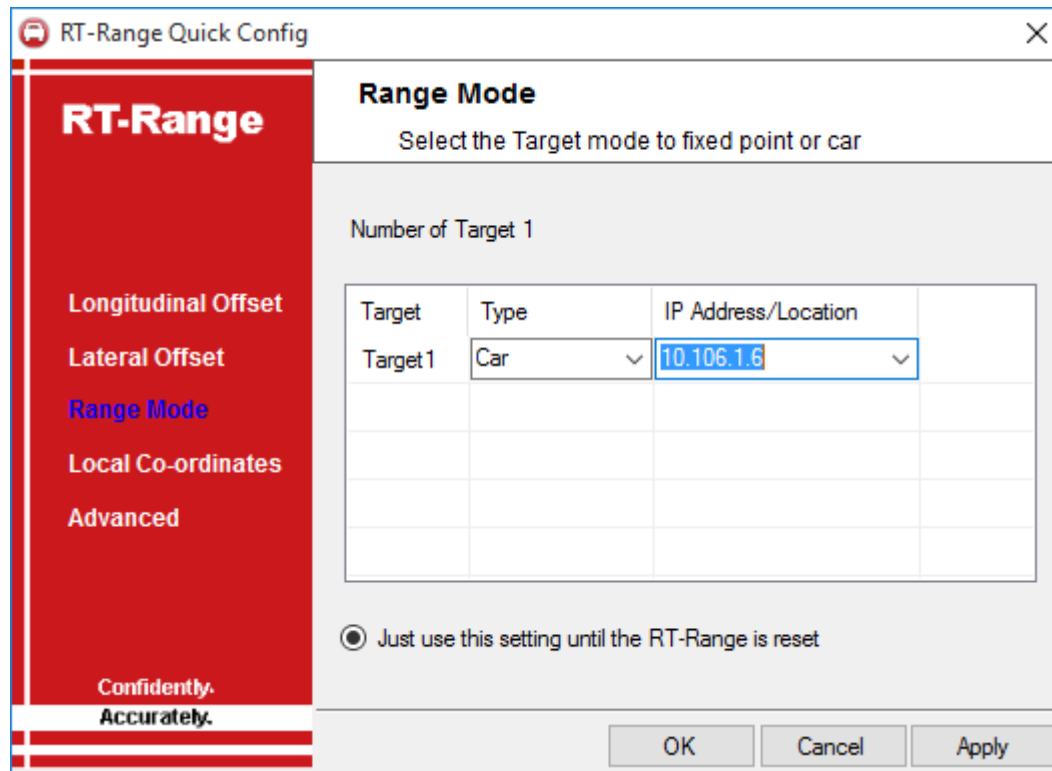

**RT-Range Quick Config**

**RT-Range**

Longitudinal Offset

Lateral Offset

**Range Mode**

Local Co-ordinates

Advanced

Confidently.  
Accurately.

**Range Mode**  
Select the Target mode to fixed point or car

Number of Target 1

Target	Type	IP Address/Location
Target1	Car	10.106.1.6


☒ Just use this setting until the RT-Range is reset

OK Cancel Apply

Targets 1 to 4 can be configured either to track target vehicles or to measure the distances to Fixed points or Feature points.


Note that the RT-Range Hunter does not know the filenames of the Fixed points. If you receive the RT-Range data on a computer that does not have the Fixed point files for example, then the software automatically creates a file and gives it a name. The RT-Range searches all the files in the Fixed point file directory in order to find the Fixed point that matches.

**Fixed point Mode.** To change the Fixed point that the RT-Range is tracking, click on the ... button. This shows the Fixed point Setup dialog box, as shown in Figure 50.

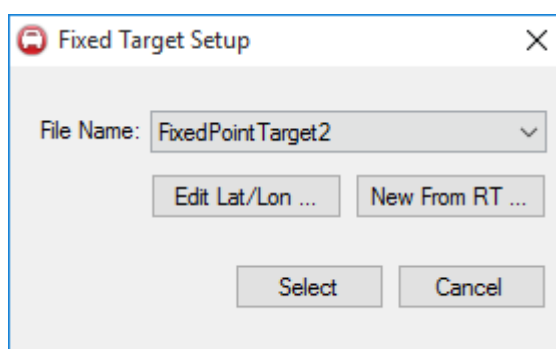**Figure 50. Target configuration in the Real-Time Display**

The Fixed point is stored in a file. Select the file holding the latitude, longitude and altitude of the Fixed point from the dropdown list. The Fixed point files have extension RTFP.


New Fixed points can be made by clicking on 'Edit Lat/Lon' ... or 'New From RT...' The 'Edit Lat/Lon' ... button shows the Set Fixed Point dialog box, as shown in Figure 52.

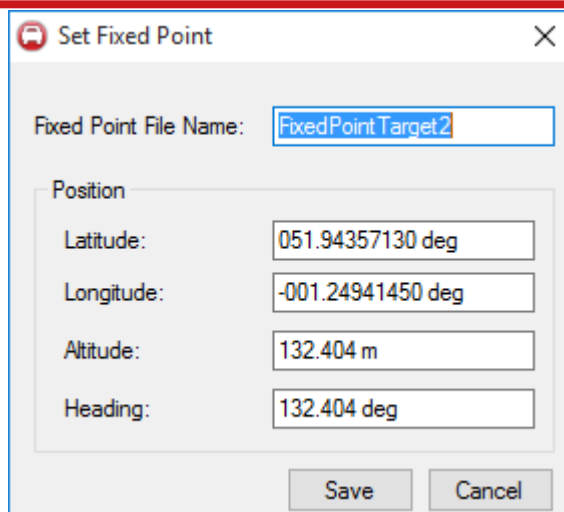**Figure 52. Set Fixed Point window in the Real-Time Display**

The name of the Fixed point is used to generate the filename and appears in the dropdown list of the Send Fixed Point dialog box. Enter the latitude, longitude and altitude of the Fixed point. You will need to use high-precision (many decimal places) latitude and longitude values.

The 'New from RT' ... button gets the latitude and longitude values from any RT on the network.

**Figure 53. Fixed Point from RT window in the Real-Time display**

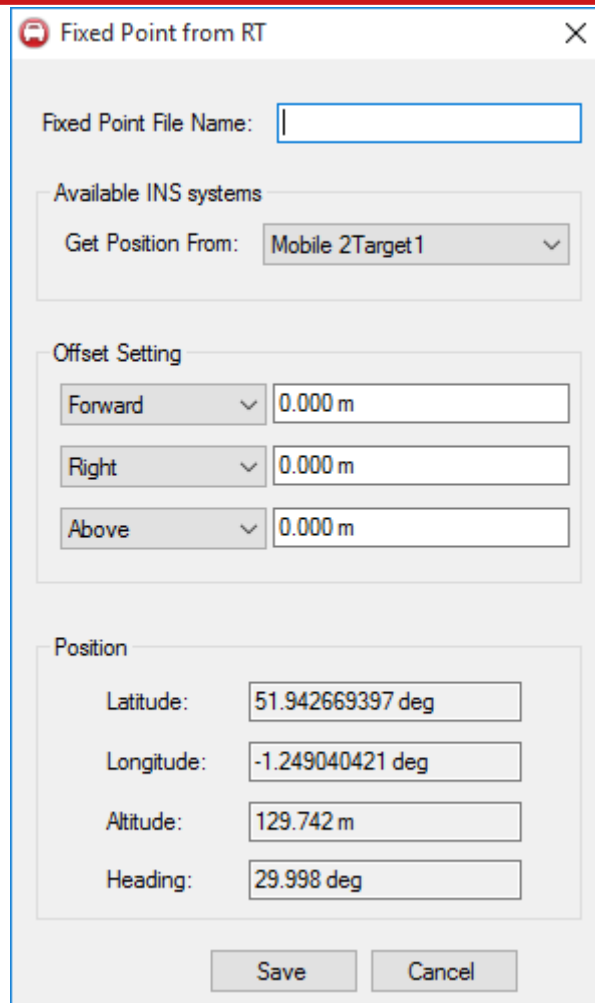

The name of the Fixed point is used to generate the filename and appears in the dropdown list of the Send Fixed Point dialog box.

Select the desired RT from the dropdown dialog box. Because the RT may not be at the exact Fixed point location, values can be entered to displace the Fixed point location from the RT's position.

If there is no RT-Range on the network, the dialog box will not show the RT position. This is because the decoded RT data (latitude, longitude, altitude and heading) are contained in the RCOM packets from the RT-Range. For this feature to work correctly, an RT-Range system must be connected to the network.


**Mobile Target Mode.** In this mode, the RT-Range measures the position of a mobile target from the hunter vehicle. To track a mobile target (e.g. target vehicle, pedestrian

etc.) choose 'Mobile Target' from the dropdown menu and select the IP address of the RT that is in the target vehicle.

**Feature Point Mode.** In this mode, the RT-Range computes the range from the hunter vehicle to the appropriate predefined Feature point. To use Feature points, choose 'Feature points' from the dropdown menu.

**Local Co-ordinates.** The RT-Range has its own set of local co-ordinates. These can be different to the local co-ordinates used by any of the RTs. Normally the local co-ordinates are configured as part of the RT-Range Configuration Wizard but they can be set and changed quickly using the Quick Config window. The RT-Range Quick Config, Local Co-ordinates window is shown in Figure 54.

**Figure 54. RT-Range Quick Config, Local Co-ordinates window**

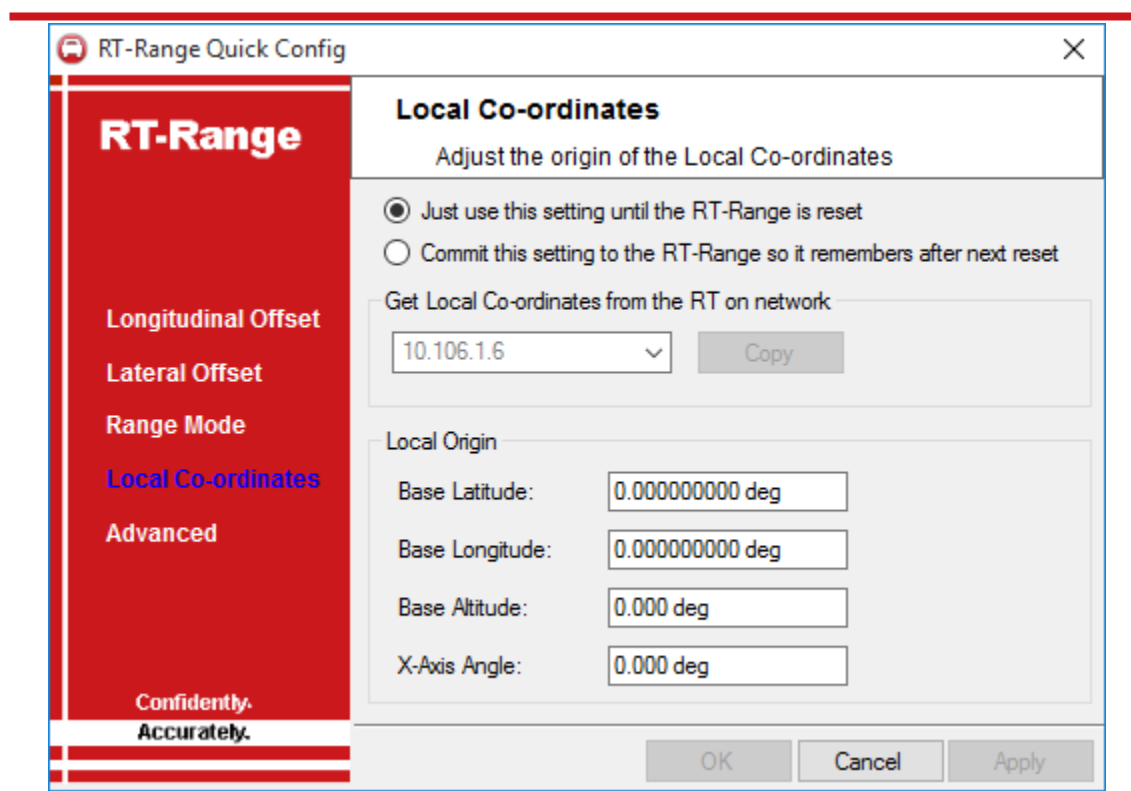

Local Co-ordinates can be configured temporarily to the RT-Range or they can be saved as part of the RT-Range configuration. To save them temporarily choose the 'Just use this setting until the RT-Range is reset' option, in which case the original local co-ordinates will be restored when the RT-Range is reset. To change the configuration, choose the 'Commit this setting to the RT-Range so it remembers after next reset' option, in which case the new local co-ordinates will be saved and the old ones will be overwritten.

Using RT-Range Quick Config you can transfer the local co-ordinate settings of any RT on the network to the RT-Range. This synchronises the local co-ordinates used by that RT and the RT-Range.

In the dropdown list, select the RT whose local co-ordinates you want to copy and click *Copy*; this will copy them from the RT to the group box below. If you know the local co-ordinates already, you can type them into the edit boxes directly. If the copy button is disabled, then there is no data from the selected RT or the local co-ordinates are not enabled on that RT.

Press ‘Apply’ or ‘OK’ to send the local co-ordinates to the RT-Range.

**Advanced.** The Advanced window is used to send commands to the RT-Range. It is used for testing the RT-Range or when you have been specially directed to use it. You can reset the RT-Range through this window.

#### *File Selection menu*

The map file defines the positions of the lanes for the lane position measurements. The RT-Range hardware will save and use the last map file that was downloaded, even after power-up.

**Download Map File.** This function can be used to download another map file to the RT-Range box. Map files have the extension RTRM. The RT-Range will start using the new map file as soon as the download cycle completes.

The RT-Range software remembers the last map file that was downloaded to the RT-Range and uses this file in the Bird’s Eye View.

**Download Feature Point Files.** This function can be used to download a Feature point file to the RT-Range unit. Feature point files have the extension FTL. The RT-Range will start using the new Feature point file as soon as the download cycle completes.

The RT-Range software remembers the last Feature point file that was downloaded to the RT-Range and uses this file in the Bird’s Eye View.

#### *Display Data menu*

The Display Data menu configures the right-hand side of the Real-Time Display. The Display Data menu in the Real-Time Display is the same as the Display Data menu in the Lane Survey Wizard, except it also has the Bird’s Eye View feature. Please refer to the section *Display Data menu* earlier in the manual.

The Save Display functions also operate in the same way as the Lane Survey tool and can be saved to different templates depending on the tests being carried out. If at any time the windows are accidentally closed and not saved as a template, the settings will be



### Connection configuration using the NAVconnect window

The RT-Range, RT and CAN display configuration can be changed at any time by double-clicking the connection icon (shown as a “plug” in Figure 57) at the bottom-right corner of the Real-Time Display. This will bring up the NAVconnect window and show a list of the RT systems currently found on the network. This is shown in Figure 56.

**Figure 55. Connection icon**



**Figure 56. Select IP real-time addresses; assign Tag id and Association tag**

[illegible]


To change which RT-Range or which RTs the software is connected to and displaying, they must first be enabled by checking the 'Enabled' box alongside each device required in the list.

## Associations and tags

The **Association tag** and **Tag id** is used to pass identifiable information about the vehicle against the vehicle type (hunter or target) through to the Real-Time Display windows. This information is extremely useful for validating the actual measurement back to its source in a very user-friendly way.

To set the Association tag and Tag id, first locate the IP address of each device (vehicle) in the list in the NAVconnect window, then select one of either Hunter, Target1, Target2, Target3 or Target4 in the Association tag dropdown list as appropriate to your system. Next double-click on the Tag id to rename it to a user-friendly name (such as the colour or make and model of the vehicle). The information entered will pass through to the Real-Time Display window as shown in Figure 57.


**Figure 57. Real-Time Display with Tag id and Association tag**

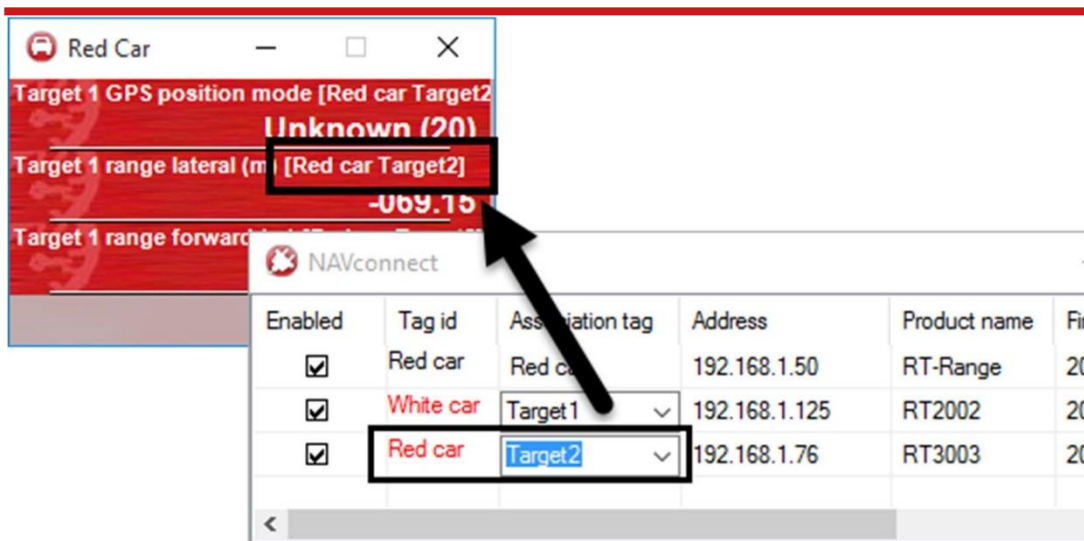

## Bird's Eye View

The Bird's Eye View is part of the Display Data menu. It provides an aerial view of the test area, and is a good way to visualise where the hunter and targets, Fixed points and map are in relation to each other. Figure 58 shows the Bird's Eye View window.

**Figure 58. RT-Range Bird's Eye View**

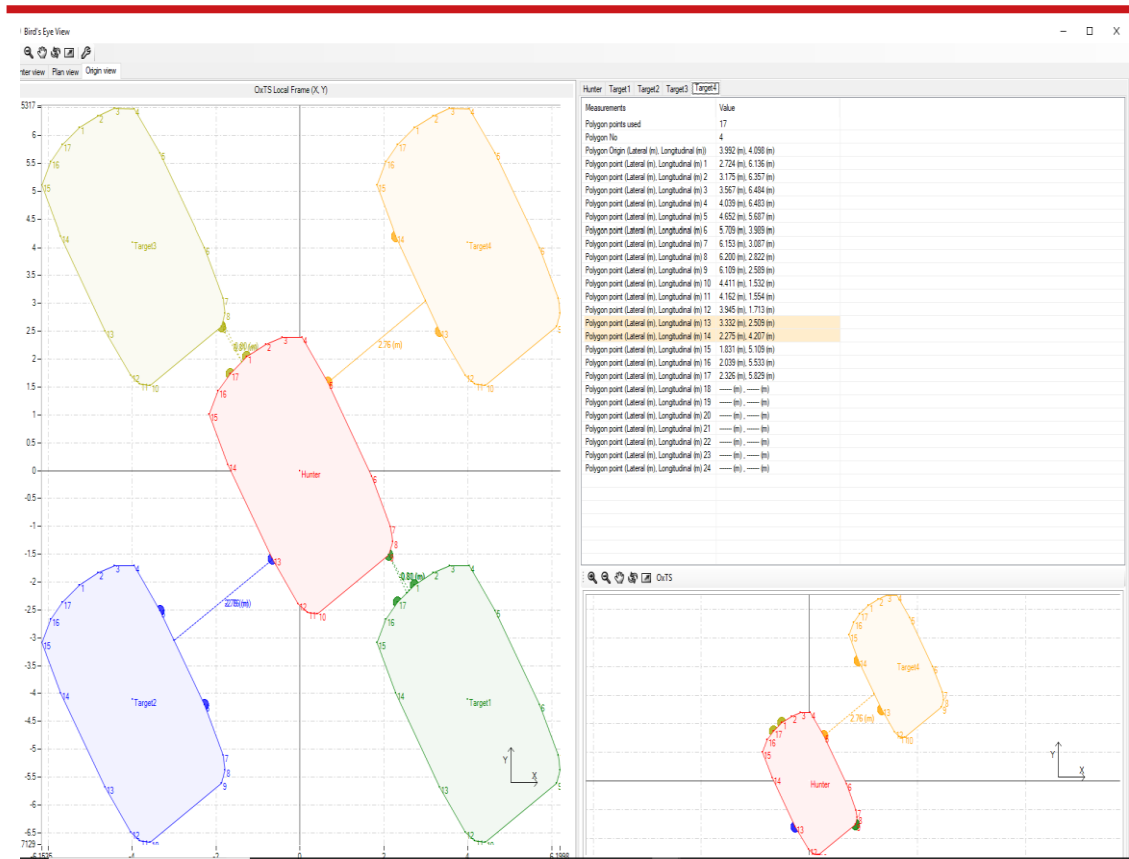

There are several icons that control the appearance of each tab in the Bird's Eye View. These are described in Table 14. Several keyboard shortcuts also exist as outlined below:

**Increase the size of the text in the graph and measurement panel**

**(Shift++)**

**Reduce the size of the text in the graph and measurement panel**

**(Shift+-)**

**Hide the measurement panel (Shift+H)**

**Show the measurement panel (Shift+S)**

The secondary display frame (bottom right) can be toggled to graph OxTS or ISO data from the dropdown menu. The options are:

**Table 12. Need a name for this table**







OxTS
OxTS
OxTS Local Frame (-Y, X)
OxTS Local Frame (X, Y)
OxTS Earth Frame (Easting, Northing)
OxTS Range Frame (Lateral, Longitudinal)
OxTS Range Frame (Longitudinal, -Lateral)
OxTS Individual Frames (Lateral, Longitudinal)
OxTS Individual Frames (Longitudinal, -Lateral)

**Table 13. Need a name for this table**

ISO
ISO
ISO Local Frame (X, Y)
ISO Local Frame (Y, -X)
ISO Earth Frame (Easting, Northing)
ISO Range Frame (-Lateral, Longitudinal)
ISO Range Frame (Longitudinal, Lateral)
ISO Individual Frames (-Lateral, Longitudinal)
ISO Individual Frames (Longitudinal, Lateral)

The graph can be changed by clicking the Configure icon and selecting from the dropdown menu.

**Table 14. Icon functions in the Bird's Eye View**

Icon	Name	Description
	Zoom In (Z)	This icon is used to enter zoom in mode. Click and drag the mouse over the area to be zoomed
	Zoom Out (SHIFT+Z)	This icon zooms out
	Pa n (H)	The icon is used to enter pan mode. Click and drag the mouse to pan the view
	Refresh (R)	This icon can be used to refresh the screen. When a target stops operating, it will remain in view until it is refreshed
	Auto Scale (A)	This selects auto-scale where the scales of the graph will adjust automatically to keep all the items in view
	Configure	This shows the configuration window for the Bird's Eye View
OxTS	Toggle	This selects either OxTS or ISO graph

The Bird's Eye View presents data in three different tabbed views called Hunter view, Plan view and Origin view.

The **Hunter view** tab offers a plan view based on the longitudinal and lateral distance between the object the view is centred on, and other objects. The y-axis is always aligned with the hunter vehicle's forward axis. To select which vehicle the view is centred on, click the Configure icon, then select a vehicle from the Display Mode tab of the Map Display Mode window as shown in Figure 61.

The **Plan view** tab is a useful view when working with Feature points and Fixed points.

The **Origin view** tab is especially useful for ADAS testing as it shows the defined polygon for each vehicle in the test (including the hunter) as well as providing a visual indication of which points are being used for range measurements. To use the Origin view, local co-ordinates must be defined (see [page 70](#)) – if they are not the window will remain blank.


The Origin view can be centred on any vehicle in the test by clicking on the Configure icon, and selecting a vehicle from the Display Mode tab of the Map Display Mode window as shown in Figure 61. The axes are always aligned with the local co-ordinates axes.

The tabbed section on the right-hand side of the Bird's Eye View provides at-a-glance information about the vehicles under test. The information changes depending on which view is currently selected. The width of the window can be resized by placing your cursor on the window boundary and click-dragging. The widths of the columns within each tabbed section can also be adjusted in the same way.

### View configuration

Clicking on the configuration icon opens the Map Display Mode window. The settings selected here affect all three views in the Bird's Eye View – Hunter, Plan and Origin view.

**Figure 59. RT-Range Bird's Eye View configuration**

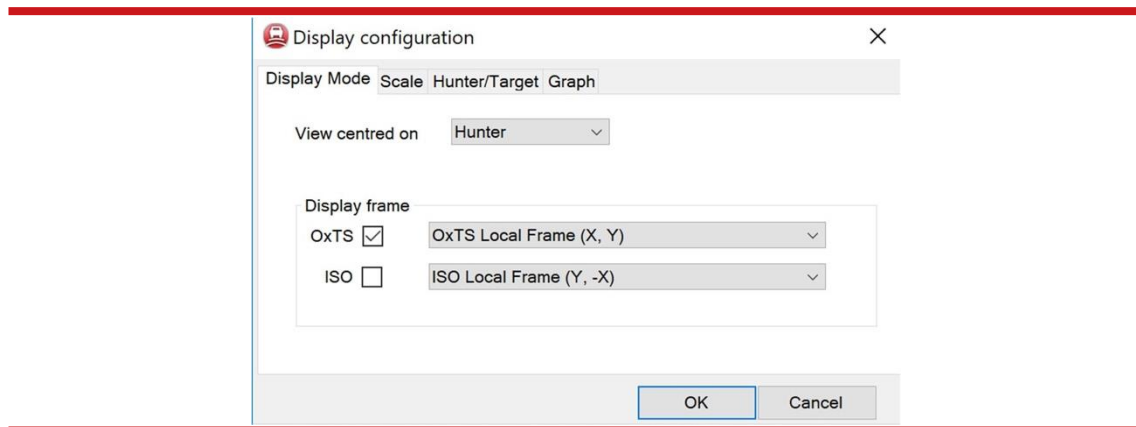

**Display Mode.** This tab allows you to choose which object the views should be centred on when the Auto Scale button is clicked.

**Scale.** By default, each view is auto-scaled to show all objects. The Scale tab allows you to over-ride the default scaling by specifying the minimum and maximum values on each axis. The aspect ratio can also be preserved by selecting Preserve aspect ratio.

**Hunter/Target.** The Hunter/Target tab is used to set the display characteristics for each hunter and target. The caption text, position and colour can be adjusted using the controls in the Caption section. The caption text can be changed independently of the Tag id that is defined in NAVconnect. The selected colour also applies to the polygon fill and line.

The icon shape and colour used on the Hunter and Plan views can be also be defined.

The Polygon section houses the controls used to define the appearance of the polygon measurements, including the ability to disable the polygon point numbers and measurement markers. This can help reduce clutter in each view.

**Graph.** The Graph tab is used to control the appearance of the graphs in the Bird's Eye View.

### Save Data

The Save Data option is used to store RT-Range, RT and CAN data to a file or files. The data is saved to binary formats called RCOM (RT-Range data), NCOM (RT data) and

XCOM (RT and CAN data combined from a CAN enabled RT). If the device is outputting CAN data, the file extension will always be XCOM rather than NCOM.

The *Data logging* module logs the data from the Hunter, Targets and selected RT-Range as they appear in the NAVconnect window. The logged files will have their file names saved using the following format:


- *filename-000\_ Tag id [Association Tag].xcom*
- *filename-000\_ Tag id [Association Tag].rcom*

There will be a file logged for each of the enabled devices in the NAVconnect Connection Manager window.

Once all the data files have been logged, open the RCOM file using NAVgraph. NAVgraph will load all the files and display the RCOM, NCOM or XCOM data in graph form along with a table using a chosen template. From here, it is then possible to export all data to separate CSV files, or directly to a single CSV file. Please read the NAVgraph manual for more information about how to do this.

Note: RT-Range Post-Process does not currently support the XCOM file. The Data Logger dialog box is shown in Figure 60.

**Figure 60. RT-Range Data Logger**

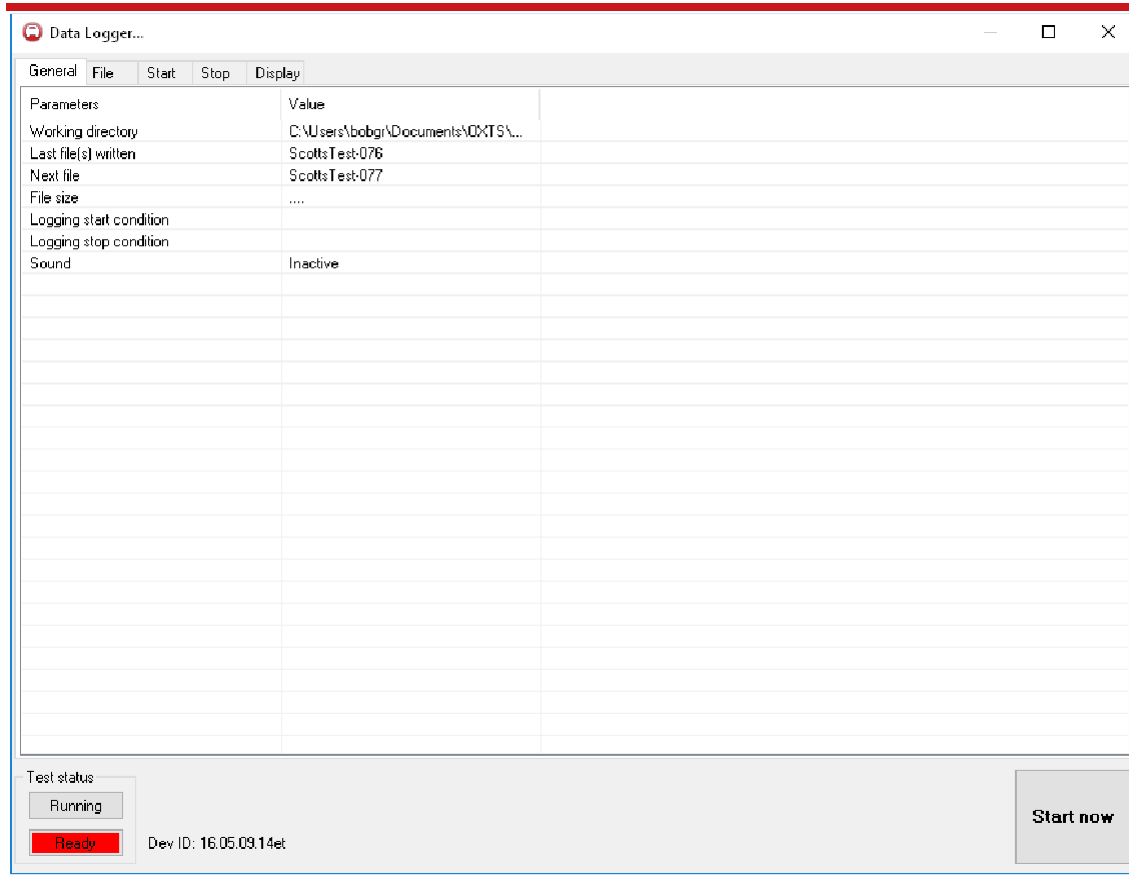

**General tab.** The General tab shows a summary of the logging. Descriptions of the parameters are shown in Table 15.


**Table 15. Description of the General tab parameters**

Parameter	Description
Working directory	Displays the directory where all test files will be saved
Last file(s) written	Displays the name of the last test file recorded
Next file	Displays the name of the next test file to be recorded
File size	Sum of all the file sizes being logged combined
Logging start condition	Displays all options selected for starting the test
Logging stop condition	Displays all options selected for stopping the test
Sound	Displays whether any of the start or stop sounds are active



**File tab.** The File tab can be used to select the directory, file name and number of the next file to be written. The File tab is shown in Figure 61.

**Figure 61. RT-Range Data Logger, File tab**

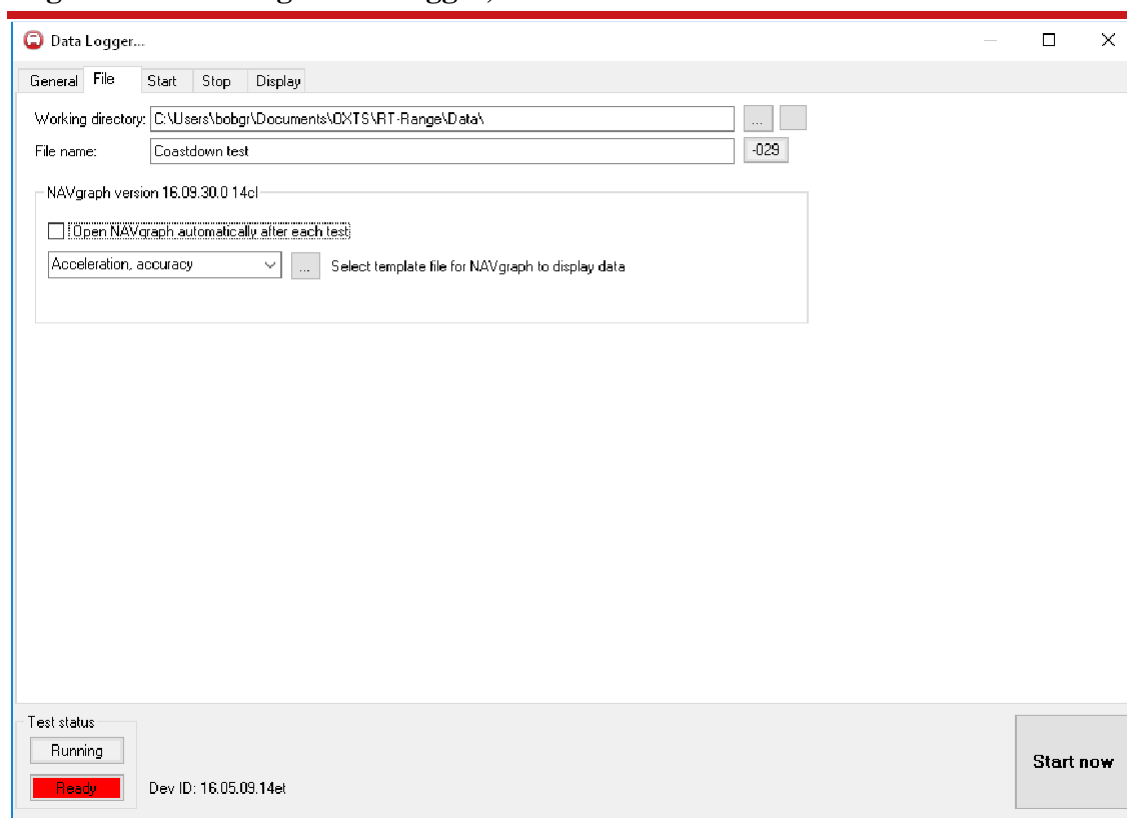

The **Working directory** is the directory where all the data will be saved. This can be changed by clicking on the ... button to the right. An explorer window showing the files can be opened by clicking on the adjacent button.


The **File name** is the base name of the file that will be created. The window will automatically append a number to the end of the file. The number can be changed and reset by clicking on the '-000' button. The number on this button will change as the file number changes. The number represents the *next* file to be written.

Once a test file has been created, it can be automatically opened in NAVgraph. To enable this option, select Open NAVgraph automatically after each test. The menu below this option allows a NAVgraph template to be selected. To access NAVgraph templates not located in the default location, use the ... button to navigate to this folder. The templates will then appear in the dropdown menu.

**Start tab.** The start tab shown in Figure 64 is used to define the conditions under which a test file will be started. Tests can be configured to start in response to trigger events,

crossing a start line or conditional evaluation of measurement values – or a combination of those things.

**Figure 62. RT-Range Data Logger, Start tab**

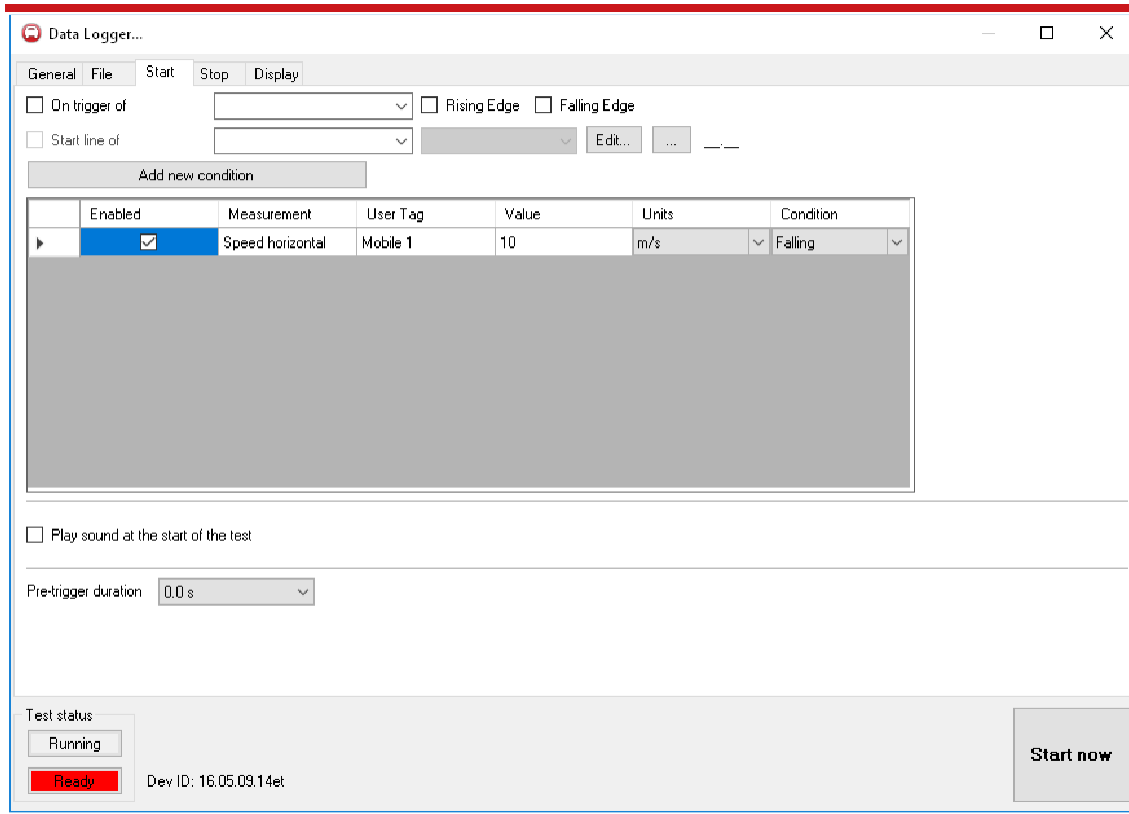


Enabled	Measurement	User Tag	Value	Units	Condition
<input checked="" type="checkbox"/>	Speed horizontal	Mobile 1	10	m/s	Falling

To start a test on the falling edge trigger of a product, select the ‘On falling trigger of’ option, and choose the correct device from the adjacent menu. The tag ID of any live products that are enabled in NAVconnect will show up in the dropdown menus.

Selecting the ‘Start Line of’ option will start the test when the chosen INS crosses a predefined line in the correct direction. This option cannot be selected until a valid start line is either defined or selected. Pressing ‘Edit...’ opens the Define Start Line window as shown in Figure 63.

To create a new start line, enter the desired name in the ‘File Name’ box at the top of the window and choose a location by pressing the ... button.

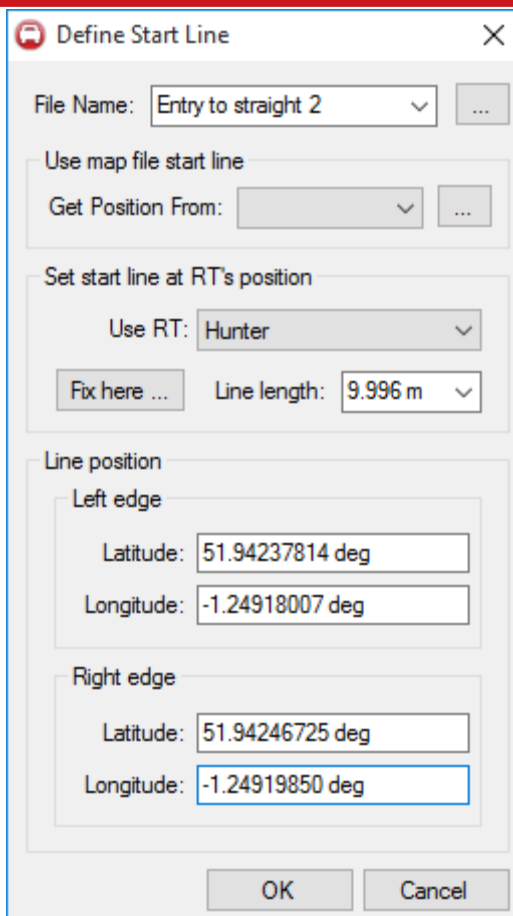**Figure 63. RT-Range Data Logger, Define Start Line**

To set a start line using live data from a device, move the vehicle to the desired start line position and ensure it is pointing in the right direction, then press 'Fix here'. This will set the start line at the current position perpendicular to the current heading.

The desired length of the start line can be selected using the 'Line length' dropdown list box. The latitude and longitude of each end of the start line are displayed lower down. These edit boxes can also be used to manually type in the co-ordinates of a desired start line.

Tests can also be triggered by testing any value being output by the INS. To build new conditions, click the 'Add new condition' button. This will open the Add measurements window, where the measurement to be tested can be selected. A condition has been added in Figure 64, although it has not been enabled.


By entering a value, the units and a condition it is possible to define triggers suitable for most tests. There is no practical limit to the number of conditions that can be entered, however, the Data Logger evaluates conditions in a top-down order and starts the test on the first true condition it encounters.

The option to play a sound at the start of the test is useful when there is only one person in the vehicle, as it provides an audible alert for the driver.

The **Pre-trigger duration** provides a method of including measurement data that occurred before the test was triggered in the output data files. This is possible as NAVdisplay keeps data in a buffer. Up to two seconds of data, prior to the start of the test, can be included.

**Stop tab.** The Stop tab shown in Figure 64 is used to define the conditions under which a test file will be stopped. Tests can be configured to end in response to trigger events, crossing a start line or conditional evaluation of measurement values – or a combination of those things.

**Figure 64. Stop tab**

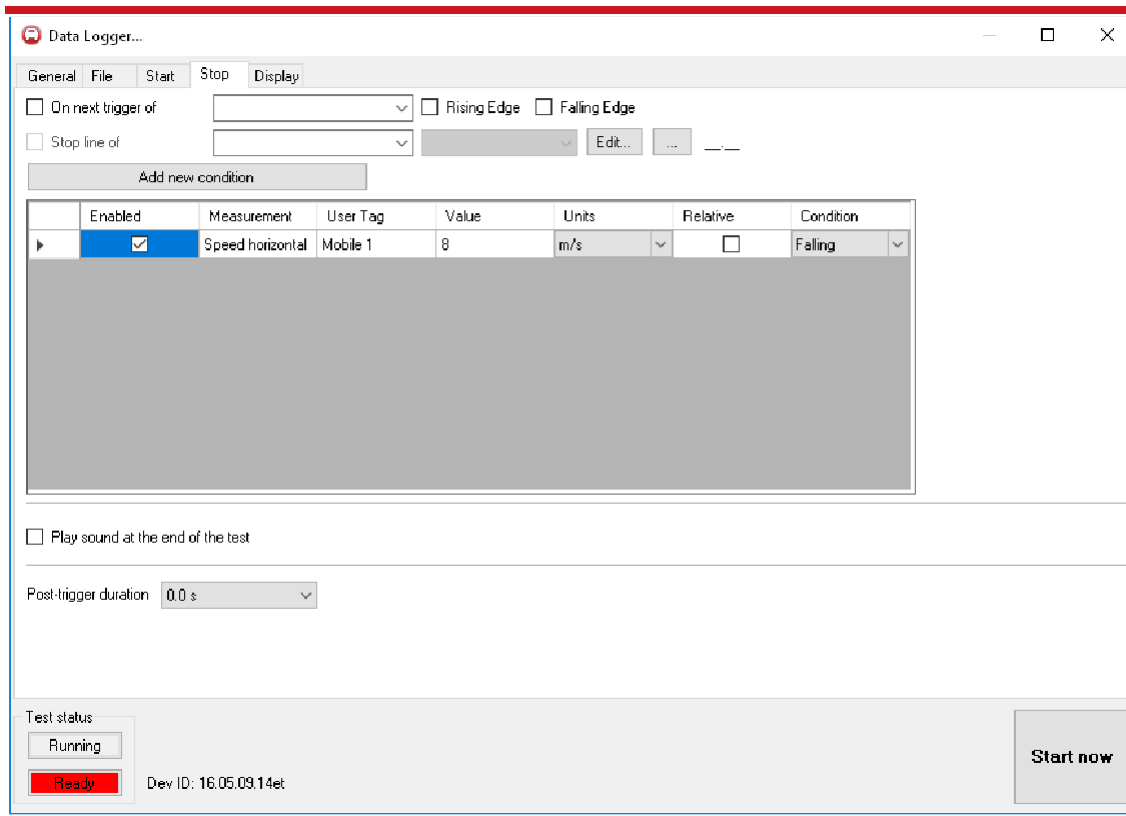

Enabled	Measurement	User Tag	Value	Units	Relative	Condition
<input checked="" type="checkbox"/>	Speed horizontal	Mobile 1	8	m/s	<input type="checkbox"/>	Falling


The **On next trigger of** and **Stop line of** options work in the same way as those on the Start tab. User-defined conditions are also added in the same way as user-defined start conditions, except there is an additional column called **Relative**.

The Relative option allows the end condition to be entered relative to the start condition. Using the condition shown in Figure 66, the test will end as the speed drops below 8 m/s. If the Relative option was selected however, and the start condition was the same as the one shown in Figure 64, then the test would end as the speed dropped below 2 m/s.

The **Play sound at the end of test** option is a useful audio indication for the vehicle driver that the test has terminated. The **Post-trigger duration** continues to add data for the specified duration after the test has concluded.

**Display tab.** The display tab provides a real-time plot of the data when a test is active. It also displays a line representing the Start and Stop parameters as a green and red line respectively. A new graph tab is added for each Start and Stop condition and is named with the condition measurement, allowing all conditions to be evaluated.

**Figure 65. Display tab**

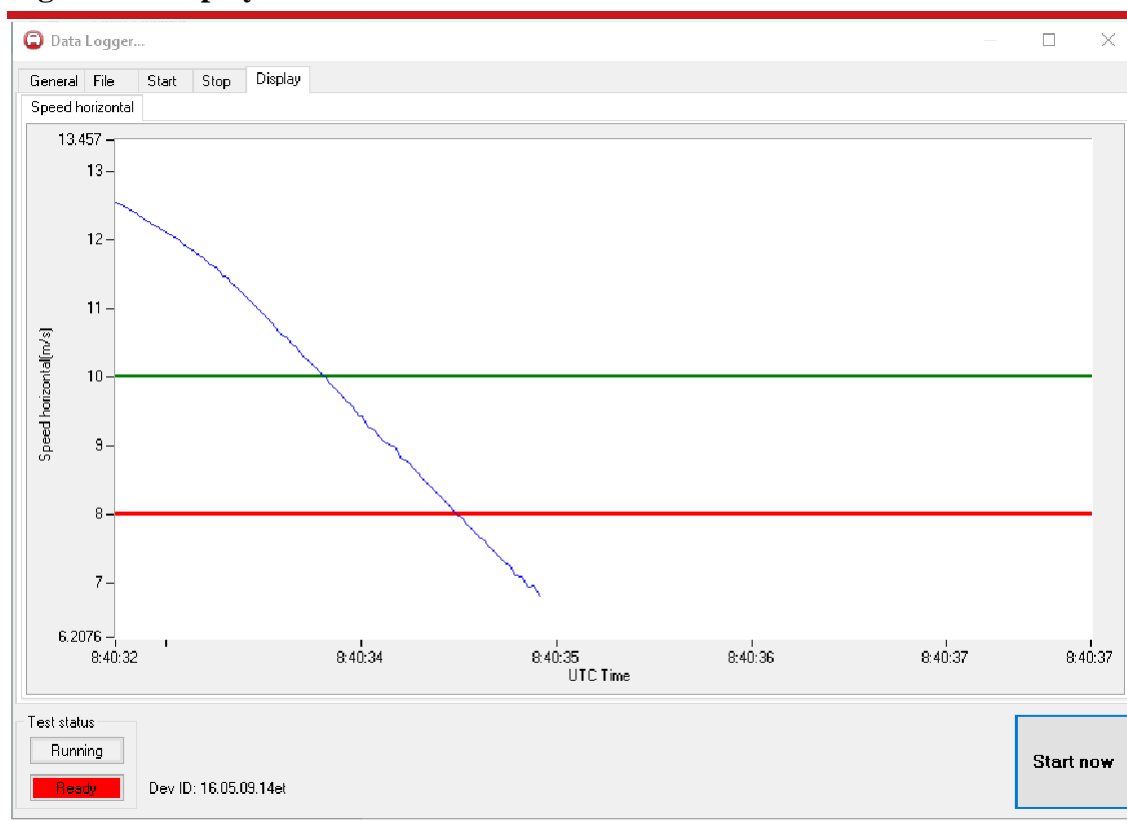

## RT-Range Configuration Wizard

The RT-Range Configuration Wizard is accessed through the Real-Time Display. The parameters in the RT-Range Configuration Wizard are normally only changed when the system is installed in a vehicle.

### *Overview*

To configure the RT-Range correctly the following information is required:


- IP Addresses of the RTs and of the RT with RT-Range enabled.
- Position(s) in the hunter vehicle of the sensors that measure the lane position.
- Positions of the sensors on all vehicles that measure the distance between the vehicles.
- Shapes of the target vehicles and Fixed points, if polygons are going to be used.
- CAN bus, Local Co-ordinate Origin, Range Latency, etc.

The RT-Range is a very precise instrument and these measurements are critical to getting the best results from it. It is not easy to get all the measurements accurate to 1 cm or better. However, a 1 cm error on the RT-Range configuration will result in a 1 cm error in the outputs. It is critical to get these measurements accurate.

### *Reading the initial configuration*

Figure 66 shows the first page of the wizard.

**Figure 66. Read Configuration page of the RT-Range Configuration Wizard**

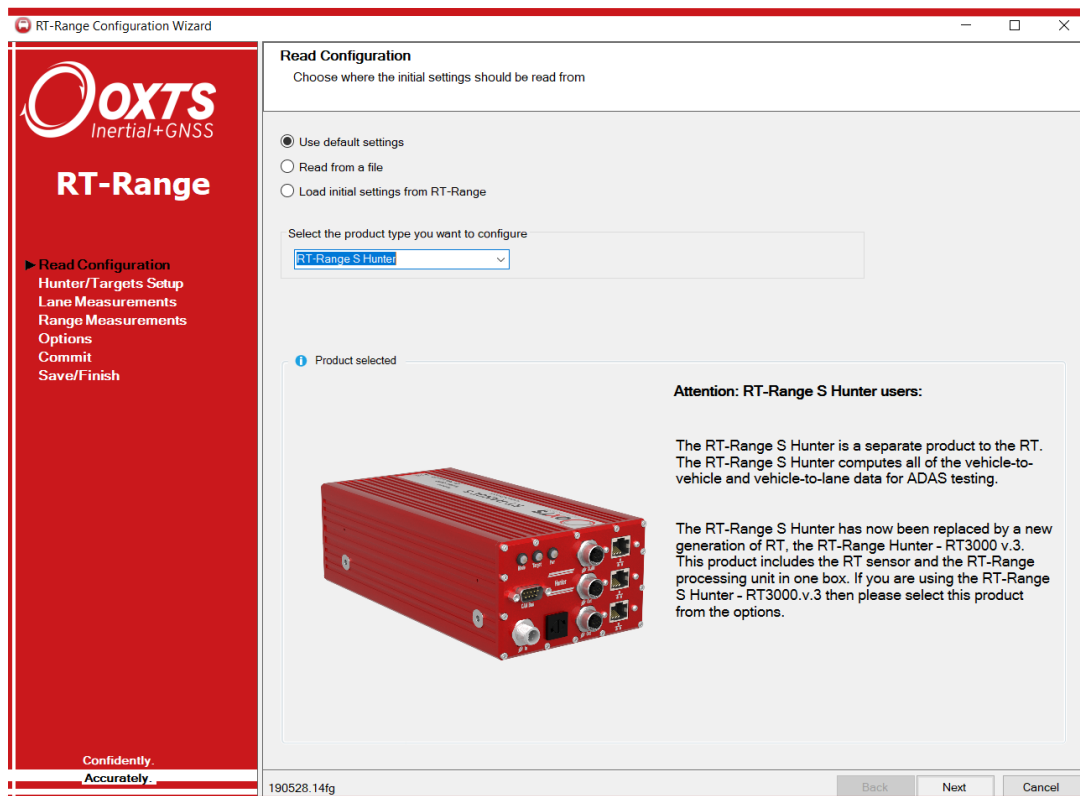

Note that there are two products you can choose from on this page. If you are using an RT-Range S Hunter with a previous generation RT3000 then you should select the RT-Range S Hunter from the dropdown. If you are using an RT3000v3 for your test then select the RT3000v3 from the dropdown. The RT-Range software will pick up the feature codes enabled on the RT3000v3 to allow you to configure the RT as a Hunter.

The initial settings that the wizard displays can come from several sources:

**Default Settings.** If this option is selected, then the wizard will start with a default set of values. The current values in the RT-Range will be lost when these new values are committed.

**Read from a file.** If this option is selected the wizard will read all the settings from a file on the disk. This can be used to store the configuration from several vehicles and quickly restore a vehicle's settings.

**Load initial settings from RT-Range.** This option connects to the RT-Range over Ethernet and loads the settings that are currently programmed to the RT-Range.

After selecting the source for the initial settings click 'Next'.


### *Hunter/Targets setup*

The RT-Range needs to know the IP addresses of the RTs in the hunter and target vehicles so it can pick up the correct data via Ethernet. The IP addresses of the RTs will be shown on the delivery note that came with the RTs. The IP address selection boxes list the RTs that have been found on the network.



Figure 67 shows the Hunter/Targets Setup page of the wizard where the IP addresses are selected.

**Figure 67. RT addresses RT-Range Configuration Wizard**

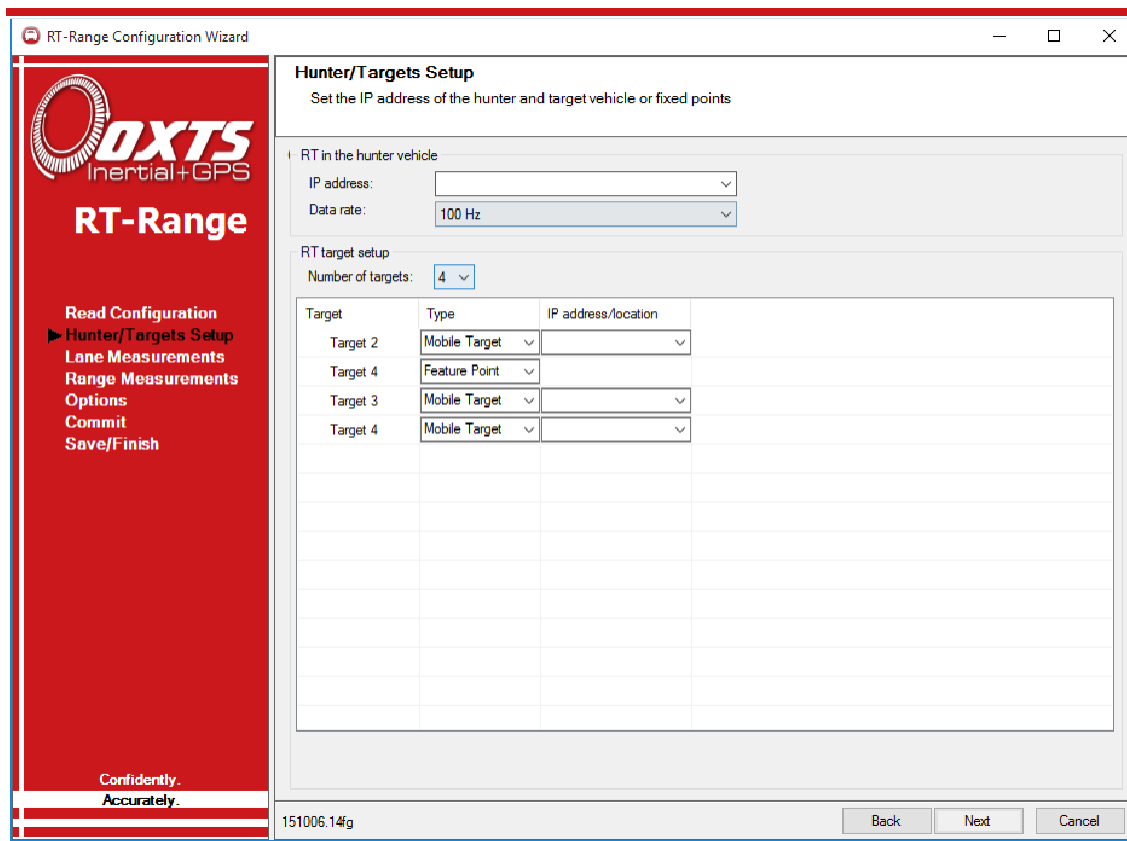

Target	Type	IP address/location
Target 2	Mobile Target	
Target 4	Feature Point	
Target 3	Mobile Target	
Target 4	Mobile Target	

After selecting the IP address of the RT in the hunter vehicle, select the data rate of that RT. For an RT3000 select 100 Hz; for an RT4000 select 250 Hz. For RT2000 products, select the output rate of the product being used.

Up to four targets can be defined in the RT target setup area. First, choose the number of targets you wish to define. These will then appear in the lower window, ready for further configuration.

For each target, the system needs to know its type (Mobile Target, Fixed point or Feature point). Mobile Targets are attached to a specified IP address. Fixed point targets are defined by position – either by entering the lat/lon, heading and altitude directly, or by reading an offset position from an RT that is available on the network.

When one of the targets is defined as a Feature point, a Feature point file can be defined at the bottom of the window. Click the ... button to choose its location. For more information on using Fixed points or Feature points, see the Quick Configuration page for Fixed points or Feature points.

It is not possible to change the number of targets without resetting the RT-Range. If you intend to use one target at the start of the test, then have more targets later, it is best to define all the targets at the start and ignore the extra outputs until you need them.

It is possible to have more than one target with the same IP address. The RT-Range can then configure each of the targets separately even though they are using the information from the same RT.

### *Lane measurements*

The RT-Range calculates lane position measurements from three different locations on the vehicle. These locations are configured relative to the RT output. Figure 68 shows the typical positions on the vehicle where the lane position measurements are made.

**Figure 68. Typical positions for points ABC on a vehicle**


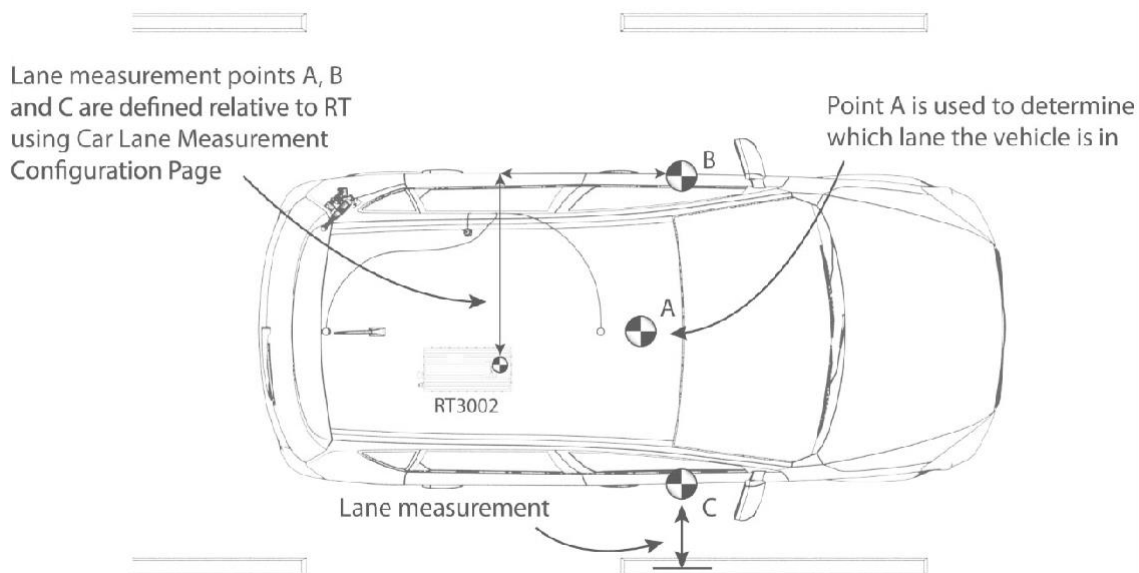


Figure 69 shows the page in the RT-Range Configuration Wizard that configures points A, B and C.

Figure 69. Car Lane Measurements in the RT-Range Configuration Wizard

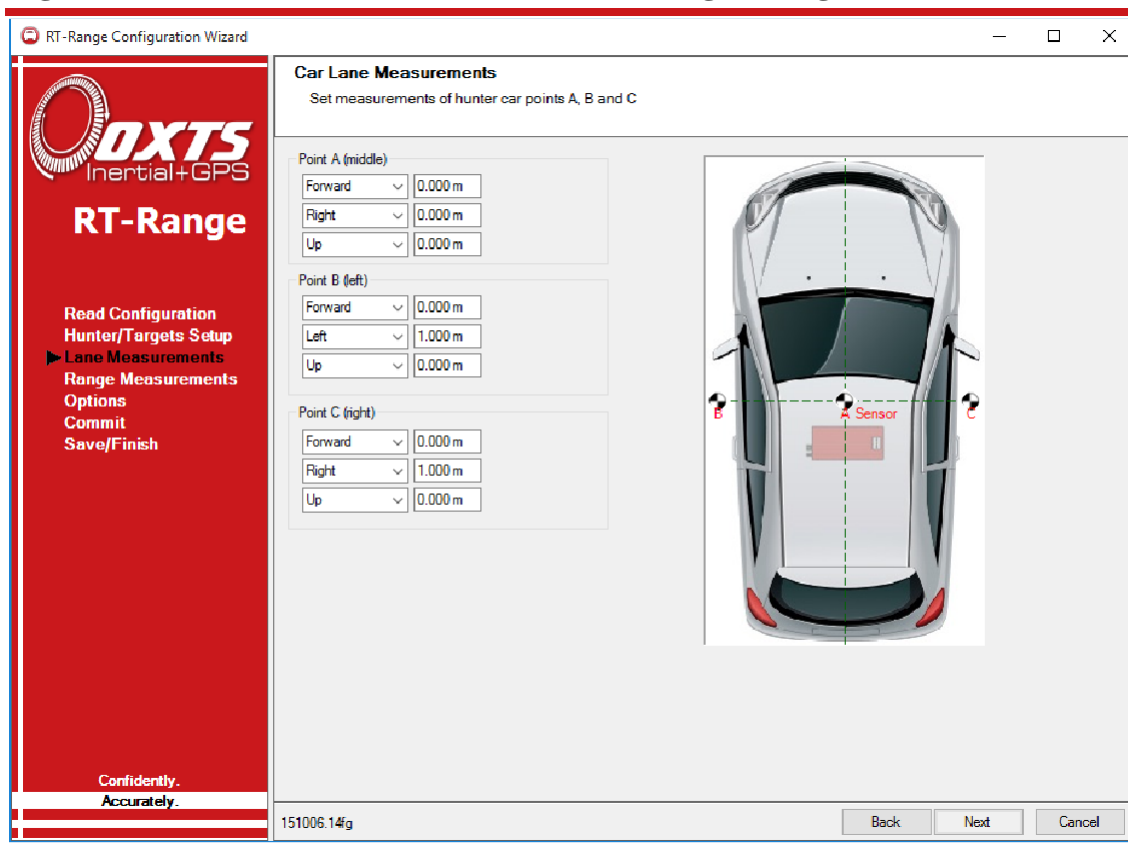

**RT-Range Configuration Wizard**

**Car Lane Measurements**  
Set measurements of hunter car points A, B and C

**Point A (middle)**

Forward	0.000 m
Right	0.000 m
Up	0.000 m

**Point B (left)**

Forward	0.000 m
Left	1.000 m
Up	0.000 m

**Point C (right)**

Forward	0.000 m
Right	1.000 m
Up	0.000 m

Confidently.  
Accurately.

151006.14g

Back Next Cancel

The measurements are from the displaced output position of the RT to Point A, B or C. For best results, you should not use the Displace Output option of the RT as this can be confusing.

The measurements are in the *vehicle co-ordinate frame*. These are the co-ordinates that you have configured the RT to use in the Orientation page of the RT configuration software.


It is essential to make these measurements accurate. This is not easy with a tape measure. Unless the measurements are made accurately the RT-Range cannot be accurate.

Measurements are always displayed in metres but can be entered in inches or feet as well. For inches add “in” to the end of the number and for feet add “ft” to the end of the number. For example, “11.3 in” would be interpreted as 11.3 inches or 0.287 m.

### Range measurements

Range measurements between a hunter and target can be made using polygons or a single point – depending on how they have been configured. We call the single point on the hunter a *sensor* and a single point on a target is called a *bulls-eye*.


**Figure 70. Typical positions for sensor and bulls-eye points on the vehicles**

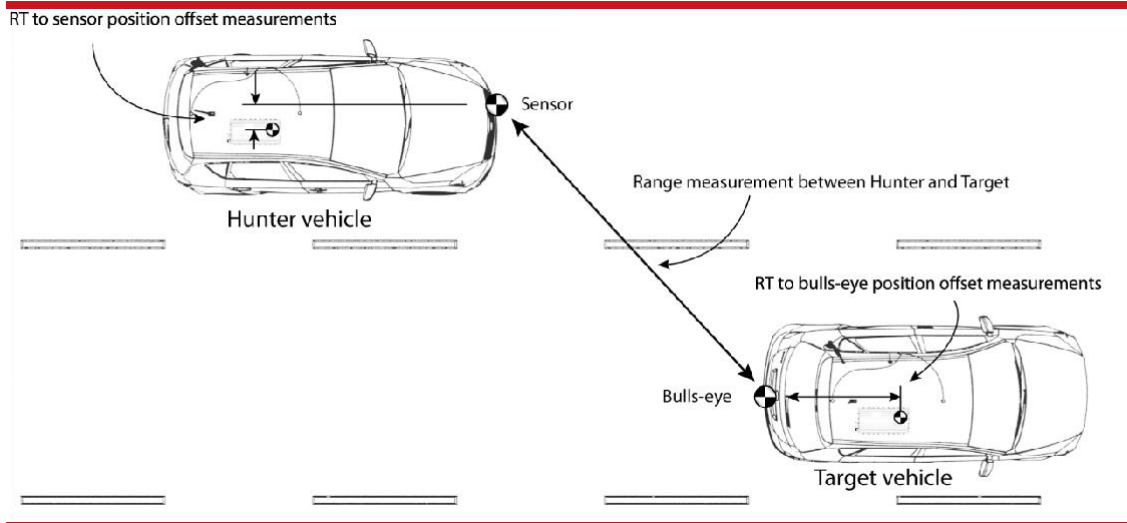

If the hunter and target are configured as a sensor and bulls-eye, then range measurements are calculated between those two points. If a hunter is configured as a polygon but the target is configured as a bulls-eye, then range measurements are calculated from a single vertex on the hunter's polygon, or a linear point between two vertices and the target's bulls-eye. If the hunter and target are both configured as polygons, then range measurements reflect the shortest distance between each polygon perimeter.

If one of the targets has been set up as a Feature point, an additional tool allows a field of view to be set up. Feature points become active only when they fall within the defined field of view. This does not affect *how* Feature point measurements are made, it only affects *when* they are made.

**Figure 71. Range Measurements, Hunter tab**

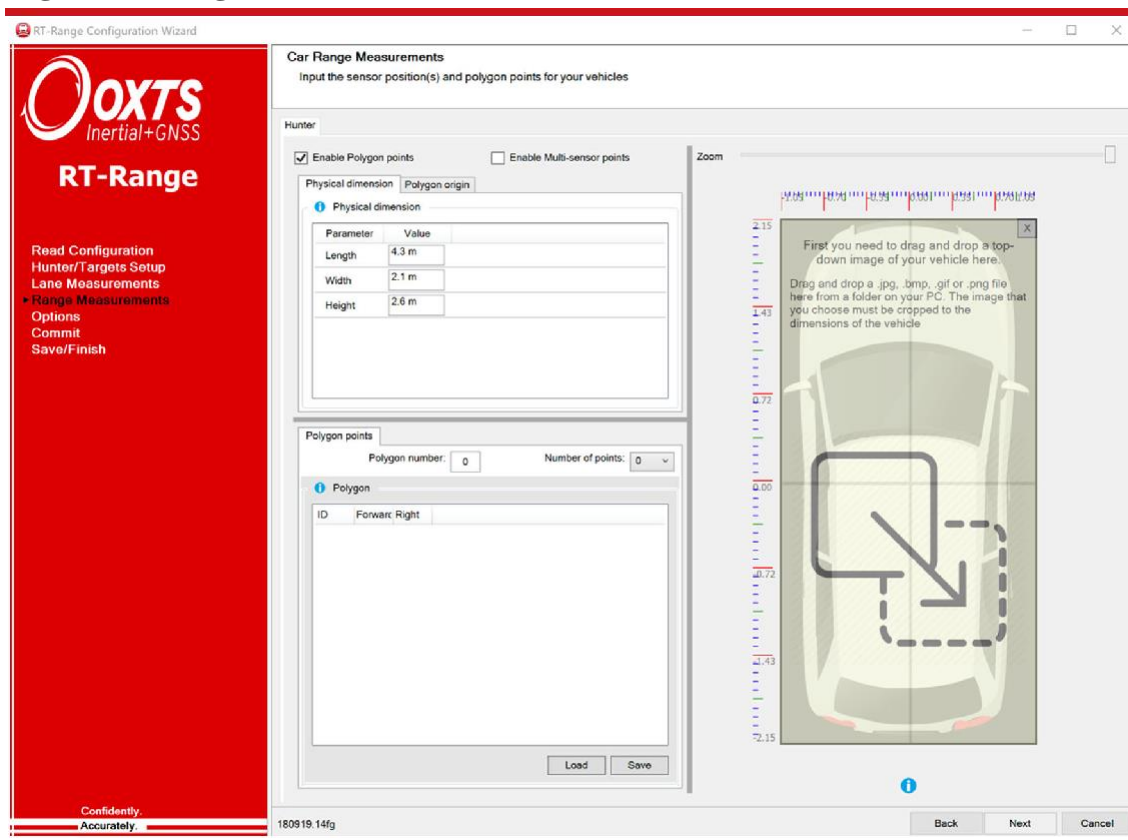


Note the number of Target tabs reflects the number of targets that have been defined on the Hunter/Targets Setup page.

Select 'Enable Polygon points' to configure the physical dimensions for the hunter or targets, and the polygon origin.

Figure 71 shows the Hunter configuration tab. Before continuing, select a top-down image of the vehicle that represents the hunter. Drag and drop a .jpg, .bmp, gif or .png file. The optimal size for the image is: width 340 pixels by height 740 pixels.

It is essential to make the physical measurements accurate. This is not easy with a tape measure. Unless the measurements are made accurately the RT-Range cannot be accurate.

**Figure 72. Configuring polygon points**

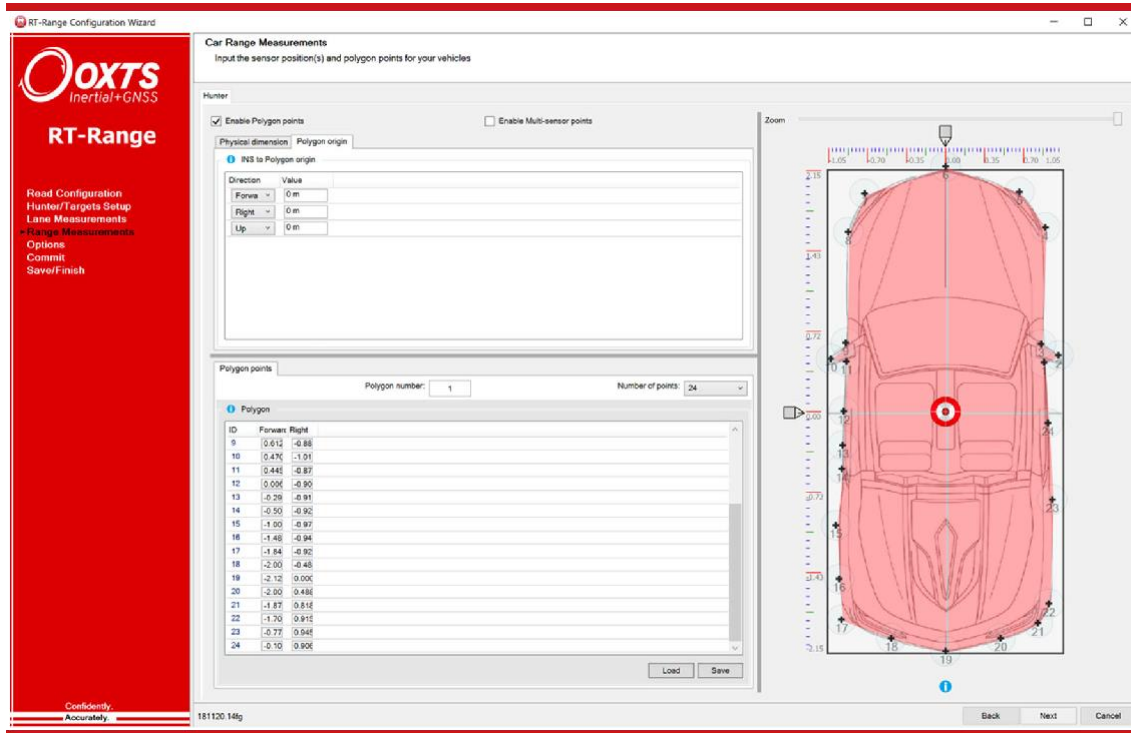


## Defining polygons

Polygons, whether they are for a hunter or target, are defined in a window like the one shown in Figure 72. This window is used to tell the RT-Range how many points make up a polygon shape, where the RT's measurement origin is in relation to the polygon point's origin, and where each polygon is.

To define the polygon points, choose the number of points from the dropdown menu. To position the points on the top-down view vehicle, drag and drop them into position. For more accuracy, configure the forward and right positions in the polygon table opposite.

**Polygon origin.** To define each point or vertex that will make up a polygon, you need to enter a two-dimensional Cartesian co-ordinate. The y-axis of the co-ordinate system is aligned to the vehicle's longitudinal axis (positive forwards); the x-axis of co-ordinate system is aligned to the vehicle's lateral axis (positive right). However, the system needs to know where the origin of your measurements is, with respect to the RT in that vehicle. The controls in the RT to polygon origin allow you to describe where your measurement origin is in relation the RT installed in that vehicle.

**Figure 73. Configuring polygon origin**

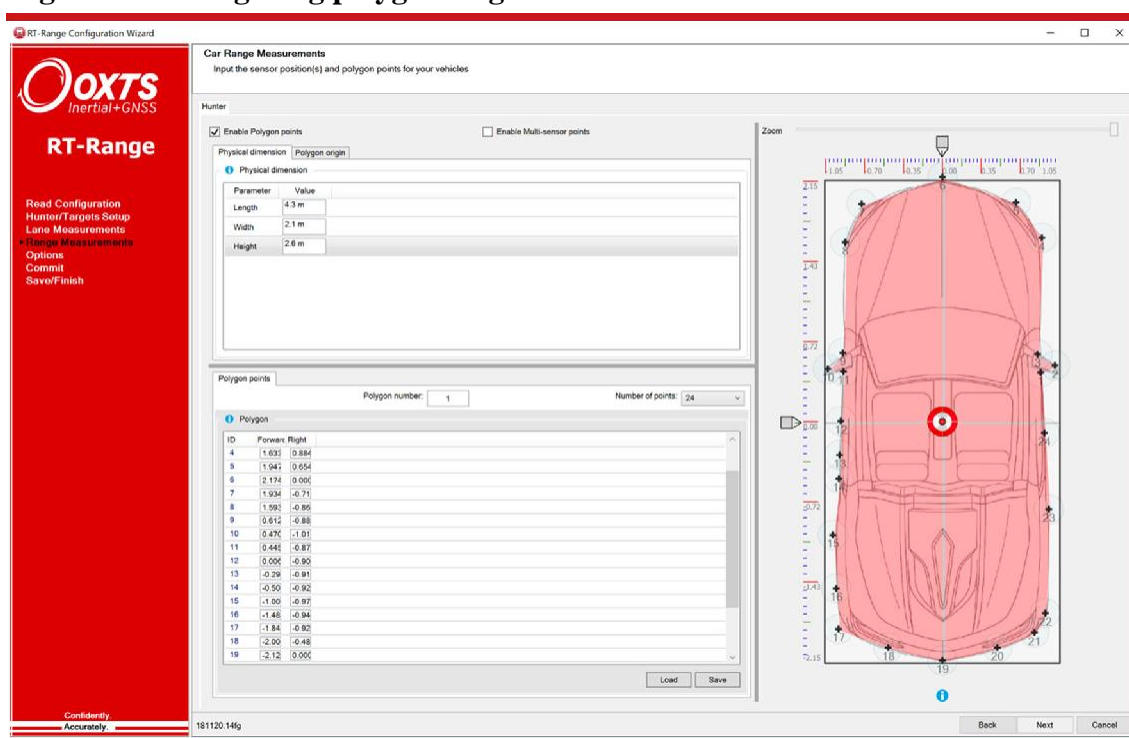

**RT-Range Configuration Wizard**

**Car Range Measurements**  
Input the sensor position(s) and polygon points for your vehicles

Hunter:

☒ Enable Polygon points ☐ Enable Multi-sensor points

Physical dimension Polygon origin

Physical dimension

Parameter	Value
Length	4.3 m
Width	2.1 m
Height	2.6 m

Polygon points

Polygon number: 1 Number of points: 24

Polygon

ID	Forward	Right
4	1.633	0.884
5	1.941	0.654
6	2.174	0.055
7	1.534	-0.71
8	1.581	-0.95
9	0.612	-0.88
10	0.476	-1.01
11	0.441	-0.87
12	0.059	-0.80
13	-0.39	-0.81
14	-0.50	-0.92
15	-1.00	-0.97
16	-1.48	-0.94
17	-1.84	-0.92
18	-2.00	-0.48
19	-2.12	0.055

Load Save

Vehicle diagram showing a red polygon overlaid on a car outline. The polygon is defined by 24 points, with a red dot indicating the origin at the center of the car.

Back Next Cancel

Choose a point on the vehicle as the origin and enter the direction values using the dropdown menus to change direction. To realign the polygons, drag and drop the polygon map to the original position.

The Target configuration tab is identical to the Hunter tab and is configured in the same way. Each target vehicle can be configured with its own top-down view image. Drag and drop a .jpg, .bmp, gif or .png file. The optimal size for the image is: width 340 pixels by height 740 pixels.

**Polygon number.** The polygon number field is used to identify the polygon being used on the CAN bus. The RT-Range passes this number to the user via the CAN bus without using it or modifying it. Unfortunately, the CAN bus does not easily support text fields.

**Number of points.** The number of points used to create each polygon ranges from 3 to 24. In terms of range measurements, the RT-Range will interpolate linearly between vertices, so only add enough points to define the desired shape. Select the number of points in the dropdown menu.

**Load/Save.** Polygons can be saved to and loaded from files using the Load and Save buttons. If the same car is being used, it is quicker to load the polygon shape then check the RT to polygon origin is still valid.

**Next.** If there are no sensor points required, then click 'Next' to commit the settings to move to the options page to configure the RT-Range options.




## Defining Multi-sensor points

A hunter's Multi-sensor points are defined in a window like the one shown in Figure 74.

This window is used to tell the RT-Range how many sensor points will be used on the hunter to measure distance and validate the sensors' field of view in relation to the vehicle's radars.

To define the number of sensors, choose the number of sensor points (up to 12) from the dropdown menu. To position the points on the top-down view vehicle, drag and drop them into position.

**Figure 74. Configuring Multi-sensor points**

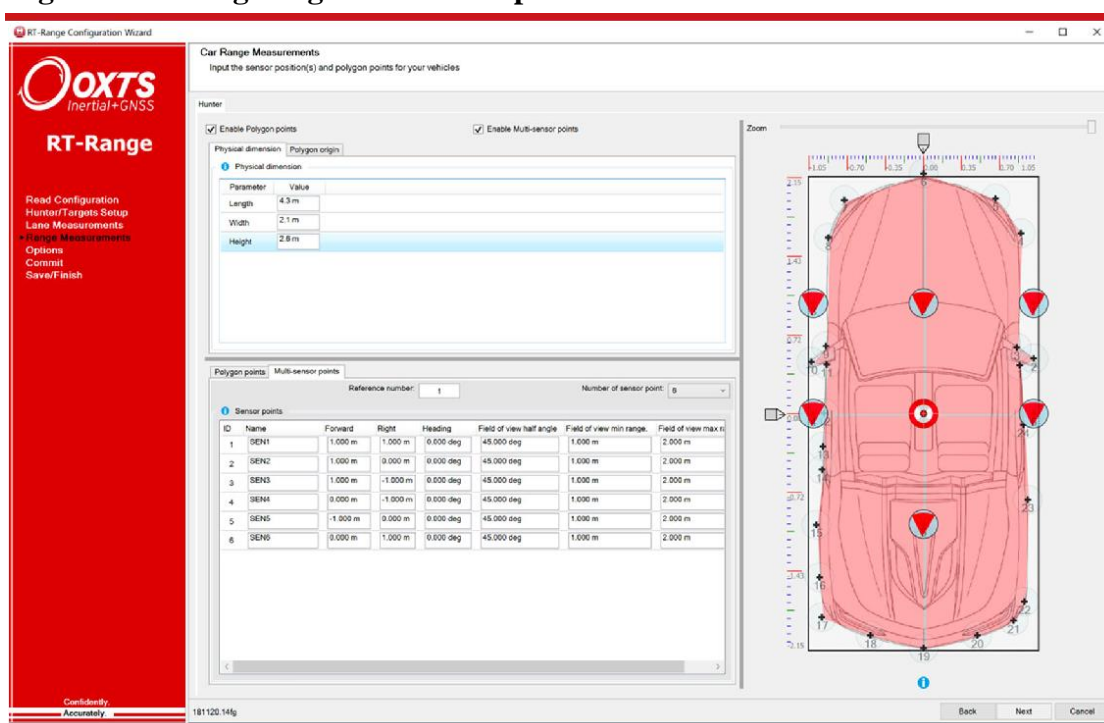

For more accuracy, expand the sensor points table as shown in Figure 75 and enter the measurement. Re-size the table or individual columns to view and enter data.

For each sensor, specify the following elements:

**Name.** Name the sensor (up to 4 characters)

**Forward/Right.** Position the sensor by entering the forward and right measurements. Use negative measurements to position back and left. Measurements are in metres.


**Heading.** Each sensor requires a heading to point it in the right direction. Change the degree of heading by entering the value in the appropriate field. The sensor will change position on the top-down view image.

**Field of view half angle.** To define the viewing angle width, specify the sensor's half angle. '45.000 deg' will provide a 90-degree viewing angle.

**Field of view min range.** Enter the minimum viewing range for the sensor between 0 and 300 m.

**Field of view max range.** Enter the maximum viewing range for the sensor between 0 and 300 m.

**Figure 75. Multi-sensor point measurements**

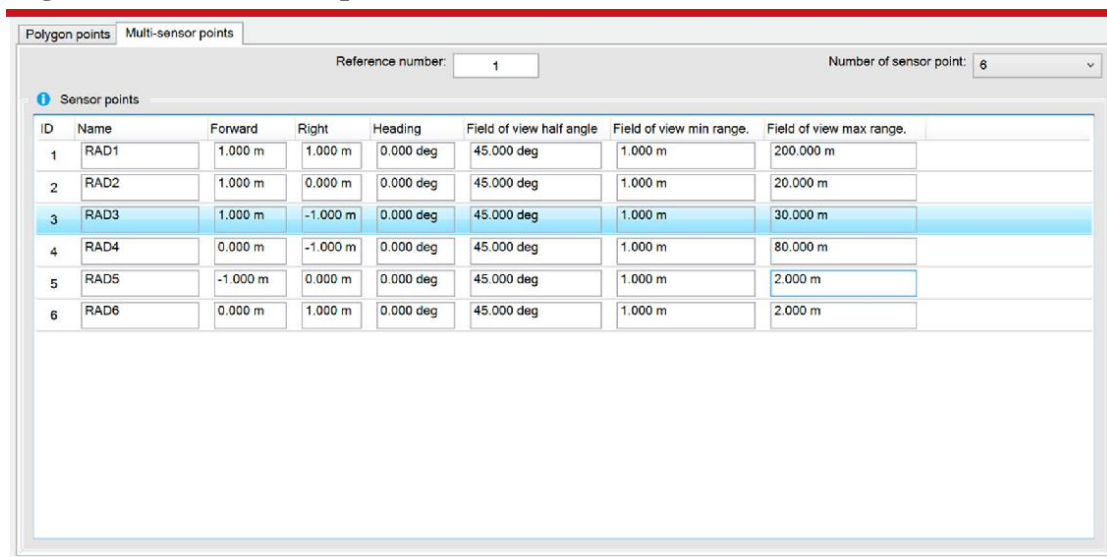


ID	Name	Forward	Right	Heading	Field of view half angle	Field of view min range	Field of view max range
1	RAD1	1.000 m	1.000 m	0.000 deg	45.000 deg	1.000 m	200.000 m
2	RAD2	1.000 m	0.000 m	0.000 deg	45.000 deg	1.000 m	20.000 m
3	RAD3	1.000 m	-1.000 m	0.000 deg	45.000 deg	1.000 m	30.000 m
4	RAD4	0.000 m	-1.000 m	0.000 deg	45.000 deg	1.000 m	80.000 m
5	RAD5	-1.000 m	0.000 m	0.000 deg	45.000 deg	1.000 m	2.000 m
6	RAD6	0.000 m	1.000 m	0.000 deg	45.000 deg	1.000 m	2.000 m

## Options

The Options page is used to configure the RT-Range options. Figure 76 shows the Options page of the RT-Range Configuration Wizard. Each of the options is described below. To edit options, click in the Settings column.

**Figure 76. Options in the RT-Range Configuration Wizard**

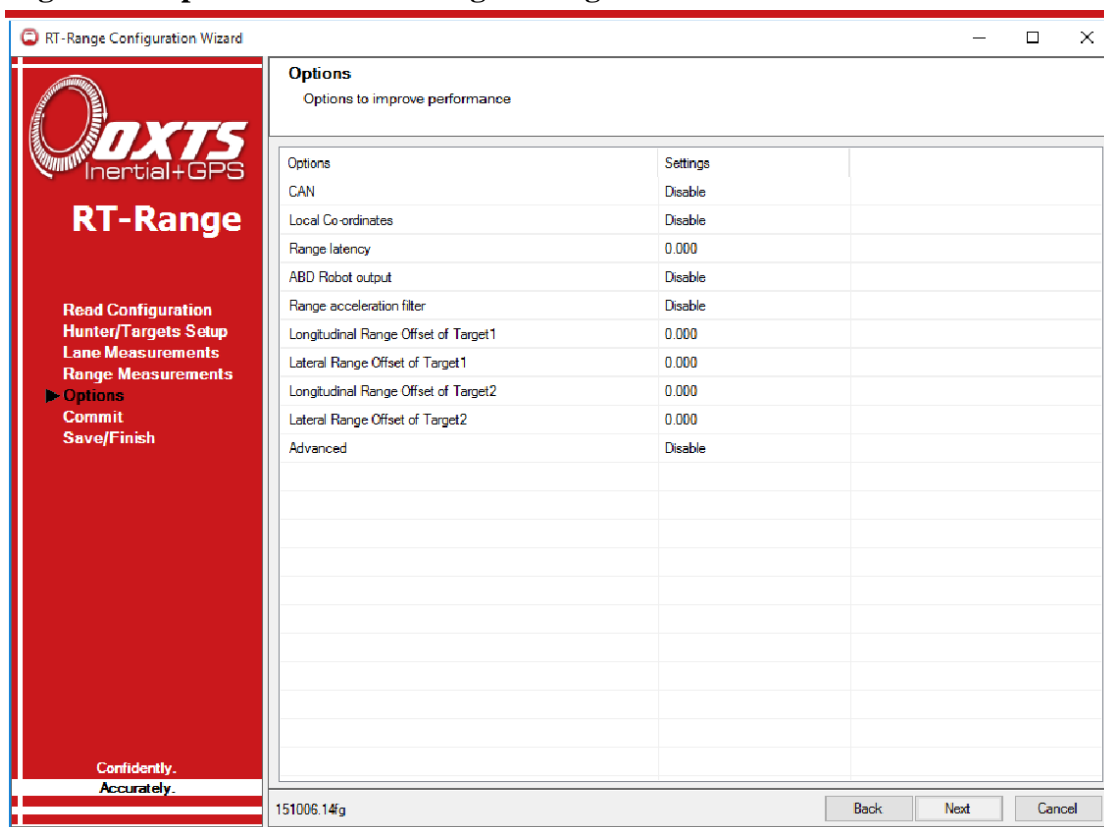


Options	Settings
CAN	Disable
Local Co-ordinates	Disable
Range latency	0.000
ABD Robot output	Disable
Range acceleration filter	Disable
Longitudinal Range Offset of Target1	0.000
Lateral Range Offset of Target1	0.000
Longitudinal Range Offset of Target2	0.000
Lateral Range Offset of Target2	0.000
Advanced	Disable

## CAN

To enable the transmission of CAN messages, set the **CAN Baud Rate** on the General tab to anything except **Disable**. For CAN communication to be successful, the baud rate must match the bus it is being connected to.

**Figure 77. CAN Message Configuration**

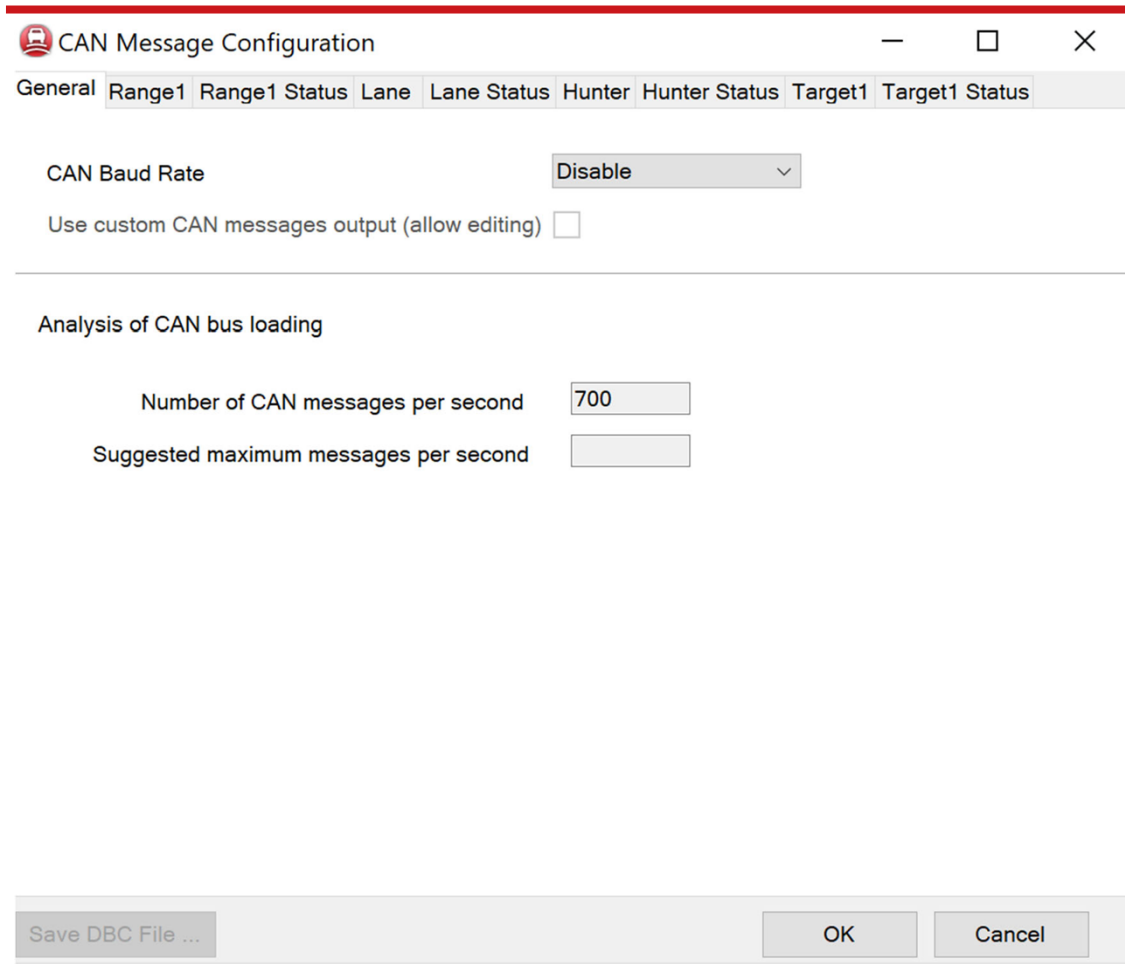


The CAN configuration tabs list ISO and OXTS measurements. As there is more than one co-ordinate system available, CAN messages are disabled by default and must be enabled to view messages required. As there are now so many potential CAN messages it is almost always essential to use advanced settings and choose the messages that are needed. **The Save DBC File...** option can be used to save the correct DBC file for this configuration; this applies to when either normal or advanced settings are used.

When advanced settings are selected, the Range, Lane and Hunter tabs are accessible, as shown in Figure 80. These tabs control how the Range, Lane and Hunter CAN messages

are output. The identifiers and data rates can be controlled. If fewer targets are configured on the Hunter/Target Setup page, then fewer Range and Target pages will be visible.

It is very easy to overload the CAN bus using the RT-Range. The CAN bus is not fast enough to communicate all the range, lane and target messages. The number of messages that have been configured is shown on the General tab. An advisory limit for the current CAN bus is also shown, however the limit may be far less than this if there are many other sensors on the CAN bus. Typically, ADAS testing has many other sensors so take care not to overload the bus.

**Figure 78. Range, Lane and Hunter messages**

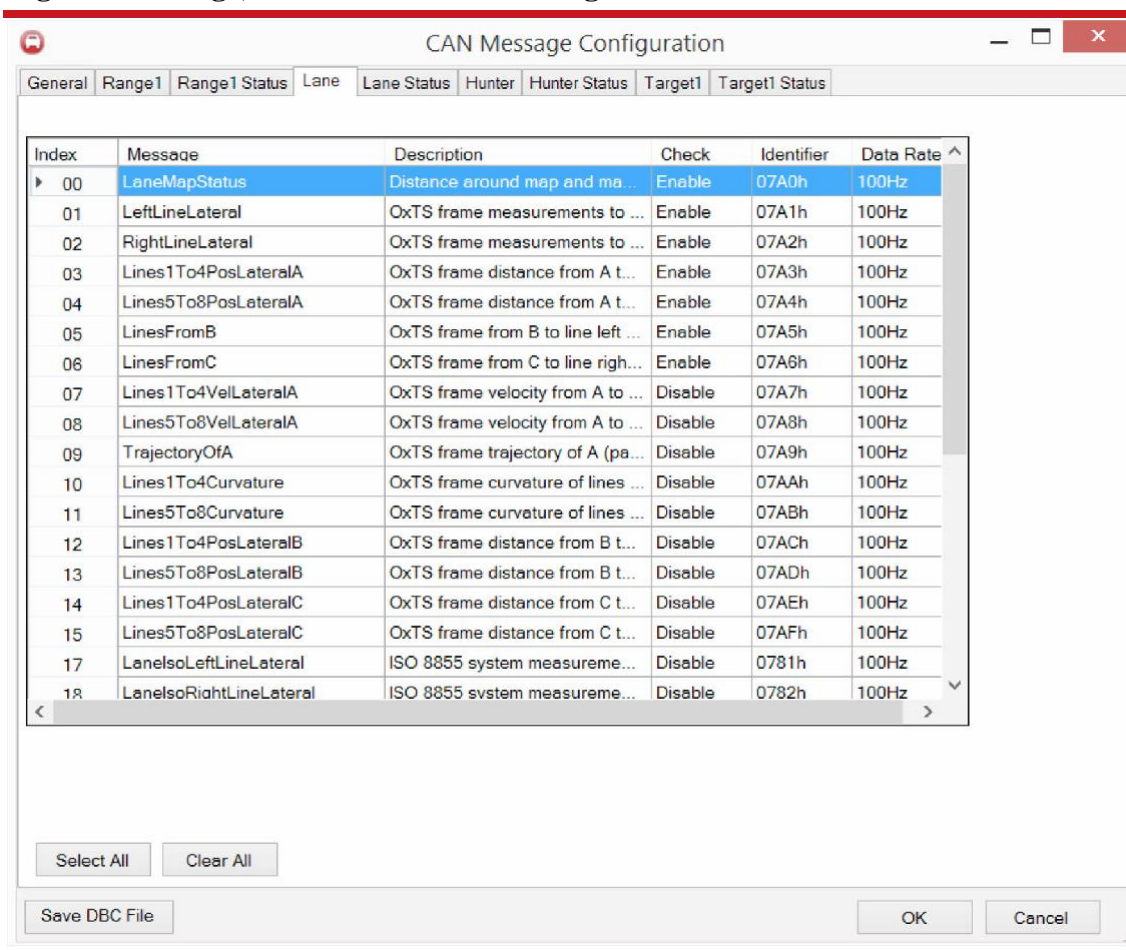


## Editing CAN messages

Once the **Use Advanced settings** option is checked on the General tab, the CAN messages on all subsequent tabs become editable. To edit a single message, simply double click on it to open the CAN Message Configuration window (Figure 79). The **Check** option is used to enable/disable transmission of the selected message. The message identifier can be entered in hexadecimal or decimal format in the relevant box. When one value is changed, the value in the other box will automatically update. No

error checking is performed on the message identifiers, so it is important to check that no other messages are using the same address.

To edit multiple messages, select the messages you wish to adjust, then right-click and select 'Edit'. The selection does not need to be contiguous. After clicking Edit, the Edit Message window will open, but the identifier options are not enabled. Any change to the Check or Data Rate will be applied to the selected messages.

**Figure 79. Edit Message**

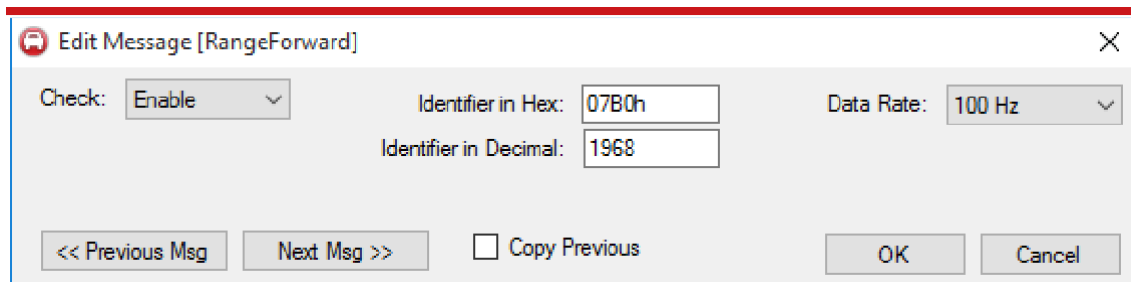

Note: please exercise caution when using the “Copy Previous” function. If each message is copied incorrectly it may stop CAN output from working correctly.

The << **Previous Msg** or **Next Msg**>> buttons allow you to quick-scroll through the messages without leaving the Edit Message window. When **Copy Previous** is selected, the current **Check** state and **Data Rate** settings will be applied to the next message when either << Previous Msg or Next Msg >> is clicked. This is a quick way to set the Check state or Data Rate of multiple messages.

Figure 80 shows the target navigation messages, which can be configured in the same way as the range messages. Figure 83 shows the target status messages.

**Figure 80. Configurable CAN messages for Hunter navigation messages**

CAN

— □ ×

CAN Message Configuration

General Range1 Range1 Status Lane Lane Status Hunter Hunter Status Target1 Target1 Status


Index	Message	Description	Check	Identifier	Data Rate
00	HunterDateTime	Date and time.	Disable	0600h	100Hz
01	HunterLatitudeLongitude	Latitude and longitude.	Disable	0601h	100Hz
02	HunterAltitude	Altitude.	Disable	0602h	100Hz
03	HunterVelocity	OxTS NED frame velocity.	Disable	0603h	100Hz
04	HunterVelocityLevel	OxTS horizontal frame velocity.	Disable	0604h	100Hz
05	HunterAccelVehicle	OxTS output frame IMU accele...	Disable	0605h	100Hz
06	HunterAccelLevel	OxTS horizontal frame IMU ac...	Disable	0606h	100Hz
07	HunterHeadingPitchRoll	OxTS orientation.	Disable	0607h	100Hz
08	HunterRateVehicle	OxTS output frame IMU angul...	Disable	0608h	100Hz
09	HunterRateLevel	OxTS horizontal frame IMU an...	Disable	0609h	100Hz
10	HunterTrackSlipCurvature	Track, slip and curvature.	Disable	060Ah	100Hz
12	HunterPosLocal	Position in local co-ordinates.	Disable	060Ch	100Hz
13	HunterVelYawLocal	Velocity and yaw angle in local...	Disable	060Dh	100Hz
35	HunterIsoOrientation	ISO 8855 orientation.	Disable	0633h	100Hz
36	HunterIsoVsVelocity	ISO 8855 vehicle system veloc...	Disable	0634h	100Hz
37	HunterIsoVsAcceleration	ISO 8855 vehicle system accel...	Disable	0635h	100Hz
38	HunterIsoVsAngularVelocity	ISO 8855 vehicle system angu...	Disable	0636h	100Hz
40	HunterIsolsVelocity	ISO 8855 intermediate system...	Disable	0638h	100Hz
41	HunterIsolsAcceleration	ISO 8855 intermediate system...	Disable	0639h	100Hz
42	HunterIsolsAngularVelocity	ISO 8855 intermediate system...	Disable	063Ah	100Hz
44	HunterIsoEfsVelocity	ISO 8855 earth-fixed system v...	Disable	063Ch	100Hz
45	HunterIsoEfsAcceleration	ISO 8855 earth-fixed system a...	Disable	063Dh	100Hz

Select All Clear All

Save DBC File OK Cancel



**Figure 81. Configurable CAN messages for Hunter status messages**

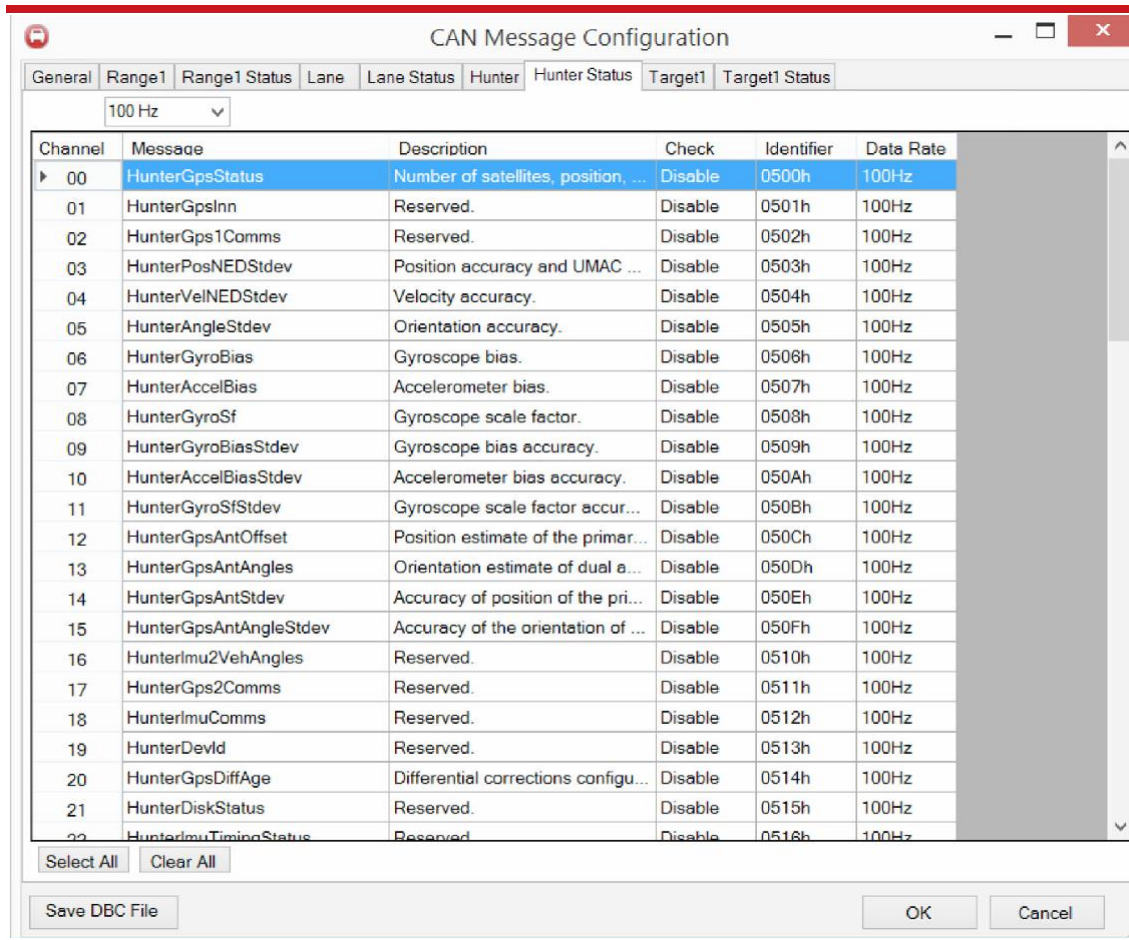


Channel	Message	Description	Check	Identifier	Data Rate
00	HunterGpsStatus	Number of satellites, position, ...	Disable	0500h	100Hz
01	HunterGpsInn	Reserved.	Disable	0501h	100Hz
02	HunterGps1Comms	Reserved.	Disable	0502h	100Hz
03	HunterPosNEDStdev	Position accuracy and UMAC ...	Disable	0503h	100Hz
04	HunterVelNEDStdev	Velocity accuracy.	Disable	0504h	100Hz
05	HunterAngleStdev	Orientation accuracy.	Disable	0505h	100Hz
06	HunterGyroBias	Gyroscope bias.	Disable	0506h	100Hz
07	HunterAccelBias	Accelerometer bias.	Disable	0507h	100Hz
08	HunterGyroSf	Gyroscope scale factor.	Disable	0508h	100Hz
09	HunterGyroBiasStdev	Gyroscope bias accuracy.	Disable	0509h	100Hz
10	HunterAccelBiasStdev	Accelerometer bias accuracy.	Disable	050Ah	100Hz
11	HunterGyroSfStdev	Gyroscope scale factor accur...	Disable	050Bh	100Hz
12	HunterGpsAntOffset	Position estimate of the primar...	Disable	050Ch	100Hz
13	HunterGpsAntAngles	Orientation estimate of dual a...	Disable	050Dh	100Hz
14	HunterGpsAntStdev	Accuracy of position of the pri...	Disable	050Eh	100Hz
15	HunterGpsAntAngleStdev	Accuracy of the orientation of ...	Disable	050Fh	100Hz
16	HunterImu2VehAngles	Reserved.	Disable	0510h	100Hz
17	HunterGps2Comms	Reserved.	Disable	0511h	100Hz
18	HunterImuComms	Reserved.	Disable	0512h	100Hz
19	HunterDevId	Reserved.	Disable	0513h	100Hz
20	HunterGpsDiffAge	Differential corrections configu...	Disable	0514h	100Hz
21	HunterDiskStatus	Reserved.	Disable	0515h	100Hz
22	HunterImuTimingStatus	Reserved.	Disable	0516h	100Hz

The Hunter status messages are configured slightly differently compared to the other messages. The Ethernet transmission from the RT to the RT-Range does not transmit every status message every 100 Hz (or 250 Hz) cycle; instead only one status message is transmitted each cycle. The RT-Range will apply the same principle. Only one status message will be transmitted each cycle at the data rate that is selected. If packets are dropped by the radio (wireless LAN) from the RT to the RT-Range then these messages will not be predicted or interpolated, they will not be output or an older version will be output.

**Local Co-ordinates.** The RT-Range includes the option to output the position of the hunter and target vehicles in a local co-ordinate system. This is often easier than using latitude and longitude. The local co-ordinates of the hunter and target vehicles are output on the CAN bus. Figure 84 shows the Local Co-ordinates dialog box.

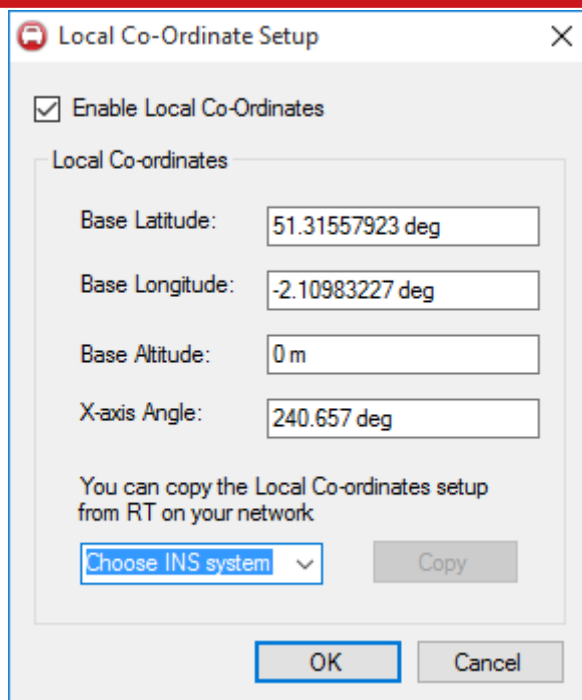

**Figure 82. Local Co-ordinate setup in the RT-Range Configuration Wizard**

The screenshot shows a dialog box titled "Local Co-ordinate Setup". It has a close button (X) in the top right corner. Inside the dialog, there is a checkbox labeled "Enable Local Co-ordinates" which is checked. Below this, there is a section titled "Local Co-ordinates" containing four input fields: "Base Latitude:" with the value "51.31557923 deg", "Base Longitude:" with the value "-2.10983227 deg", "Base Altitude:" with the value "0 m", and "X-axis Angle:" with the value "240.657 deg". Below these fields, there is a text prompt: "You can copy the Local Co-ordinates setup from RT on your network". Under this prompt, there is a dropdown menu labeled "Choose INS system" and a "Copy" button. At the bottom of the dialog, there are "OK" and "Cancel" buttons.

The Local Co-ordinates translate the curved earth into a grid that is locally flat. The transformation cannot do this accurately over a large range (in fact no transformation can) and the Local Co-ordinates should only be used over a small area, up to about 10 km square.

You must provide the position in latitude and longitude, and altitude, of the origin of the grid. This is the position where the X and Y values will be zero. You can also specify the angle of the *x*-axis for the grid. Normally the *x*-axis will be north and the *y*-axis will be west. However, sometimes it is easier to have the *x*-axis (and therefore the *y*-axis) in a different direction. The *x-axis Angle* field can be used to specify the direction of the *x*-axis relative to north; for example, a value of 90 degrees will mean that the *x*-axis points east.

Note that, normally the RT has the *z*-axis pointing down. For the Local Co-ordinates, the *z*-axis points up. This is so the position plots in the same way as a map. (You don't normally look at maps from below and, if you did, the directions would be wrong.)

**Range Latency.** Measurements from the target vehicles are transmitted via Wireless LAN or via radio. This inevitably leads to some delay in the measurements from the target. For the RT-Range to output without any delay, the position and velocity of the target vehicle must be predicted. This prediction can lead to small errors during acceleration transients (jerks). The prediction has no error when the acceleration is constant.


To avoid or reduce the problems of jerk, the range output of the RT-Range can be delayed. This delay allows the communication link(s) to transmit the data and, therefore, no prediction is required. The delay is constant and is chosen by the user. If the communication link(s) still have not transmitted the data when the output is scheduled, then the target vehicle's measurements will be predicted (though by a smaller amount than a zero-latency system would use).

The delay in the outputs is set using the Range Latency option.

This setting has no effect on the lane position measurement. The lane position measurements will always be output in real time with no delay.

**ABD Robot Setup.** If the RT-Range is being used to output data to an ABD steering robot, then it will need to be configured so that the correct information is sent to the robot. Figure 83 shows the ABD Robot Setup dialog box.

**Figure 83. ABD Robot Setup dialog box**

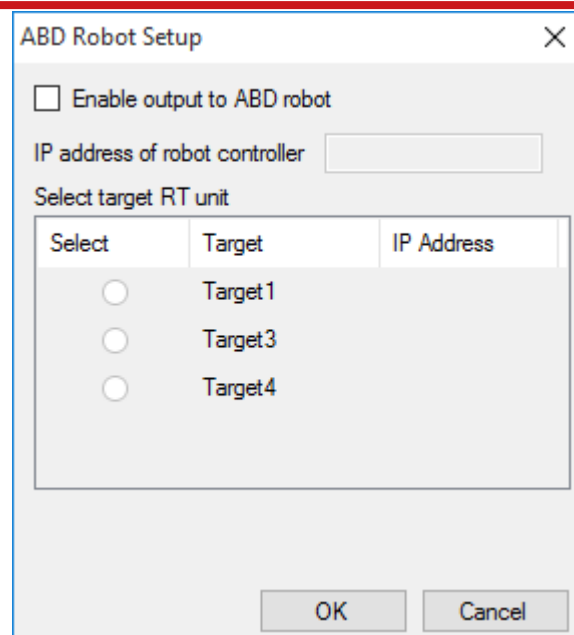

The dialog box is titled "ABD Robot Setup" and has a close button (X) in the top right corner. It contains the following elements:

- A checkbox labeled "Enable output to ABD robot".
- A text input field labeled "IP address of robot controller".
- A section titled "Select target RT unit" containing a table with three columns: "Select", "Target", and "IP Address".
- Three radio buttons in the "Select" column, corresponding to "Target1", "Target3", and "Target4" in the "Target" column.
- "OK" and "Cancel" buttons at the bottom right.

Select	Target	IP Address
<input type="radio"/>	Target1	
<input type="radio"/>	Target3	
<input type="radio"/>	Target4	

The standard IP address for the ABD steering robot is 195.0.0.100. The robot can trigger tests based on one target. For example, it can trigger a test when target 3 is within 30 m of the hunter vehicle. Choose which target measurements should be sent to the robot. Targets can be either mobile targets or Fixed points.

Note that the RT-Range connects the Ethernet in one vehicle to the Ethernet in the other vehicle. When there are two robots, one in each vehicle, then the RT-Range cannot be connected to both robots unless the IP address of the robot is changed. There is a safety

risk if care is not taken when using two robots. Make sure you understand which RT-Range and which RT is sending data to which robot and how it is getting there.

Later versions of the RT-Range and robot software can identify problems by identifying the serial number of the RT in the robot software. Older versions cannot do this and it is essential to get the configuration right.

**Range acceleration filter.** The Range acceleration filter window allows the relative acceleration between hunter and individual targets to be filtered. The accelerations are filtered before they are used in any calculations. One tab is shown for each defined target. Once the Enable Range acceleration filter has been selected, it is possible to choose from one of five different filters:

- General
- Butterworth
- Bessel
- Chebyshev (0.5 dB)
- Chebyshev (2.0 dB)

The Cut off frequency of each filter can be defined as well as the Damping ratio of the General filter. The effects of the filter are summarised in the lower half of the Acceleration filter window.

Note that, if the data from the target has too many dropped packets because of the radio then the filter will automatically be reset. The RT-Range will fill in occasional dropped packets and try to maintain the filter.

**Longitudinal Range Offset of Target...** The Longitudinal Range Offset is normally configured using the Quick Config, Longitudinal Offset page. It can be configured here too. This value will show the value that is *committed* to the RT-Range. If the value has not been committed using the Longitudinal Offset page, but is being used until the RT-Range is reset, then the real-time value will not be read from the RT-Range.

The Longitudinal Range Offset will be added to the longitudinal range that has been computed. This allows for small adjustments to the longitudinal range that is output.

**Lateral Range Offset of Target...** The Lateral Range Offset is normally configured using the Quick Config, Lateral Offset page. It can be configured here too. This value will show the value that is *committed* to the RT-Range. If the value has not been committed using the Lateral Offset page, but is being used until the RT-Range is reset, then the real-time value will not be read from the RT-Range.

The Lateral Range Offset will be added to the lateral range that has been computed. This allows for small adjustments to the lateral range that is output.


**Advanced.** The Advanced option box is used for sending advanced commands to the RT-Range and is normally used for testing. There are some advanced commands that the user may want to configure. Table 16 lists some of the advanced commands that may be useful.

**Table 16. Advanced commands**

Command	Description
-range_meas_plane_hunter -range2_meas_plane_hunter -range3_meas_plane_hunter -range4_meas_plane_hunter	These commands are used to change the measurement plane used for each target from the horizontal plane (2D) to the hunter plane (3D). Figure 74 shows the difference diagrammatically. Further explanation is available in the Calculation details section ( <a href="#">page 139</a> ) at the end of the manual
-target1_rate[xx.x] -target2_rate[xx.x] -target3_rate[xx.x] -target4_rate[xx.x]	These commands are used to advise the RT-Range of the expected data rate for the target. They are essential when using the acceleration extrapolation filter (below)
-range_extrapol_filt[x.x]_[y.y]_[z.z]_[a.a]_[b.b] -range2_extrapol_filt[x.x]_[y.y]_[z.z]_[a.a]_[b.b] -range3_extrapol_filt[x.x]_[y.y]_[z.z]_[a.a]_[b.b] -range4_extrapol_filt[x.x]_[y.y]_[z.z]_[a.a]_[b.b]	These commands are used to set an acceleration filter that is used to extrapolate the position and velocity of the target vehicle when real-time data is not needed. It is essential to set the expected target data rate when using these commands
-can_timeref_gps -can_timeref_utc	These commands configure the CAN target time messages output by the hunter to be with reference to GPS time or UTC time. By default the target time messages are with reference to GPS time

NAVconfig does include filter design for the angular acceleration filter. Other coefficients can be computed using NAVconfig, read from the mobile.cfg file and then transferred to the RT-Range advanced commands.

**Figure 84. Range measurement plane**

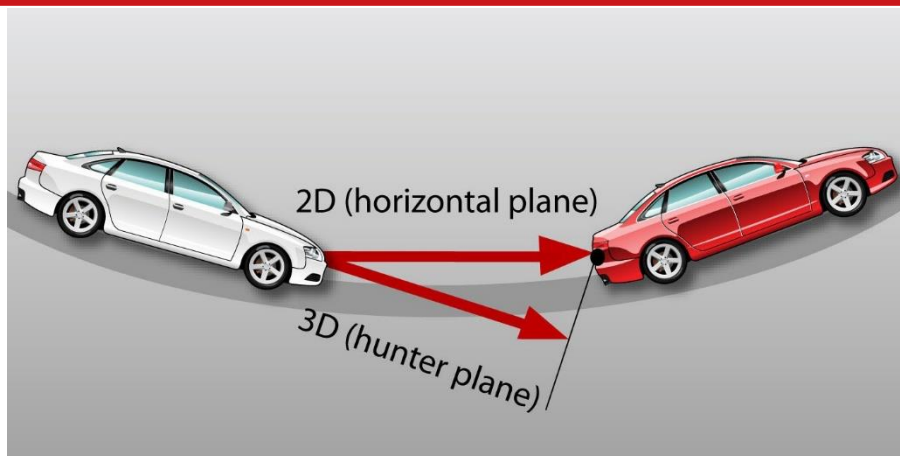


### *Committing the configuration to the RT3000v3*

The commit screen allows you to send the RT-Range configuration to the RT3000v3. The IP address of the RT3000v3 is required for this. The IP address is usually 195.0.0.*n* where *n* is the serial number of the RT-Range RT3000v3. The IP address is marked on the delivery note.

Figure 85 shows the Commit page of the RT-Range Configuration Wizard.


**Figure 85. Commit page in the RT-Range Configuration Wizard**

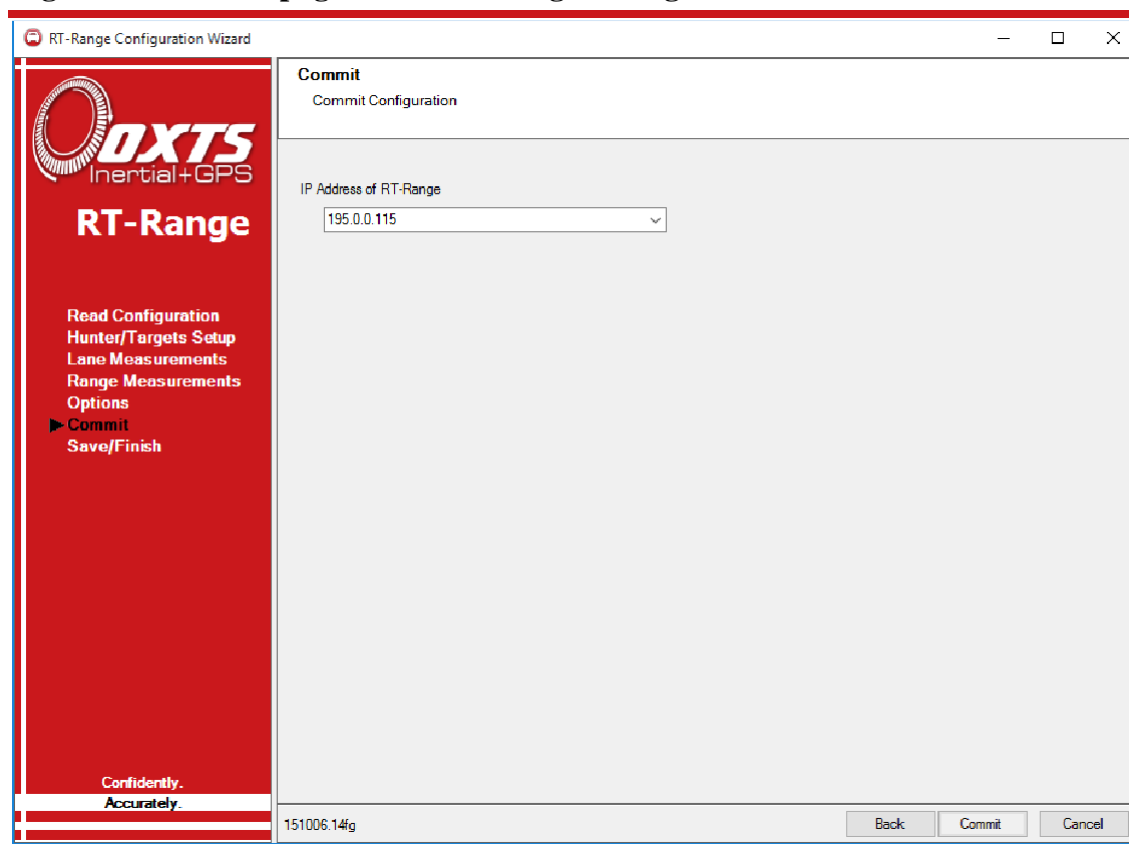

### *Saving a copy of the RT-Range configuration locally*

Before finishing, it is possible to save a copy of the settings in a file on the local computer. This is useful for storing configurations for several vehicles or several setups on one vehicle. The Finish page also lets you know if the settings have been committed successfully to the RT-Range system or not. Figure 88 shows the Finish page.

**Figure 86. Finish page in the RT-Range Configuration Wizard**

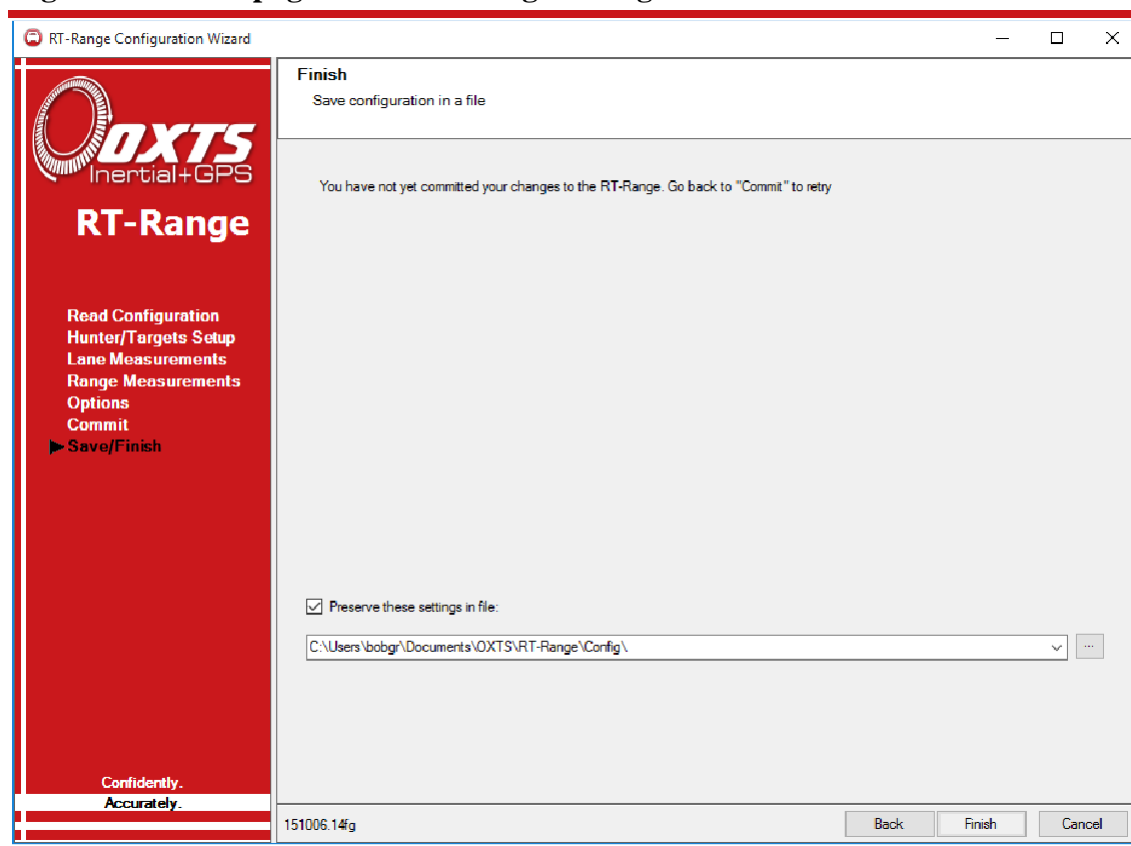

To save a copy of the setting in a local file check the Preserve these settings in file check box and enter the filename. The RT-Range software will make the folder automatically if it does not exist.

## RT-Range Post-Processing Wizard

The RT-Range Post-Processing Wizard is used to reprocess the NCOM files of hunter and target vehicles and extract the lane position or range measurements in CSV file format. This might be required if the communication link was not installed, failed to work or the results are required without prediction. It can also be used to reprocess the data using different settings (for example, different positions for Points A, B or C.)

The RT-Range Post-Processing Wizard can also be used to convert RCOM files to text. The RCOM file can be recorded in real time or made by post-processing NCOM files.

### Overview


There are one or two stages required for post-processing. If the NCOM files are not available for every vehicle, then it will be necessary to post-process the RD files that are

recorded in the RTs. Once all the NCOM files are available the RT-Range Post-Processing Wizard can be used to convert the NCOM files to RCOM and then to CSV.

Figure 87 and Figure 88 show the two stages of the workflow. The RD files are logged internally in the RT; these can be downloaded and reprocessed using the RT Post-process software. There is no need to use the RT Post-process software to convert the NCOM file to CSV. Alternatively, the NCOM file can be logged by a separate PC in each vehicle using Enginuity; this means you do not need to post-process the RD files.


**Figure 87. Workflow to convert RD files to NCOM files**

---

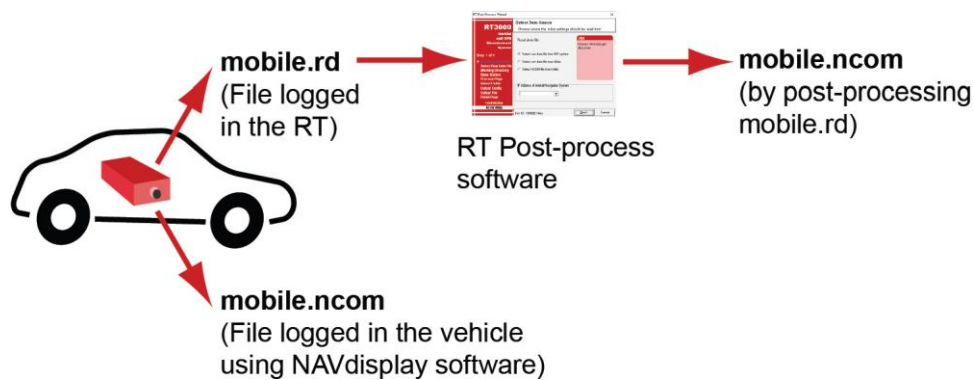



**Figure 88. Workflow to convert NCOM files to RCOM and CSV files**

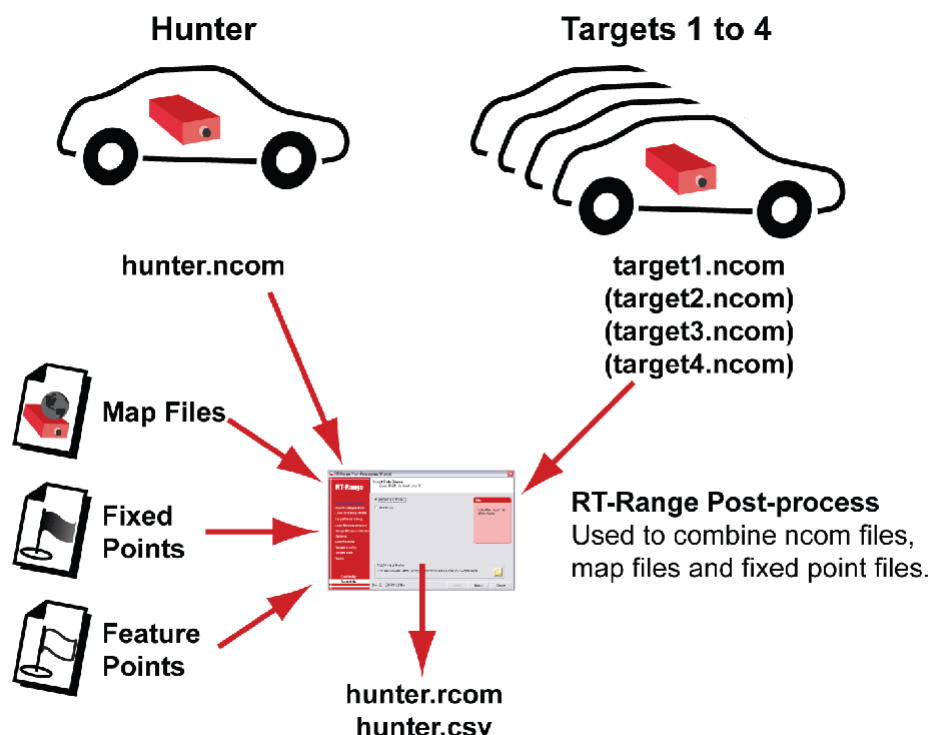

Once all the NCOM files are available the RT-Range Post-process software can be used to combine them together. The settings can be changed; one of the target vehicles can be used as the hunter so that measurements in the reference frame of the target vehicle can be obtained; different maps and Fixed points can be selected.


The RT-Range Post-process software outputs an RCOM file, just like the file logged by the Real-Time Display. It can export this RCOM file to CSV format so that it can be loaded in to Excel, MATLAB or other software packages.

The RT-Range Post-Processing Wizard can also be used to convert captured RCOM files and turn them into CSV format. When an RCOM file is selected then the wizard will jump directly to the Select Fields page.

## Select Data Source

To reprocess the data using RT-Range Post-process it is essential to have an NCOM file from the hunter vehicle; Figure 91 shows the screen for selecting the NCOM file from the hunter vehicle. If an RCOM file is available, then it can be exported to CSV format but the parameters used for processing the data cannot be changed.


**Figure 89. Hunter NCOM file selection in the RT-Range Post-Processing Wizard**

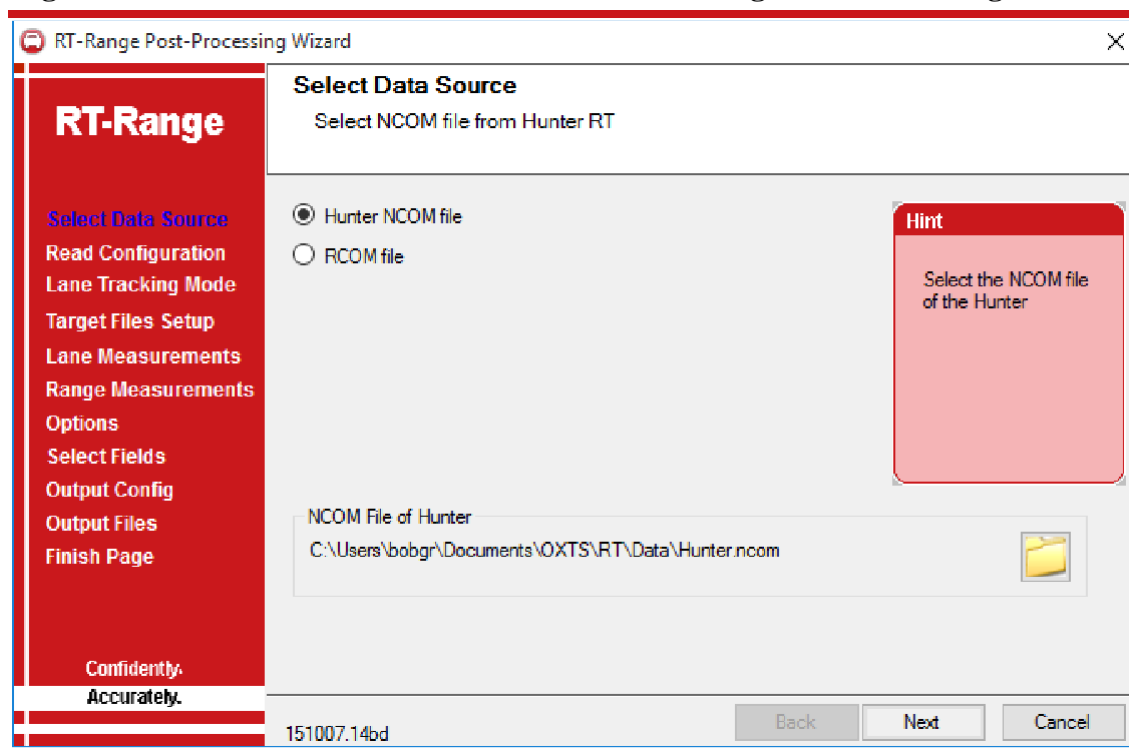

### *Read Configuration*

If you have saved a configuration in a file, or if you want to use the configuration that is stored in your RT-Range, then you can load these into the RT-Range Post-Processing Wizard. Figure 90 shows the Read Configuration options in the RT-Range Post-Processing Wizard.

Figure 90. Read Configuration in RT-Range Post-Processing Wizard

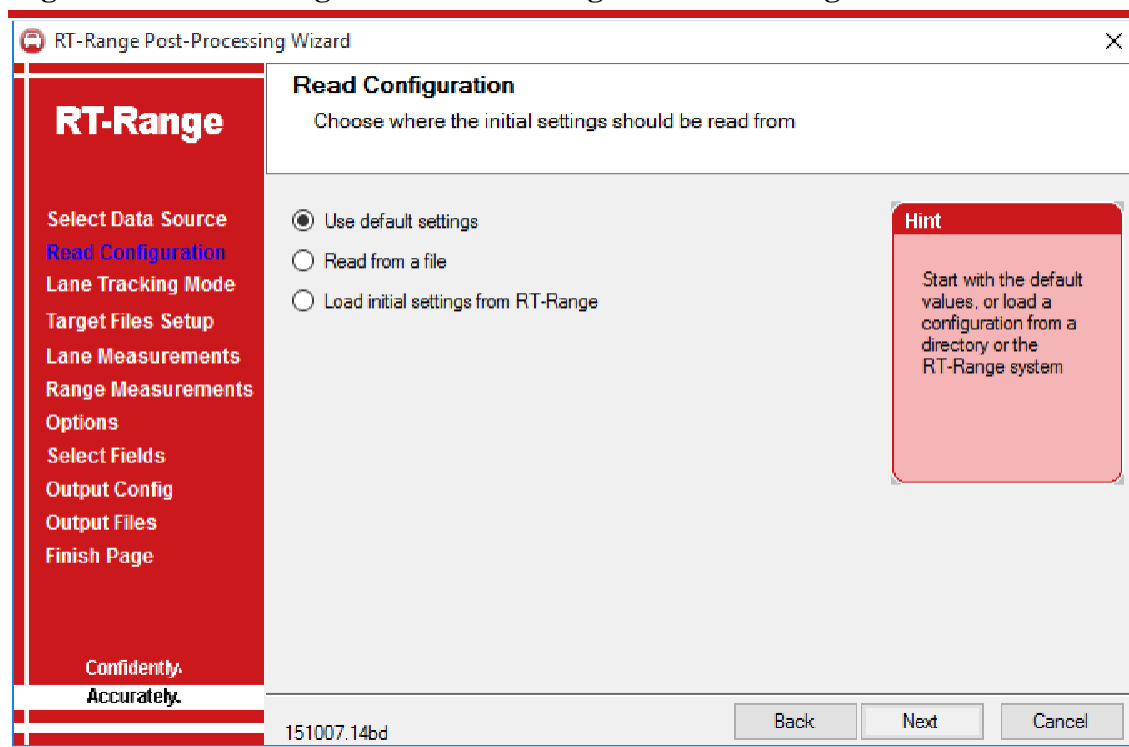

**Default Settings.** To use the default settings, select the radio button. The lane and range settings will contain the default settings that the RT-Range system was delivered with.

**Read from file.** The range and lane parameters will be read from the defined `RTRange.cfg` file. To select a different configuration file, use the browse button to select a different file.


**Load Initial Settings from RT-Range.** To use the same settings as the RT-Range system select the radio button and make sure the RT-Range system is connected to the network via Ethernet. Enter the correct IP address in the edit box to download the configuration file from the RT-Range hardware.

### *Lane Tracking Mode*

The RT-Range Post-Processing Wizard can compare the position of the hunter vehicle to the lane markings. Select 'Use Map file' to perform the lane position measurements and select a map file.

Figure 91 shows the Lane Position File Mode page of the RT-Range Post-Processing Wizard.

**Figure 91. Lane Position Map file selection in RT-Range Post-Processing Wizard**

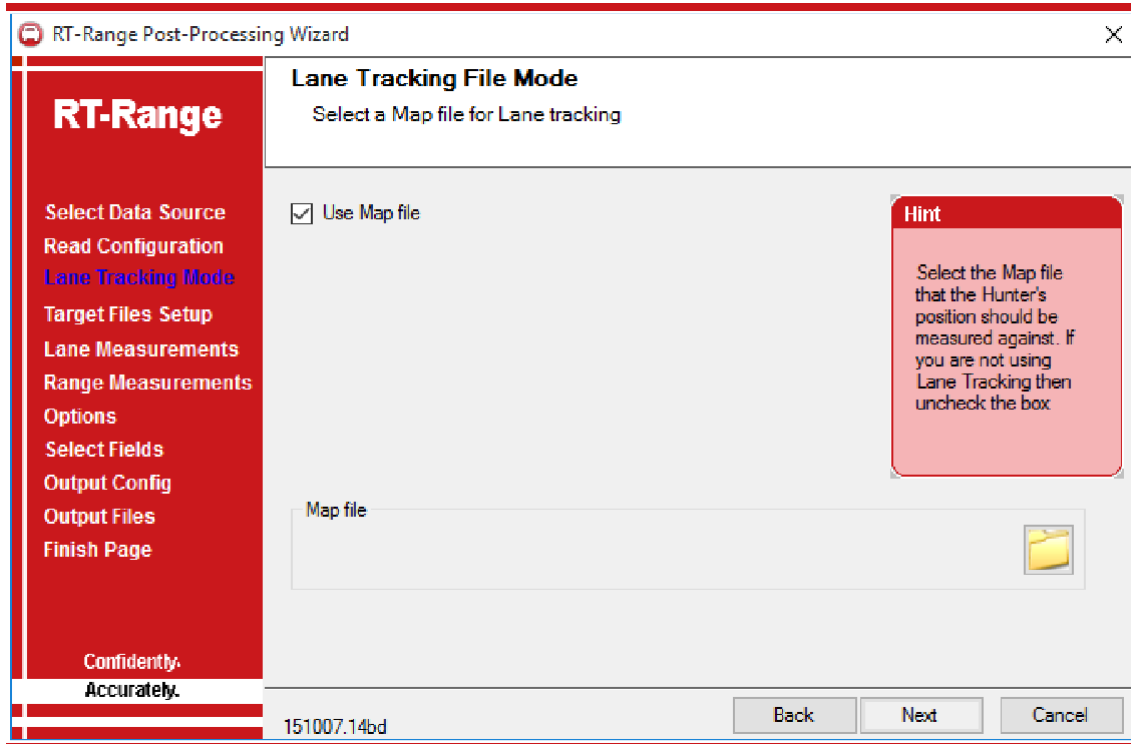


### *Target setup*

The RT-Range Post-Processing Wizard can compute the range from the hunter vehicle to Fixed points or to target vehicles. Either a Fixed point file or a target NCOM file is required to do this. The range mode can be disabled so that no range measurements are output.

Figure 92 shows the Target Files Setup page of the RT-Range Post-Processing Wizard.

Figure 92. Target Files Setup page in the RT-Range Post-Processing Wizard

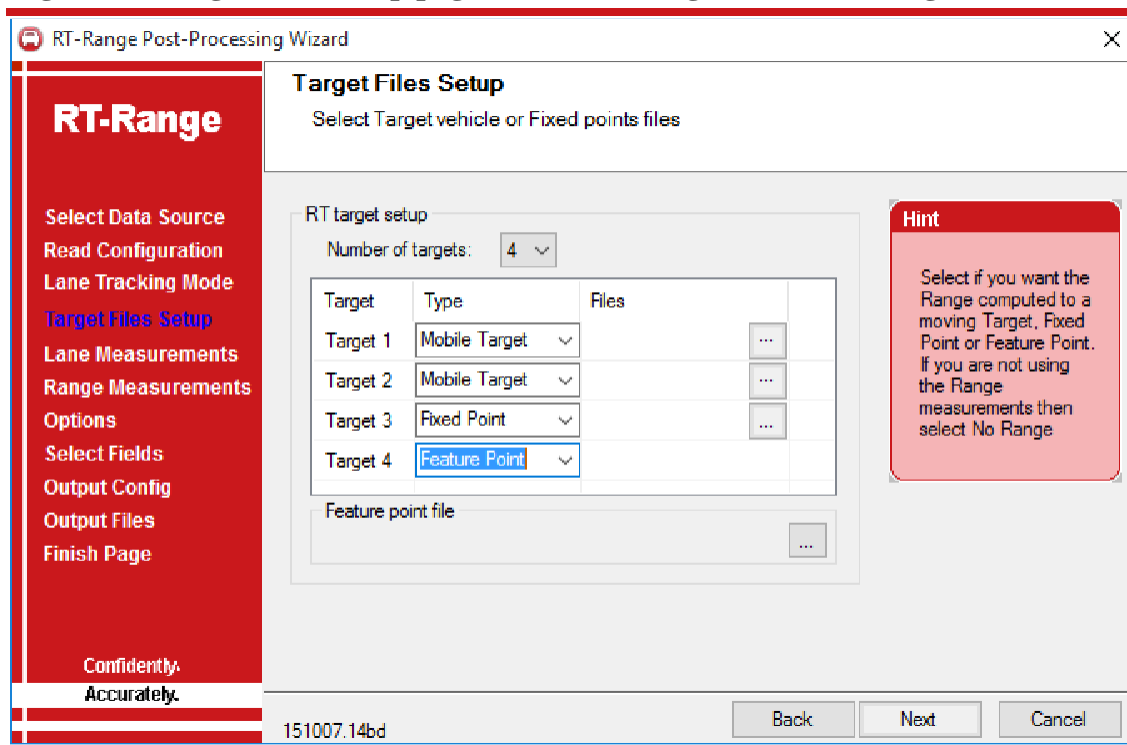

**RT-Range**

Select Data Source  
Read Configuration  
Lane Tracking Mode  
**Target Files Setup**  
Lane Measurements  
Range Measurements  
Options  
Select Fields  
Output Config  
Output Files  
Finish Page

Confidently.  
Accurately.

151007.14bd

**Target Files Setup**  
Select Target vehicle or Fixed points files

RT target setup  
Number of targets: 4

Target	Type	Files
Target 1	Mobile Target	...
Target 2	Mobile Target	...
Target 3	Fixed Point	...
Target 4	Feature Point	...

Feature point file ...

**Hint**  
Select if you want the Range computed to a moving Target, Fixed Point or Feature Point. If you are not using the Range measurements then select No Range

Back Next Cancel

Select the number of targets using the **Number of targets** dropdown list.

**Mobile Target.** To compute the range from the hunter vehicle to a mobile target select Mobile Target from the dropdown list and select the associated target NCOM file.

**Fixed point.** To compute the range from the hunter vehicle to a Fixed point select Fixed point from the dropdown list and select a Fixed point file. The Fixed point file has to be saved using the Real-Time Display software.

**Feature point.** To compute the range from the hunter vehicle to a Feature point select Feature point from the dropdown list and select a Feature point file (\*.FTL).

#### *Lane Measurements setup*

This is the same configuration page as the car lane measurements in the RT-Range Configuration Wizard. It is provided so changes can be made to the positions of points A, B and C in post-processing. This page will only be shown by the wizard if a map file has been selected, otherwise it will be skipped.


## Range Measurements

This is the same configuration page as the car range measurements in the RT-Range Configuration Wizard. It is provided so changes can be made to the positions of the sensor, bulls-eye and polygon in post-processing.

## Options

Figure 93 shows the Options page of the RT-Range Post-Processing Wizard.

**Figure 93. Options page in the RT-Range Post-Processing Wizard**

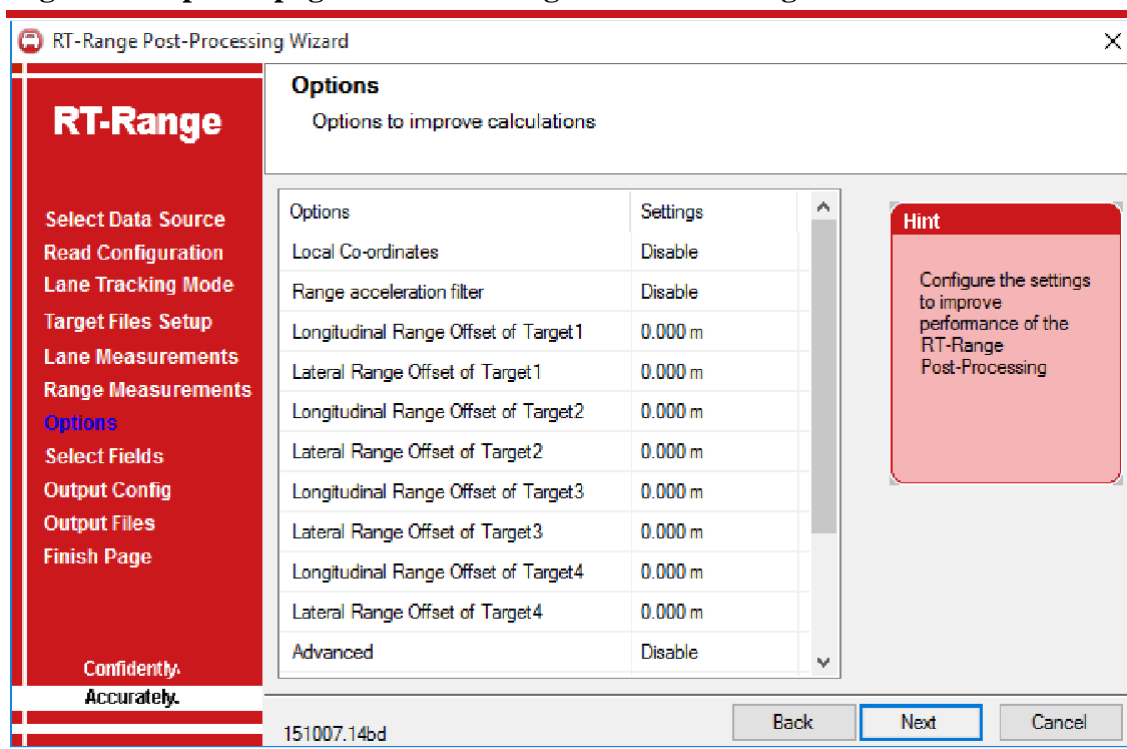

Options	Settings
Local Co-ordinates	Disable
Range acceleration filter	Disable
Longitudinal Range Offset of Target1	0.000 m
Lateral Range Offset of Target1	0.000 m
Longitudinal Range Offset of Target2	0.000 m
Lateral Range Offset of Target2	0.000 m
Longitudinal Range Offset of Target3	0.000 m
Lateral Range Offset of Target3	0.000 m
Longitudinal Range Offset of Target4	0.000 m
Lateral Range Offset of Target4	0.000 m
Advanced	Disable

These options behave in the same way as the RT-Range Configuration Wizard.


The Advanced option can be used to manually enter commands to configure RT-Range Post-Processing. Contact OxTS for further information.

## Set Fields

The fields in the CSV file can be selected individually. If only some fields are needed, then this can significantly reduce the size of the CSV file.

To select which fields should be output check or uncheck the fields, as shown in Figure 94.

**Figure 94. Set Fields in the RT-Range Post-Processing Wizard**

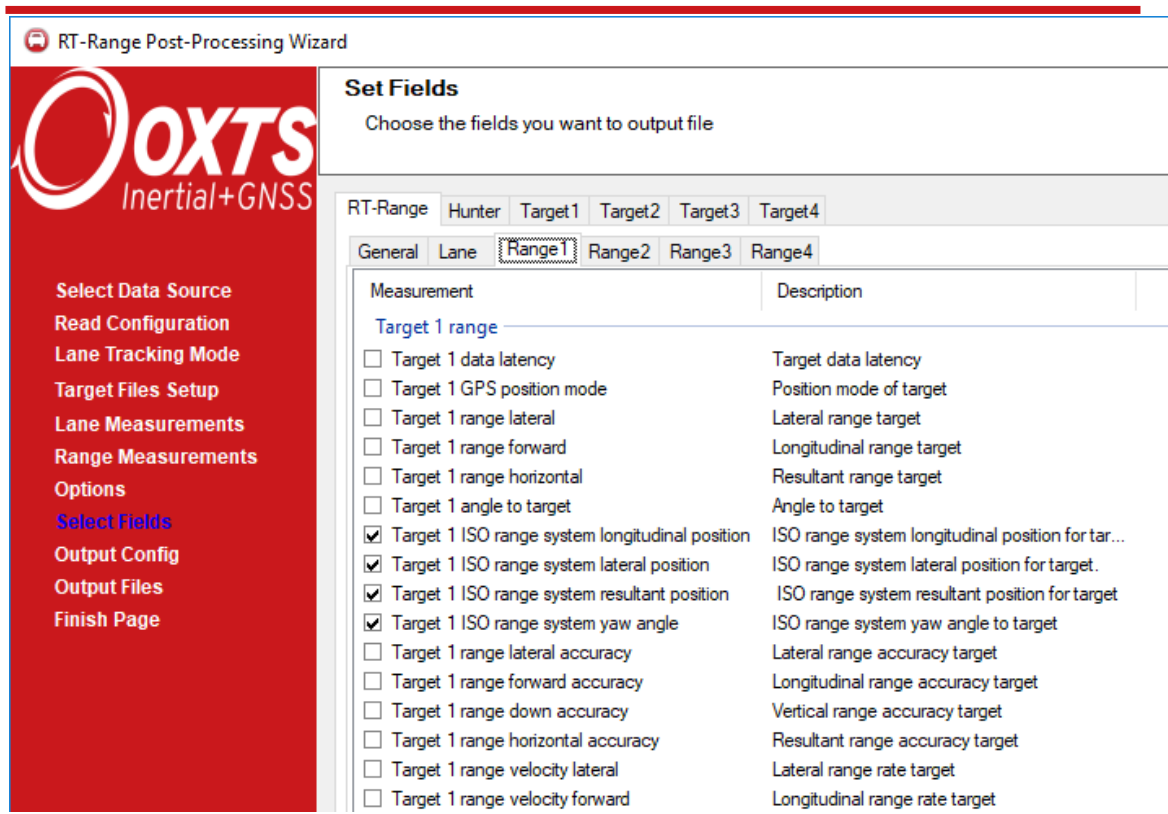

**RT-Range Post-Processing Wizard**

**Set Fields**  
Choose the fields you want to output file

RT-Range Hunter Target1 Target2 Target3 Target4

General Lane Range1 Range2 Range3 Range4


Measurement	Description
<b>Target 1 range</b>	
<input type="checkbox"/> Target 1 data latency	Target data latency
<input type="checkbox"/> Target 1 GPS position mode	Position mode of target
<input type="checkbox"/> Target 1 range lateral	Lateral range target
<input type="checkbox"/> Target 1 range forward	Longitudinal range target
<input type="checkbox"/> Target 1 range horizontal	Resultant range target
<input type="checkbox"/> Target 1 angle to target	Angle to target
<input checked="" type="checkbox"/> Target 1 ISO range system longitudinal position	ISO range system longitudinal position for tar...
<input checked="" type="checkbox"/> Target 1 ISO range system lateral position	ISO range system lateral position for target.
<input checked="" type="checkbox"/> Target 1 ISO range system resultant position	ISO range system resultant position for target
<input checked="" type="checkbox"/> Target 1 ISO range system yaw angle	ISO range system yaw angle to target
<input type="checkbox"/> Target 1 range lateral accuracy	Lateral range accuracy target
<input type="checkbox"/> Target 1 range forward accuracy	Longitudinal range accuracy target
<input type="checkbox"/> Target 1 range down accuracy	Vertical range accuracy target
<input type="checkbox"/> Target 1 range horizontal accuracy	Resultant range accuracy target
<input type="checkbox"/> Target 1 range velocity lateral	Lateral range rate target
<input type="checkbox"/> Target 1 range velocity forward	Longitudinal range rate target

**Select Data Source**  
**Read Configuration**  
**Lane Tracking Mode**  
**Target Files Setup**  
**Lane Measurements**  
**Range Measurements**  
**Options**  
**Select Fields**  
**Output Config**  
**Output Files**  
**Finish Page**

## Output Config

The Output Config page of the RT-Range Post-Processing Wizard allows you to set the conditions for writing the output file and some of the units for the measurements. Figure 95 shows the Output Config page.

**Figure 95. Output Config options**

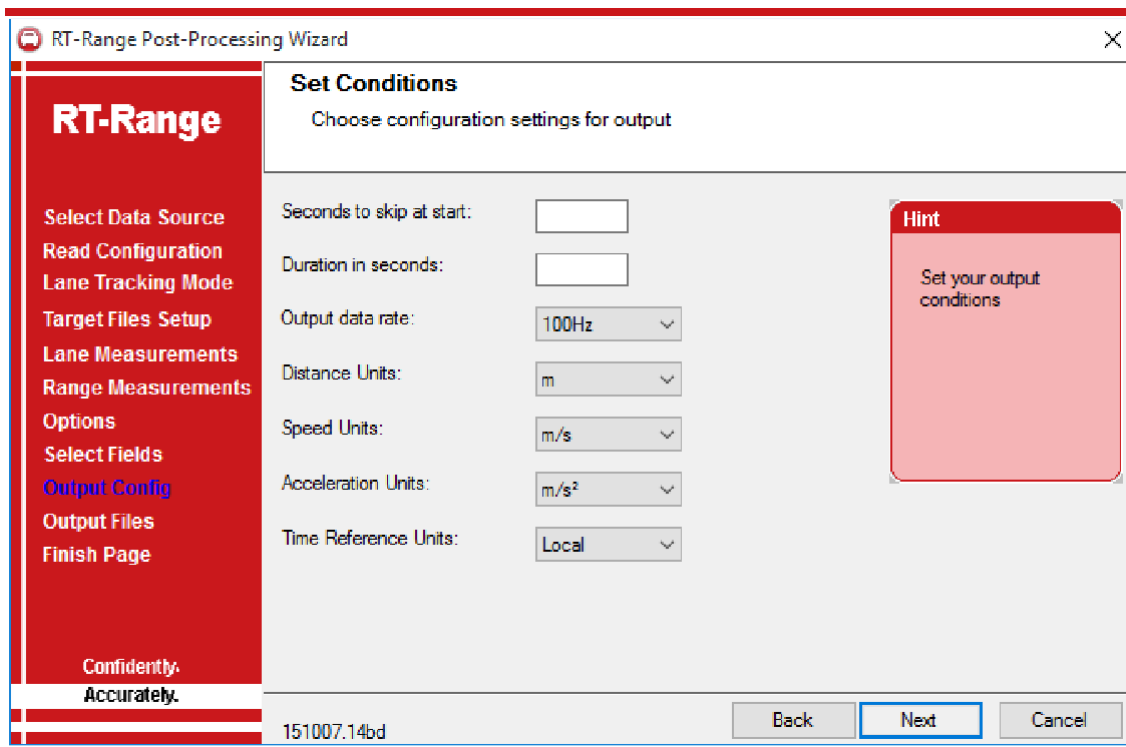

**Seconds to skip at start.** If a value is entered for this option, then the output CSV file will have the first part of the data truncated from the file. This option helps split long CSV files in to smaller sections.

**Duration in seconds.** If a value is entered for this option then the CSV file will only include a short duration of data, rather than all the data until the end of the file.

**Output data rate.** This option can be used to decimate the output data to a lower data rate, e.g. 25 Hz.

**Distance Units.** The units metres, feet and yards can be selected for the distance-based measurements (e.g. longitudinal range).

**Speed Units.** The units m/s, km/h, mph and knots can be selected for the velocity-based measurements.



**Acceleration Units.** The acceleration can be measured in  $\text{m/s}^2$  or in  $g$ . Note that  $g$  is an approximation since gravity is not constant across the earth.


**Time Reference Units.** The time field of the CSV file can be changed so that it relates to different clock standards. The reference clock can either be the local time of the PC that is running the RT-Range Post-Processing Wizard; UTC (GMT) time or GPS time.

The RT-Range measures in GPS time and UTC time by default. GPS and UTC time are currently 16 seconds different with 12:00:00 UTC time being 12:00:16 GPS time. The local time is computed by taking the time zone of the local computer and adding it to UTC time.

#### Output file

The output file needs to be chosen for the measurements. Figure 98 shows the Select output file page of the RT-Range Post-Processing Wizard.

**Figure 96. Output Files page in the RT-Range Post-Processing Wizard**

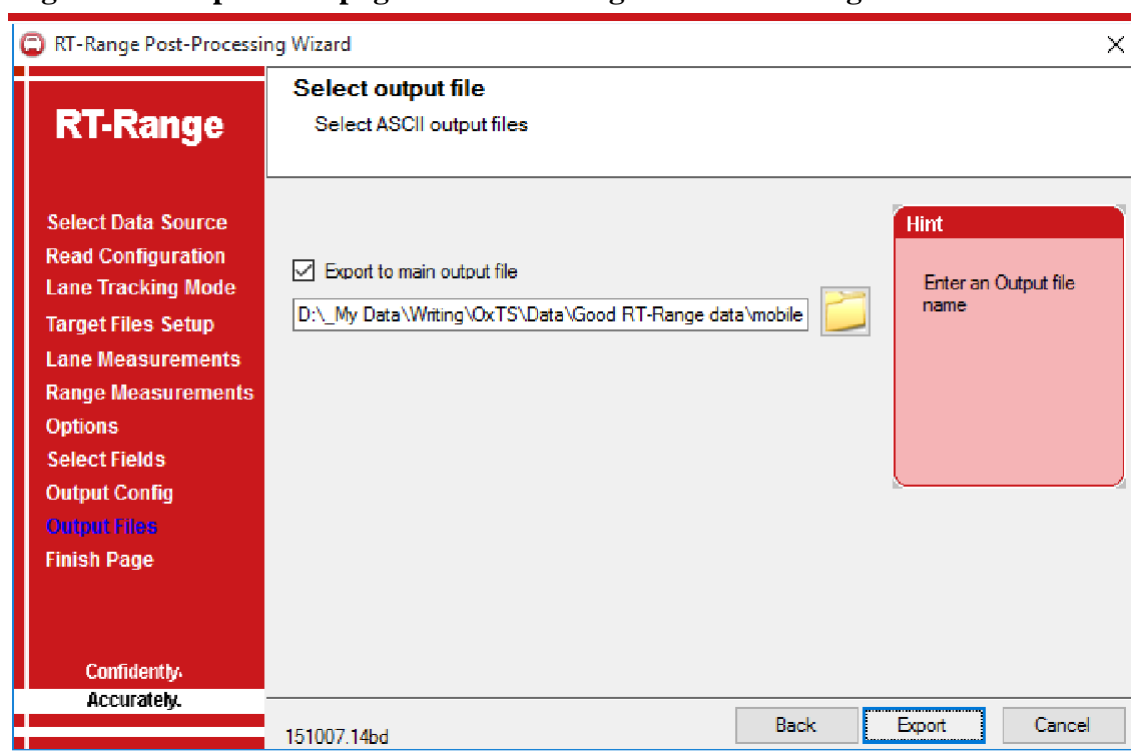


Check the **Export to main output file** checkbox and enter a filename for the output file.

When the **Export** button is clicked, the software will start processing the data. This may take some time for large files.

## Finish Page

The Finish Page allows you to launch Explorer in the folder where the output file is created. Figure 97 shows the Finish Page of the RT-Range Post-Processing Wizard.

**Figure 97. Finish Page in the RT-Range Post-Processing Wizard**

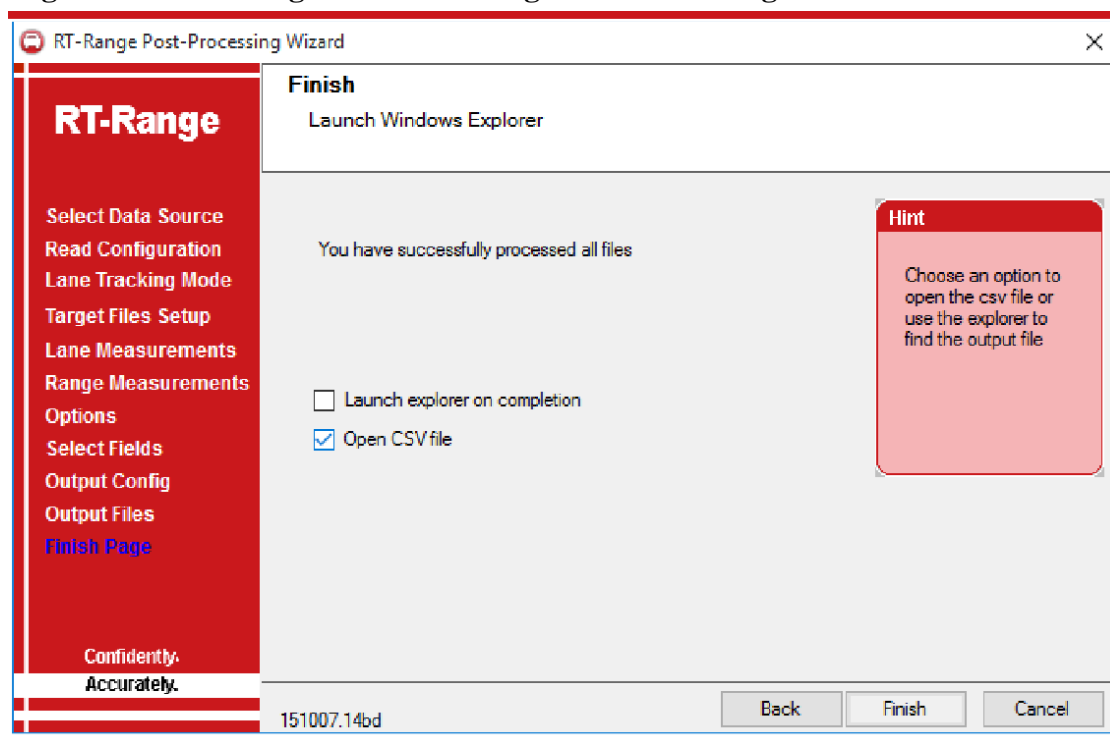

### Outputs

The RT3000v3 outputs its data over Ethernet and over CAN. The Ethernet output is proprietary and is not described here; contact OxTS for more information. The CAN bus output is described in this section of the manual.

A CAN DBC file is generated by the wizard in the CAN page in the RT-Range software. This DBC file reflects the configuration of the CAN bus that the user chooses.

### CAN bus messages

Table 17 and Table 18 list the CAN messages that the RT3000v3 puts on the CAN bus and the identifiers that are used for these messages. These are the default identifiers, but they can be changed using the configuration software. The signals in each message are listed in the tables that follow.

**Table 17. Default CAN bus messages for lane position measurements**

Identifier (hex)	Data contents	See
7A0h	Map identifier and distance	Table 19
7A1h	Line on left of Point A	Table 20
7A2h	Line on right of Point A	Table 21
7A3h	Lines 1 to 4 to Point A	Table 22
7A4h	Lines 5 to 8 to Point A	Table 23
7A5h	Line to Point B	Table 24
7A6h	Line to Point C	Table 25
7A7h	Lines 1 to 4 to Point A velocity	Table 26
7A8h	Lines 5 to 8 to Point A velocity	Table 27
7A9h	Trajectory of A	Table 28
7AAh	Curvature of Lines 1 to 4	Table 29
7ABh	Curvature of Lines 5 to 8	Table 30
7ACh	Lines 1 to 4 to Point B	Table 31
7ADh	Lines 5 to 8 to Point B	Table 32
7AEh	Lines 1 to 4 to Point C	Table 33
7AFh	Lines 5 to 8 to Point C	Table 34
5A0h	Lane Point A lever arm	Table 35
5A1h	Lane Point B lever arm	Table 36
5A2h	Lane Point C lever arm	Table 37

**Table 18. Default CAN bus messages for range measurements**

Identifier (hex)				Data contents	Table
T1	T2	T3	T4		
7B0h	7C0h	7D0h	7E0h	Longitudinal measurements	Table 38
7B1h	7C1h	7D1h	7E1h	Lateral measurements	Table 39
7B2h	7C2h	7D2h	7E2h	Resultant measurements	Table 40
7B3h	7C3h	7D3h	7E3h	Position of hunter in local co-ordinates	Table 41
7B4h	7C4h	7D4h	7E4h	Position of target in local co-ordinates	Table 42
7B5h	7C5h	7D5h	7E5h	Status information	Table 43
7B6h	7C6h	7D6h	7E6h	Time gap	Table 44
7B7h	7C7h	7D7h	7E7h	Range in local co-ordinates	Table 45
7B8h	7C8h	7D8h	7E8h	Polygon measurements	Table 46
7B9h	7C9h	7D9h	7E9h	Feature point information	Table 47
5B0h	5C0h	5D0h	5E0h	Range offset	Table 48
5B1h	5C1h	5D1h	5E1h	Range Fixed point latitude, longitude	Table 49
5B2h	5C2h	5D2h	5E2h	Range Fixed point altitude, heading	Table 50
5B3h	5C3h	5D3h	5E3h	Range sensor lever arm	Table 51
5B4h	5C4h	5D4h	5E4h	Range bulls-eye lever arm	Table 52
5B5h	5C5h	5D5h	5E5h	Range target vehicle parameters	Table 53
5B6h	5C6h	5D6h	5E6h	Range accuracy	Table 54
5B7h	5C7h	5D7h	5E7h	Range Feature point latitude, longitude	Table 55
5B8h	5C8h	5D8h	5E8h	Range Feature point altitude, heading	Table 56

T1, T2, T3 and T4 are abbreviated from Target1, Target2, Target3 and Target4.

In addition to these messages, the RT300v3 can output the navigation CAN messages from the target RTs. This allows all measurements to be collected in one vehicle. See the RT manual for details of the target navigation CAN messages.

## Heartbeat messages

Without a heartbeat message the RT-Range's CAN bus may not output anything until all the vehicles are configured, initialised and range measurements are being computed. This can make it difficult to check the operation in the garage before going out to test.

To avoid this, the RT-Range can output "heartbeat" CAN messages. These will be output even if range measurements and lane tracking measurements are not being computed and if no data is being received from the RTs. The messages are output approximately once per second.

The “heartbeat” messages are the Range Status messages (one for each target) and the Lane Map Status message. The Range Status heartbeat messages will only be output if the associated target is configured; if you have no targets configured then no Range Status heartbeat messages will be output. Similarly, if there is no map in the RT-Range then the Lane Map Status message will not be output. These messages will not be output if they are disabled in the CAN configuration. If no heartbeat messages are received, check that some operation of the RT-Range is configured and that the CAN bus is configured to output the heartbeat messages.

### Table heading definitions

The fields in the tables have the following meanings.

**Offset (bits).** This is the offset into the message where the signal starts. To compute the offset in bytes, divide the value by 8.

**Length (bits).** This is the length of the signal in bits. To compute the length of the signal in bytes, divide the value by 8.

**Type.** This specifies either an unsigned value (U) or a signed value (S).

**Units.** This is the units for the signal.

**Factor.** This is the factor that the integer unit should be multiplied by to get the signal into the units given in the table.

**Offset.** This is the value of the signal when the integer value in the CAN message is zero. It is zero for all the RT signals and can usually be discarded.

### Signals

The following tables describe the signals in each of the messages.

**Table 19. LaneMapStatus, map identifier and distance, identifier 7A0h (1952)**

Offset	Length	Type	Units	Factor		Description
0	32	S	m	0.001	0	RefLineDistAlong: Distance travelled along Line 1.
32	8	U	–	–	–	MapNumber: Map number (FFh means invalid or no map)
40	8	U	–	–	–	Reserved
48	8	U	–	–	–	Reserved
56	8	U	–	–	–	Reserved

Note: If the distance is negative then the RT-Range is not computing the lane position. Lane position measurements will resume when the hunter vehicle drives through the start line. The negative values represent the distance to the start line.

**Table 20. LeftLineLateral, line on left of Point A, identifier 7A1h (1953)**

Offset	Length	Type	Units	Factor		Description
0	16	S	m	0.001	0	LeftLinePosLateral: Lateral distance from Point A to line
16	16	S	m/s	0.01	0	LeftLineVelLateral: Lateral velocity from Point A to line
32	16	S	m/s <sup>2</sup>	0.01	0	LeftLineAccelLateral: Lateral acceleration from Point A to line
48	8	U	–	–	–	LeftLineNumber: Line number on left of Point A
56	8	U	–	–	–	Reserved

Note: When the RT-Range is not computing the lane position, the *line number on left of Point A* will be FFh and the measurements will be 8000h (full scale negative).

**Table 21. RightLineLateral, line on right of Point A, identifier 7A2h (1954)**

Offset	Length	Type	Units	Factor		Description
0	16	S	m	0.001	0	RightLinePosLateral: Lateral distance from Point A to line
16	16	S	m/s	0.01	0	RightLineVelLateral: Lateral velocity from Point A to line
32	16	S	m/s <sup>2</sup>	0.01	0	RightLineAccelLateral: Lateral acceleration from Point A to line
48	8	U	–	–	–	RightLineNumber: Line number on right of Point A
56	8	U	–	–	–	Reserved

Note: When the RT-Range is not computing the lane position, the *line number on right of Point A* will be FFh and the measurements will be 8000h (full scale negative).

**Table 22. Lines1To4PosLateralA, Lines 1 to 4 to Point A, identifier 7A3h (1955)**

Offset	Length	Type	Units	Factor		Description
0	16	S	m	0.001	0	Line1PosLateralA: Distance from Point A to Line 1
16	16	S	m	0.001	0	Line2PosLateralA: Distance from Point A to Line 2
32	16	S	m	0.001	0	Line3PosLateralA: Distance from Point A to Line 3
48	16	S	m	0.001	0	Line4PosLateralA: Distance from Point A to Line 4

Note: When the RT-Range is not computing the lane position then the measurements will be 8000h (full scale negative).

**Table 23. Lines5To8PosLateralA, Lines 5 to 8 to Point A, identifier 7A4h (1956)**

Offset	Length	Type	Units	Factor		Description
0	16	S	m	0.001	0	Line5PosLateralA: Distance from Point A to Line 5
16	16	S	m	0.001	0	Line6PosLateralA: Distance from Point A to Line 6
32	16	S	m	0.001	0	Line7PosLateralA: Distance from Point A to Line 7
48	16	S	m	0.001	0	Line8PosLateralA: Distance from Point A to Line 8

Note: When the RT-Range is not computing the lane position then the measurements will be 8000h (full scale negative).



**Table 24. LinesFromB, line to Point B, identifier 7A5h (1957)**

Offset	Length	Type	Units	Factor		Description
0	16	S	m	0.001	0	LeftFromBPosLateral: Distance from Point B to line on left of A
16	8	U	–	–	–	LeftOfBNumber: Line number on the left of B
24	8	U	–	–	–	RightOfBNumber: Line number on the right of B
32	16	S	1/m	0.0001	0	CurvatureOfB: Instantaneous curvature of Point B

Note: When the RT-Range is not computing the lane position then the measurements will be 8000h (full scale negative). When there is no line number on the left or right of point B then the field will be FFh.

**Table 25. LinesFromC, line to Point C, identifier 7A6h (1958)**

Offset	Length	Type	Units	Factor		Description
0	16	S	m	0.001	0	RightFromCPosLateral: Distance from Point C to line on right of A
16	8	U	–	–	–	LeftOfCNumber: Line number on the left of C
24	8	U	–	–	–	RightOfCNumber: Line number on the right of C
32	16	S	1/m	0.0001	0	CurvatureOfC: Instantaneous curvature of Point C

Note: When the RT-Range is not computing the lane position then the measurements will be 8000h (full scale negative). When there is no line number on the left or right of point C then the field will be FFh.

**Table 26. Lines1To4VelLateralA, Lines 1 to 4 to Point A velocity, identifier 7A7h (1959)**

Offset	Length	Type	Units	Factor		Description
0	16	S	m/s	0.01	0	Line1VelLateralA: Velocity from Point A to Line 1
16	16	S	m/s	0.01	0	Line2VelLateralA: Velocity from Point A to Line 2
32	16	S	m/s	0.01	0	Line3VelLateralA: Velocity from Point A to Line 3
48	16	S	m/s	0.01	0	Line4VelLateralA: Velocity from Point A to Line 4

Note: When the RT-Range is not computing the lane position then the measurements will be 8000h (full scale negative).

**Table 27. Lines5To8VelLateralA, Lines 5 to 8 to Point A velocity, identifier 7A8h (1960)**

Offset	Length	Type	Units	Factor	Description
0	16	S	m/s	0.01	0 Line5VelLateralA: Velocity from Point A to Line 5
16	16	S	m/s	0.01	0 Line6VelLateralA: Velocity from Point A to Line 6
32	16	S	m/s	0.01	0 Line7VelLateralA: Velocity from Point A to Line 7
48	16	S	m/s	0.01	0 Line8VelLateralA: Velocity from Point A to Line 8

Note: When the RT-Range is not computing the lane position then the measurements will be 8000h (full scale negative).

**Table 28. TrajectoryOfA, heading of A relative to surrounding lines and curvature of A, Identifiers 7A9h (1961)**

Offset	Length	Type	Units	Factor	Description
0	16	S	degrees	0.01	0 LeftLineHeadingOfA: Heading with respect to the line to the left of Point A
16	16	S	degrees	0.01	0 RightLineHeadingOfA: Heading with respect to the line to the right of Point A
32	16	S	1/m	0.0001	0 CurvatureOfA: Instantaneous curvature of Point A

Note: When the RT-Range is not computing the lane position then the measurements will be 8000h (full scale negative).

**Table 29. Lines1To4Curvature, curvature of Lines 1 to 4, Identifier 7AAh (1962)**

Offset	Length	Type	Units	Factor	Description
0	16	S	1/m	0.0001	0 Line1Curvature: Curvature of Line 1
16	16	S	1/m	0.0001	0 Line2Curvature: Curvature of Line 2
32	16	S	1/m	0.0001	0 Line3Curvature: Curvature of Line 3
48	16	S	1/m	0.0001	0 Line4Curvature: Curvature of Line 4

Note: When the RT-Range is not computing the lane position then the measurements will be 8000h (full scale negative).

**Table 30. Lines5To8Curvature, curvature of Lines 5 to 8, identifier 7ABh (1963)**

Offset	Length	Type	Units	Factor	Description
0	16	S	1/m	0.0001	0 Line5Curvature: Curvature of Line 5
16	16	S	1/m	0.0001	0 Line6Curvature: Curvature of Line 6
32	16	S	1/m	0.0001	0 Line7Curvature: Curvature of Line 7
48	16	S	1/m	0.0001	0 Line8Curvature: Curvature of Line 8

Note: When the RT-Range is not computing the lane position then the measurements will be 8000h (full scale negative).

**Table 31. Lines1To4PosLateralB, Lines 1 to 4 to Point B, identifier 7ACh (1964)**

Offset	Length	Type	Units	Factor	Description
0	16	S	m	0.001	0 Line1PosLateralB: Distance from Point B to Line 1
16	16	S	m	0.001	0 Line2PosLateralB: Distance from Point B to Line 2
32	16	S	m	0.001	0 Line3PosLateralB: Distance from Point B to Line 3
48	16	S	m	0.001	0 Line4PosLateralB: Distance from Point B to Line 4

Note: When the RT-Range is not computing the lane position then the measurements will be 8000h (full scale negative).

**Table 32. Lines5To8PosLateralB, Lines 5 to 8 to Point B, identifier 7ADh (1965)**

Offset	Length	Type	Units	Factor	Description
0	16	S	m	0.001	0 Line5PosLateralB: Distance from Point B to Line 5
16	16	S	m	0.001	0 Line6PosLateralB: Distance from Point B to Line 6
32	16	S	m	0.001	0 Line7PosLateralB: Distance from Point B to Line 7
48	16	S	m	0.001	0 Line8PosLateralB: Distance from Point B to Line 8

Note: When the RT-Range is not computing the lane position then the measurements will be 8000h (full scale negative).

**Table 33. Lines1To4PosLateralC, Lines 1 to 4 to Point C, identifier 7AEh (1966)**

Offset	Length	Type	Units	Factor	Description
0	16	S	m	0.001	0 Line1PosLateralC: Distance from Point C to Line 1
16	16	S	m	0.001	0 Line2PosLateralC: Distance from Point C to Line 2
32	16	S	m	0.001	0 Line3PosLateralC: Distance from Point C to Line 3
48	16	S	m	0.001	0 Line4PosLateralC: Distance from Point C to Line 4

Note: When the RT-Range is not computing the lane position then the measurements will be 8000h (full scale negative).

**Table 34. Lines5To8PosLateralC, Lines 5 to 8 to Point C, identifier 7AFh (1967)**

Offset	Length	Type	Units	Factor	Description
0	16	S	m	0.001	0 Line5PosLateralC: Distance from Point C to Line 5
16	16	S	m	0.001	0 Line6PosLateralC: Distance from Point C to Line 6
32	16	S	m	0.001	0 Line7PosLateralC: Distance from Point C to Line 7
48	16	S	m	0.001	0 Line8PosLateralC: Distance from Point C to Line 8

Note: When the RT-Range is not computing the lane position then the measurements will be 8000h (full scale negative).

**Table 35. LanePointALeverArm: lever arm from the RT to the lane measurement Point A, identifier 5A0h (1440)**

Offset	Length	Type	Units	Factor	Description
0	16	I	m	0.001	0 LanePointALeverArmX: Lever arm from the RT to lane measurement point A in the $x$ direction.
16	16	I	m	0.001	0 LanePointALeverArmY: Lever arm from the RT to lane measurement point A in the $y$ direction.
32	16	I	m	0.001	0 LanePointALeverArmZ: Lever arm from the RT to lane measurement point A in the $z$ direction.

**Table 36. LanePointBLeverArm: Lever arm from the RT to the lane measurement Point B, identifier 5A1h (1441)**

Offset	Length	Type	Units	Factor		Description
0	16	I	m	0.001	0	LanePointBLeverArmX: Lever arm from the RT to lane measurement point B in the $x$ direction.
16	16	I	m	0.001	0	LanePointBLeverArmY: Lever arm from the RT to lane measurement point B in the $y$ direction.
32	16	I	m	0.001	0	LanePointBLeverArmZ: Lever arm from the RT to lane measurement point B in the $z$ direction.

**Table 37. LanePointCLeverArm: Lever arm from the RT to the lane measurement Point C, identifier 5A2h (1442)**

Offset	Length	Type	Units	Factor		Description
0	16	I	m	0.001	0	LanePointCLeverArmX: Lever arm from the RT to lane measurement point C in the $x$ direction.
16	16	I	m	0.001	0	LanePointCLeverArmY: Lever arm from the RT to lane measurement point C in the $y$ direction.
32	16	I	m	0.001	0	LanePointCLeverArmZ: Lever arm from the RT to lane measurement point C in the $z$ direction.

**Table 38. RangeForward, Longitudinal measurements, identifiers 7B0h (1968), 7C0h (1984), 7D0h (2000), 7E0h (2016)**

Offset	Length	Type	Units	Factor		Description
0	32	S	m	0.001	0	RangePosForward: Longitudinal range
32	16	S	m/s	0.01	0	RangeVelForward: Longitudinal velocity
48	16	S	s	0.001	0	RangeTimeToCollisionForward: Longitudinal time to collision, computed using range and velocity but not acceleration

**Table 39. RangeLateral, Lateral measurements, identifiers 7B1h (1969), 7C1h (1985), 7D1h (2001), 7E1h (2017)**

Offset	Length	Type	Units	Factor		Description
0	32	S	m	0.001	0	RangePosLateral: Lateral range
32	16	S	m/s	0.01	0	RangeVelLateral: Lateral velocity
48	16	S	s	0.001	0	RangeTimeToCollisionLateral: Lateral time to collision, computed using range and velocity but not acceleration

**Table 40. RangeResultant, Resultant measurements, identifiers 7B2h (1970), 7C2h (1986), 7D2h (2002), 7E2h (2018)**

Offset	Length	Type	Units	Factor		Description
0	32	S	m	0.001	0	RangePosRes: Resultant range
32	16	S	m/s	0.01	0	RangeVelRes: Resultant velocity
48	16	S	degrees	0.01	0	RangeAngleHeading: Angle to target in view of the hunter

The resultant velocity is the rate of change of the resultant range and not the modulus of the longitudinal/lateral velocity vector.

**Table 41. RangeHunterPosLocal, Position of hunter in local co-ordinates, identifiers 7B3h (1971), 7C3h (1987), 7D3h (2003), 7E3h (2019)**

Offset	Length	Type	Units	Factor		Description
0	32	S	m	0.001	0	RangeHunterPosLocalX: $x$ distance from origin
32	32	S	m	0.001	0	RangeHunterPosLocalY: $y$ distance from origin

Note: The convention used for the local co-ordinates is with the  $z$ -axis up.

**Table 42. RangeTargetPosLocal, Position of target in local co-ordinates, identifiers 7B4h (1972), 7C4h (1988), 7D4h (2004), 7E4h (2020)**

Offset	Length	Type	Units	Factor		Description
0	32	S	m	0.001	0	RangeTargetPosLocalX: $x$ Distance from origin
32	32	S	m	0.001	0	RangeTargetPosLocalY: $y$ Distance from origin

Note: these values are predicted to real time if the communication link(s) has more delay than the range delay field. The convention used for the local co-ordinates is with the  $z$ -axis up.

**Table 43. RangeStatus: Status information for range measurements, identifiers 7B5h (1973), 7C5h (1989), 7D5h (2005), 7E5h (2021)**

Offset	Length	Type	Units	Factor		Description
0	8	U	–	–	–	RangeHunderGpsPosMode: Hunter GPS position mode
8	8	U	–	–	–	RangeTargetGpsPosMode: Target GPS position mode
16	16	U	s	0.001	0	RangeRangeTargetLatency: Prediction used for target measurements
32	16	U	s	0.001	0	RangeRangeOutputLatency: Output latency (range delay)
48	8	U	–	–	–	RangeStatusByte
56	8	U	–	–	–	RangeRefPlane

Note that this is a “heartbeat” message and, if configured, it will be output periodically on the CAN bus even if no RTs are connected to the RT-Range. It is useful for checking that the RT-Range CAN bus is working.

**Table 44. RangeTimeGap: Time gap between target and hunter, identifiers 7B6h (1974), 7C6h (1990), 7D6h (2006), 7E6h (2022)**

Offset	Length	Type	Units	Factor		Description
0	16	S	s	0.001	0	RangeTimeGap: Time gap between target and hunter vehicles. This is the longitudinal range divided by the speed of the hunter vehicle
16	16	S	s	0.001	0	TimeToCollisionForwardWithAccel: This is the time to collision in the forward direction computed using range, velocity and acceleration

Note: Time to collision with acceleration is not available for Fixed point or static targets. A minimum acceleration of 0.05 m/s<sup>2</sup> is required. By default, unfiltered acceleration is used for this calculation. Filters can be applied before the calculation using Advanced commands (see [page 106](#)).

**Table 45. RangeLocal: Difference in position of hunter and target in local co-ordinates, identifiers 7B7h (1975), 7C7h (1991), 7D7h (2007), 7E7h (2023)**

Offset	Length	Type	Units	Factor		Description
0	32	S	m	0.001	0	RangeLocalDeltaX: x Distance from hunter
32	32	S	m	0.001	0	RangeLocalDeltaY: y Distance from hunter

Note: The convention used for the local co-ordinates is with the z-axis up.



**Table 46. RangePolygon, Polygon measurements, identifiers 7B8h (1976), 7C8h (1992), 7D8h, (2008), 7E8h (2024)**

Offset b	Length	Type	Units	Factor		Description
0	8	U	–	–	0	RangePolygonVisible: Percentage of the target that is not hidden behind other targets
8	8	U	–	–	0	RangePolygonInside: Check whether the hunter is inside the target polygon. If this is true then the answers may be incorrect (and the vehicles may have crashed). Please note that this field is not available in RCOM data
16	8	U	–	–	0	RangePolygonLeftPoint: Polygon point number to the left of the closest range to the polygon
24	8	U	–	–	0	RangePolygonRightPoint: Polygon point number to the right of the closest range to the polygon

**Table 47. RangeFeatInfo: Range Feature point information, identifiers 7B9h (1977), 7C9h (1993), 7D9h (2009), 7E9h (2025)**

Offset	Length	Type	Units	Factor		Description
0	16	U	-	-	0	RangeFeatId: Feature point ID. The ID of the feature being tracked is only valid when it is not one of 0000h (disabled), FFFEh (unknown or no feature selected) and FFFFh (invalid)
16	8	U	-	-	0	RangeFeatType: Feature point type. The type of the feature being tracked is only valid when it is not one of 00h (disabled), FEh (unknown or no feature selected) and FFh (invalid)

**Table 48. RangeOffset: Offsets to the range measurements, identifiers 5B0h (1456), 5C0h (1472), 5D0h (1488), 5E0h (1504)**

Offset	Length	Type	Units	Factor	Description
0	16	I	m	0.001	0 RangeOffsetForward: Value added to the longitudinal range before it is output
16	16	I	m	0.001	0 RangeOffsetLateral: Value added to the lateral range before it is output

Note: The range offsets are used to make minor adjustments to the range measurements.

**Table 49. RangeFixedPointLL: Latitude and longitude of Fixed points, identifiers 5B1h (1457), 5C1h (1473), 5D1h (1489), 5E1h (1505)**

Offset	Length	Type	Units	Factor	Description
0	32	I	degrees	1e-7	0 RangeFixedPointLat: Latitude of the Fixed point
32	32	I	degrees	1e-7	0 RangeFixedPointLon: Longitude of the Fixed point

Note: These outputs have a resolution of about 1 cm, which may not be precise enough for all applications. Internally the RT-Range has more resolution.

**Table 50. RangeFixedPointHH: Altitude and heading of Fixed points, identifiers 5B2h (1458), 5C2h (1474), 5D2h (1490), 5E2h (1506)**

Offset	Length	Type	Units	Factor	Description
0	32	I	m	0.001	0 RangeFixedPointAlt: Altitude of the Fixed point
32	16	U	degrees	0.01	0 RangeFixedPointHea: Heading of the Fixed point

**Table 51. RangeSensorLeverArm: Lever arm from the RT to the sensor point, identifiers 5B3h (1459), 5C3h (1475), 5D3h (1491), 5E3h (1507)**

Offset	Length	Type	Units	Factor		Description
0	16	I	m	0.001	0	RangeSensorLeverArmX: Lever arm from the RT to the sensor point in the $x$ direction
16	16	I	m	0.001	0	RangeSensorLeverArmY: Lever arm from the RT to the sensor point in the $y$ direction
32	16	I	m	0.001	0	RangeSensorLeverArmZ: Lever arm from the RT to the sensor point in the $z$ direction

**Table 52. RangeBullsEyeLeverArm: Lever arm from the RT to the bulls-eye point, identifiers 5B4h (1460), 5C4h (1476), 5D4h (1492), 5E4h (1508)**

Offset	Length	Type	Units	Factor		Description
0	16	I	m	0.001	0	RangeBullsEyeLeverArmX: Lever arm from the RT to the bulls-eye point in the $x$ direction
16	16	I	m	0.001	0	RangeBullsEyeLeverArmY: Lever arm from the RT to the bulls-eye point in the $y$ direction
32	16	I	m	0.001	0	RangeBullsEyeLeverArmZ: Lever arm from the RT to the bulls-eye point in the $z$ direction

**Table 53. RangeVehicle: User parameters about the target vehicle, identifiers 5B5h (1461), 5C5h (1477), 5D5h (1493), 5E5h (1509)**

Offset	Length	Type	Units	Factor		Description
0	16	U	m	0.001	0	RangeTargetVehicleLength: User entered vehicle length
16	16	U	m	0.001	0	RangeTargetVehicleWidth: User entered vehicle width
32	16	U	–	–	–	RangeTargetPolygonNumber: User entered polygon number

**Table 54. RangePosStdev: Standard deviation of the range measurements, identifiers 5B6h (1462), 5C6h (1478), 5D6h (1494), 5E6h (1510)**

Offset	Length	Type	Units	Factor		Description
0	16	U	m	0.001	0	RangePosForwardStdev: Standard deviation of the range in the longitudinal direction
16	16	U	m	0.001	0	RangePosLateralStdev: Standard deviation of the range in the lateral direction
32	16	U	m	0.001	0	RangePosDownStdev: Standard deviation of the range in the vertical direction
48	16	U	m	0.001	0	RangePosMagStdev: This is the standard deviation of the resultant range measurement. It may be less than the other three accuracies, particularly when the target is offset by a 45 degree angle

Note: these accuracy estimates use the accuracy estimates of the RT and take into account the position and orientation effects.

**Table 55. RangeFeatPointLL: Latitude and longitude of Feature points, identifiers 5B7h (1463), 5C7h (1479), 5D7h (1495), 5E7h (1511)**

Offset	Length	Type	Units	Factor		Description
0	32	I	degrees	1e-7	0	RangeFeatPointLat: Latitude of the Feature point
32	32	I	degrees	1e-7	0	RangeFeatPointLon: Longitude of the Feature point

Note: These outputs have a resolution of about 1 cm, which may not be precise enough for all applications. Internally the RT-Range has more resolution.

**Table 56. RangeFeatPointHH: Altitude and heading of Feature points, identifiers 5B8h (1464), 5C8h (1480), 5D8h (1496), 5E8h (1512)**

Offset	Length	Type	Units	Factor		Description
0	32	I	m	0.001	0	RangeFeatPointAlt: Altitude of the Feature point
32	16	U	degrees	0.01	0	RangeFeatPointHea: Heading of the Feature point

## Calculation details

Although in an overview the problem of computing the range or tracking the line seems trivial, there are some aspects of the physics that require some explanation. There are different interpretations on range (2D or 3D for example). This can lead to differences in the measurements between the RT-Range and the outputs of other sensors. These are not necessarily errors, they are differences in the calculations. Some of the differences that may be experienced are explained in this section.

### Range measurement effects


There are two main effects on the data in the range measurements. These are due to errors in heading and due to viewing the target vehicle from the co-ordinate frame of the hunter vehicle. There is also the effect of the communication link delay and the transient effect this has on the measurements.

#### *2D and 3D measurement planes*

By default, the RT-Range computes the range in the horizontal plane. This is the distance between the vehicles viewed from above with no altitude or orientation effects. It is also possible to configure the RT-Range to output the distance projected into a measurement plane that is attached to the hunter's orientation.

Figure 98 shows the horizontal measurement plane solution. The range between either of the hunter vehicles (white) to either target vehicle (red) will be the same, regardless of orientation of either vehicle or their difference in altitude.

**Figure 98. Horizontal (2D) measurement plane calculation**

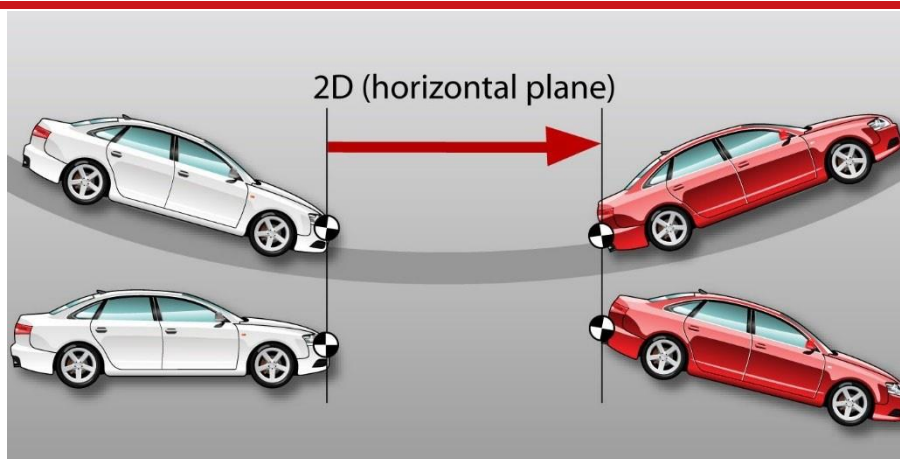


In the 2D horizontal plane mode a full 3D calculation is still used to compute the sensor point and the bulls-eye point from the position of the RT; the orientation of the vehicle does affect the position of the sensor and bulls-eye points.

When the measurement plane is attached to the hunter vehicle then the range is computed along a measurement plane that is angled with the hunter vehicle. Figure 101 shows the hunter measurement plane solution. The two target vehicles (red) have the same forward (longitudinal) range when using the hunter measurement plane; in the horizontal measurement plane the top target vehicle would have a longer forward range.

In mathematical terms the 3D range vector from the sensor point on the hunter to the bulls-eye point on the target (or closest part of the polygon) is computed. Then this 3D vector is projected into the forward and lateral (right) directions of the hunter vehicle. The hunter z-axis information is not output.

**Figure 99. Hunter (3D) measurement plane calculation**

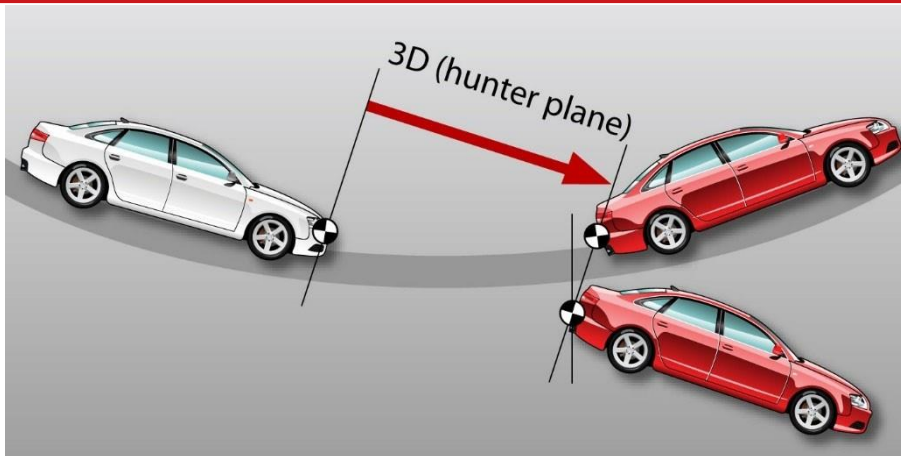

When using the hunter measurement plane, it is important to align the pitch measurements of the RT in the hunter with the pitch measurement of the sensor. The Enginuity software that comes with the RT has tools for adjusting the pitch measurements of the RT.

It should be noted that the difference in range between the horizontal measurement plane and the hunter measurement plane is very small except on very steep slopes.


### *Polygons*

Targets and Fixed points in the RT-Range can be represented as polygons. The RT-Range will then compute the range from the hunter to the closest part of the polygon. Polygons are planar (or flat) and are orientated by the heading, pitch and roll of the target vehicle. For a Fixed point the heading of the Fixed point needs to be entered and the pitch and roll are zero.

There are some restrictions on the polygons that can be used in the RT-Range. The polygons cannot have intersecting or overlapping lines. They need to have a minimum of 3 points and a maximum of 24 points. All the points are assumed to lie in the same plane. Concave sets of points should be avoided. The results may not be correct when the sensor point of the hunter is inside the polygon. These restrictions are not normally a problem when using a polygon to represent the outline of a vehicle.

The polygon algorithm will either track the closest point or the closest edge, depending on which one is closer. Figure 100 shows the red hunter tracking the edge of the target, between points 1 and 6 and the blue hunter tracking point 3.

**Figure 100. Polygon point or edge tracking**

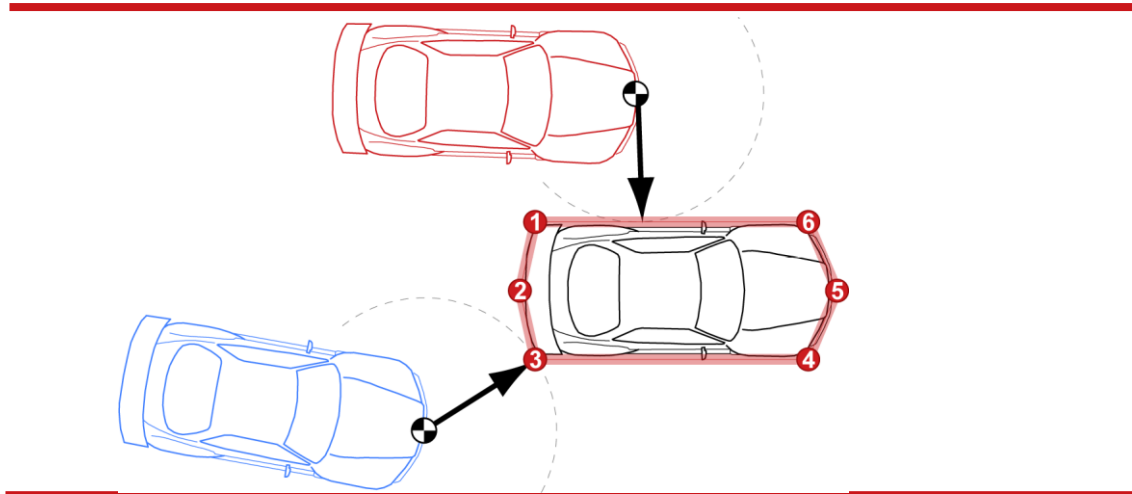

For the red hunter, the Range Polygon output message will identify point 1 as the point on the right and point 6 as the point on the left. For the blue hunter, the Range Polygon output message will identify point 3 for both the left and the right points.

Note that the points are ordered in Figure 102. The points must be entered into the software ordered either clockwise or anti-clockwise. The software will use lines to connect consecutive points and the lines cannot intersect. The software will not work out the bounding box around a randomly ordered set of points. The final point will connect to point 1 (i.e. point 6 in Figure 102).

#### *Range velocity with polygons*

The range velocity is ambiguous when the closest edge is being tracked. The RT-Range computes the difference between the instantaneous velocity of the sensor point compared to the edge of the polygon.

For example, in Figure 102 the red hunter is tracking the edge between points 1 and 6. If the hunter is overtaking the target then the range velocity forward (longitudinal) will be

approximately the difference in speed between the hunter and the target vehicles. Another interpretation would be that the range velocity forward would be zero since the intersection point is also moving, which is not what the RT-Range outputs. This interpretation avoids large jumps in range velocity lateral when the blue hunter turns and the point tracked jumps quickly (possibly immediately) from point 2 to point 3.

The velocity implementation in the RT-Range may be different to the velocity used by other sensor systems.

### *Errors in heading*

At large distances the heading accuracy of the RT has a large effect on the lateral range measurement. Although the RT3002 system can measure heading accurate to as low as 0.1 degrees, this can cause the lateral range measurement to have significant errors in it.

Table 57 shows the error in the lateral range for a 0.1 degree error for different distances.


**Table 57. Lateral error for different ranges for 0.1 deg heading error**

Range to Target	Lateral Range Error
5 m	0.9 cm
10 m	1.7 cm
20 m	3.5 cm
50 m	8.7 cm
100 m	17 cm

### *Lateral velocity effects*

Consider the lateral velocities of the hunter and target vehicles in Figure 101; they are both zero. Yet the lateral range velocity is not zero.

**Figure 101. Lateral velocity of the target compared to the hunter**

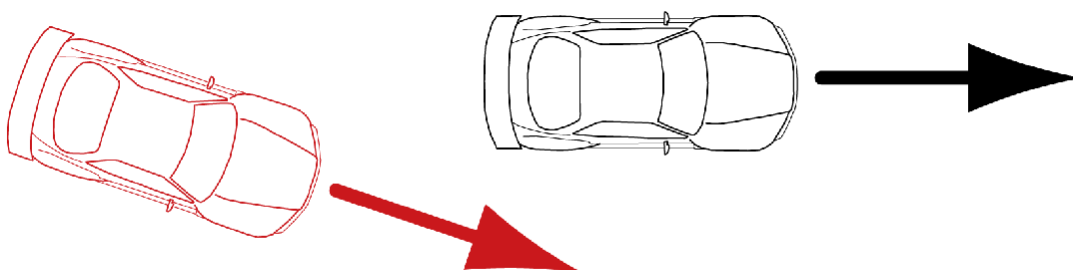




This effect is also seen if you have a stationary hunter vehicle, a stationary target (or Fixed point) and somehow rotate the hunter vehicle on the spot. The lateral range velocity will not be zero, even though everything is stationary.

## *Transient errors due to communication link delay*

The RT-Range uses a constant acceleration model for predicting the position and velocity of the target vehicle. This prediction is to overcome the delay in the communication link (either Wireless LAN or radio modem or both).

The effect on position for this type of transient is small (less than 1 cm). The effect on the velocity is higher. Figure 102 shows the acceleration curve, velocity curve and velocity error for a 0.8 g sudden acceleration; it assumes a communication link delay of 70 ms, which is about the peak expected from the Wireless LAN when the vehicles are close.

**Figure 102. Example transient error for 0.8 g acceleration on target vehicle**

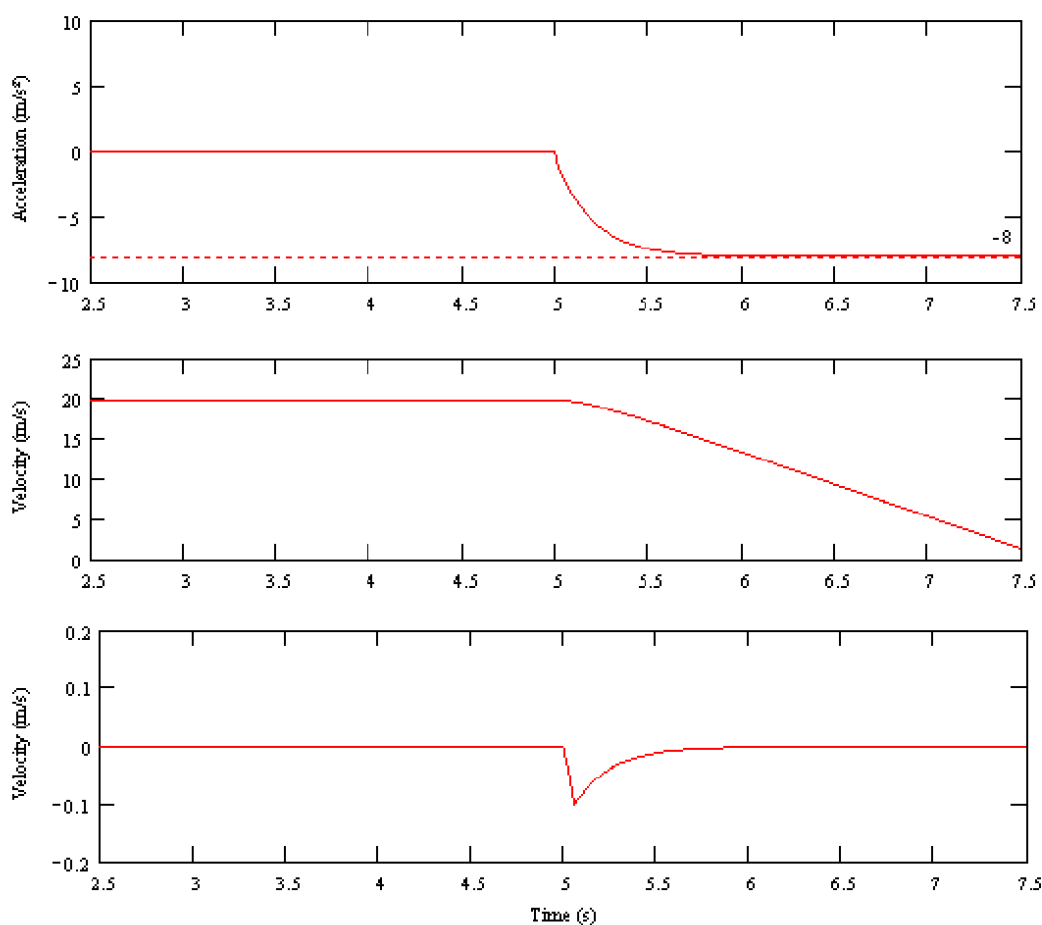

It can be seen from the graph that the effect on the velocity measurement for this transient is large (0.1 m/s is over 3 times larger than the RMS specification). The error duration is short and the error is not present for the whole of the test, just during the period when the acceleration changes.

This error can be removed by increasing the output latency or by post-processing the data.

### Lane position measurement effects


The problem of surveying lane markings, constructing a map and computing the outputs is not trivial when accuracies in the centimetre region are required. It is very unlikely that the person who painted the road managed to paint it accurately, especially on bends. But, small changes in curvature of the line have huge effects on the acceleration measurements.

There is also the problem of constructing a smooth line for the RT-Range to follow. It is possible to use splines, fit curves or to simply use straight segments. All solutions have their associated problems.

Initially splines are an obvious choice but there are problems in the detail. Figure 105 shows five points with three different fitting techniques.

**Figure 103. Fitting between the points on the lines**

---

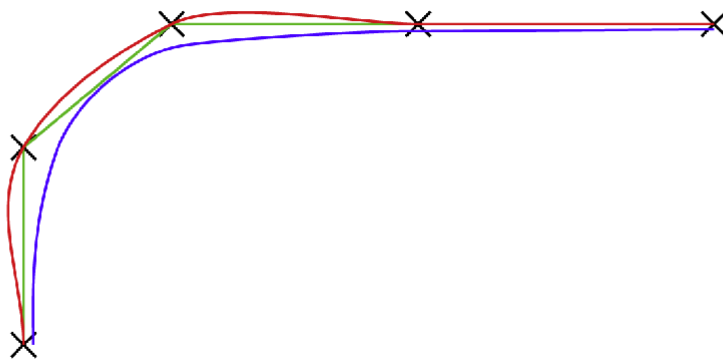

---

**Spline fitting exactly on all the points.** A spline that fits exactly on all the points is drawn in red in Figure 103. This type of spline is very accurate at the surveyed points, but it is not clear what the error will be between the points. It will tend to overshoot after curves.

**Spline smoothing all the points.** A spline that smooths the points does not actually pass through any of the points that are surveyed. This type of spline cuts corners.

**Straight-line fit between all the points.** Fitting a straight line between the surveyed points gives accurate measurements at the points and does not overshoot in between the points. However, the straight line has larger errors on curves or circles. It also has other associated problems, such as discontinuities in distance, abrupt changes in curvature (that affect acceleration) etc.


The straight-line fit is, however, the easiest solution to the problem and the one that is least likely to give unexplainable results. It is the solution that has been used in the RT-Range. Ultimately it probably offers the best accuracy if the survey is conducted correctly.

The errors shown here in the drawing may look small considering how tight the curve is. But, when the points are surveyed at 1 m spacing, typical for large road surveys, then it is easy to introduce errors of 1 cm or more in the curve fitting. This cannot easily be seen on paper but it is significant compared to the measurement accuracy of the RT-Range.

### *Discontinuous distance*

Consider the Line in Figure 104. In this example the vehicle is driving on the outside of the bend. There are sections that the vehicle has to travel, but there is no distance moved along the bend. This leads to jumps in the distance output.

**Figure 104. Discontinuous distance at the points**

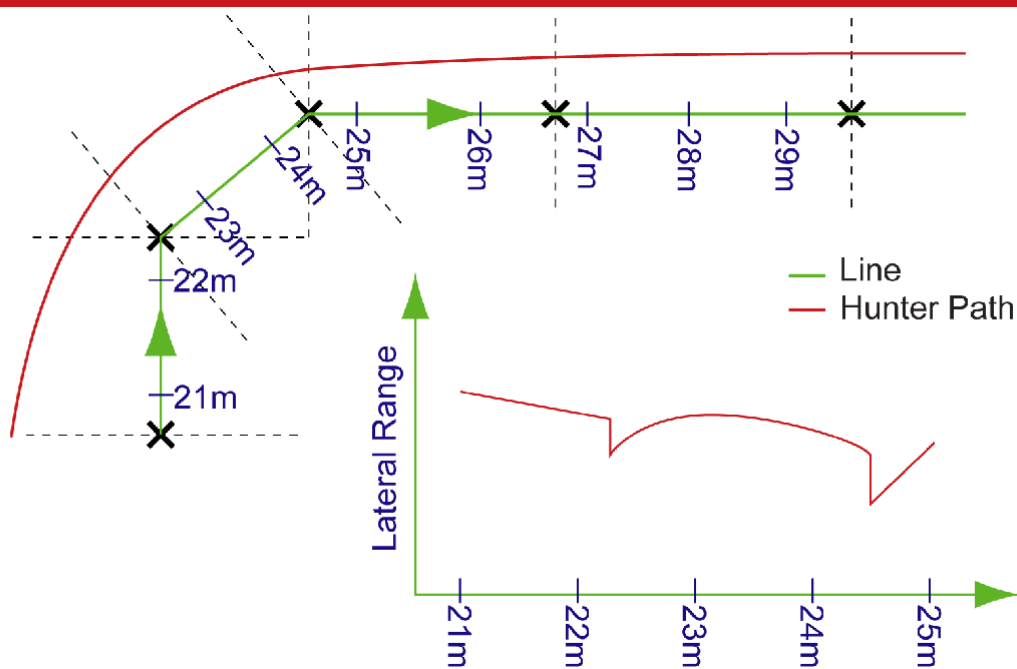


In normal circumstances this is not a problem. Distance is normally only used as an indication of track position and it is not normally critical to the plotting of the graph. Also, the jumps are much smaller than the ones shown here. The lateral distance from the line is also discontinuous for the same reason.

It should be noted that the jumps increase as you get tighter bends and as you get further away from the reference line (Line 1).

#### *Co-ordinates for measurements with respect to the Lines*

There are two co-ordinate frames that are possible for the distance to the line measurement. One is perpendicular to the hunter vehicle and the other is perpendicular to the line. The RT-Range measures the distance that is perpendicular to the line, as shown in Figure 105.

**Figure 105. Co-ordinate system for the line measurements**

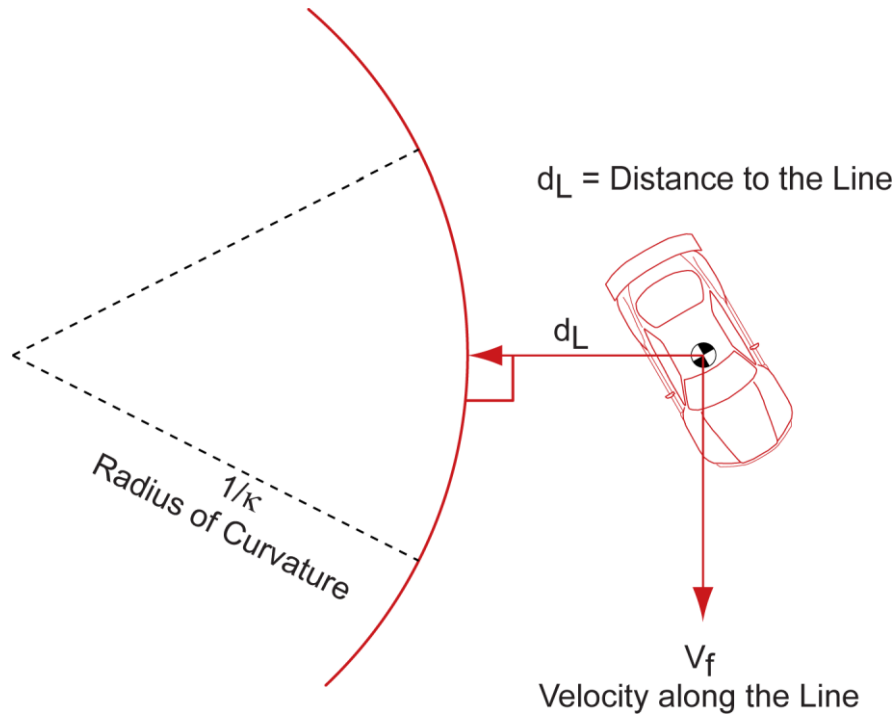

#### Acceleration on curves

There are two terms for the acceleration of the hunter vehicle with respect to the line. There is the acceleration of the hunter vehicle plus the curvature of the line. The curvature of the line accounts for the circumstance where the hunter vehicle travels straight with no acceleration and the line curves towards or away from the hunter vehicle.

In Figure 105 the hunter vehicle could be travelling in a straight line, however the line is curved and so there is some acceleration of the hunter vehicle away from the line. The RT-Range computes the acceleration relative to the line as:

$$-a_L + \frac{\kappa}{1 + \kappa \cdot d_L} \cdot V_f^2$$

where  $a_L$  is the acceleration of the vehicle in the co-ordinate frame of the line;  $\kappa$  is the instantaneous curvature of the line;  $d_L$  is the distance to the line and  $V_f$  is the velocity of the hunter vehicle along the line.

Using the formula above makes sure that, if the hunter vehicle is travelling on a circle that has the same centre as the line then there will be no acceleration relative to the line.

### Effect of the line survey on the accuracy

There are several conflicting problems facing the line survey process. For accurate tracking of the lane markings the points should be as close together as possible; but making the points closer makes the curvature noisier.

**Figure 106. Error using straight lines to approximate curves**

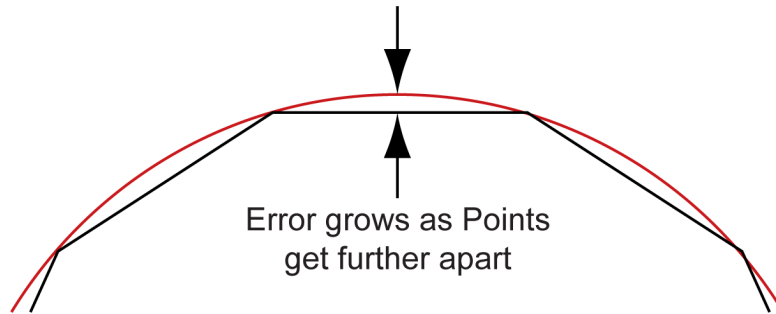


Figure 106 shows the effect of having the points too far apart on a curve lane marking. The error gets larger as the points get further apart and as the curve gets tighter. The small angle approximation for the maximum error is:

$$\frac{d^2}{8 \cdot R}$$

where  $d$  is the distance between the points and  $R$  is the radius of the curve. Table 58 shows the error for a 1 m distance between survey points on curves with different radii.

**Table 58. Curve fitting error for 1 m point separation**

Curvature	Maximum Error
10 m	1.25 cm
50 m	0.25 cm
100 m	0.125 cm

Unless your survey includes some curves that are tighter than 10 m radius then there is little point in surveying points with a separation less than 1 m.

The noise on the curvature depends on speed. The faster you travel, the noisier the acceleration becomes. The instantaneous error in acceleration is:

$$\frac{2 \cdot e \cdot V^2}{d^2}$$

where  $e$  is the survey error,  $V$  is the velocity of the hunter vehicle and  $d$  is the distance between the survey points.

For a 1 cm survey error on a vehicle travelling at 20 m/s (72 km/h) and a distance between survey points of 1 m the instantaneous error in acceleration is 8 m/s<sup>2</sup>. To make the acceleration acceptable a considerable amount of filtering will be required, the survey will need to be more accurate than 1 cm or the separation will need to be more than 1 m.

### *Rules for the Clean Up Line tool in the Map Creation Wizard*

The points above, relating to the effects of the survey on accuracy, have been used to set some rules of the Clean Up Line tool. We would recommend using a point spacing of 1 m or 2 m, but the Clean Up Line tool will accept points with a separation down to 0.5 m.

For straight lines the acceleration becomes unacceptably noisy when the angle between the points exceeds about 0.5 degrees. However, this is not acceptable as a limit since a 10 m radius bend with a point separation of 1 m has a 5.7 degree angle between the lines. The limit, therefore, for the Clean Up Line tool has been set at 5.7 degrees.

## Line, map and Feature point file format descriptions

The line, map and Feature point files are stored in text format. It is possible to generate either file using different software. A brief description of the file formats is provided here.

### Line file format

The line file stores each point used to mark the straight-line segments during the line survey. The file is stored in CSV format and always uses the English number system (full stop for the decimal separator and comma for the list separator). Each line represents one point. The fields in the file are listed in Table 59.

**Table 59. Line file format**

Field	Name	Description
1	Latitude	Latitude of the point in decimal degrees
2	Longitude	Longitude of the point in decimal degrees
3	Altitude	Altitude of the point
4	Heading	Heading of the line at this point
5	North stdev <sup>1</sup>	Estimated accuracy of the point in the North–South direction in metres
6	East stdev <sup>1</sup>	Estimated accuracy of the point in the East–West direction in metres
7	Altitude stdev <sup>1</sup>	Estimated accuracy of the point in the vertical direction in metres
8	(empty)	Not currently used
9	# satellites	Number of satellites tracked by the GPS at this point
10	Position mode <sup>1</sup>	Position mode of the GPS at this point, see NCOM Description Manual for a definition of position mode

Note 1: These fields are not currently transferred to the map file.

### Map file format

The map file consists of a header, followed by each of the lines in order. An example file is shown in Figure 107.



**Figure 107. Example map file**

```

map number,22
origin,51.94322136,-1.26696946,138.009
start_line,51.9433702331181,-1.26697457911789,51.943294365567,-1.26671038784474,Line3.rtr1,26,20
number of lines,6

line,1,Line1.rtr1
number of points,110
51.94322136,-1.26696946,138.009,027.0736,0
51.94328786,-1.26691446,138.27,026.4461,0
51.94335396,-1.26686126,138.532,025.6640,0
...

line,2,Line2.rtr1
number of points,105
51.94323215,-1.26694229,138.079,026.8682,0
51.94329884,-1.26688762,138.326,026.2888,0
51.94336506,-1.26683469,138.551,025.4278,0
51.94343107,-1.26678391,138.674,024.6603,0
...

```

Note: Not all the line information has been shown; “...” has been used to show where more information continues. There would be six lines in this file, only two are shown here.

### Header fields

The fields in the header are shown in Table 60.

**Table 60. Map file header fields**

Field	Description
Map number	This is the map number that will be transmitted over the CAN bus and on RCOM. It is an integer number from 0 to 255
Origin	The origin is used by the Map Creation wizard for plotting the points. It is a value of latitude, longitude and altitude near the lines
Start line	This field describes the start line points. The sub-fields are: Left point latitude in decimal degrees Left point longitude in decimal degrees Right point latitude in decimal degrees Right point longitude in decimal degrees Filename of the line file that contains the centre of the start line Point number of the point in the line file that is the centre of the start line Width of the start line in metres Note that the start line is directional and the RT-Range will only start line tracking if the vehicle crosses the start line in the correct direction
Number of lines	Tells the software how many lines are included in this file

### Line fields

Each line in the map file has its own header. This holds the line number, the filename used to create the line and the number of points in the line. This is followed by the line data points. Table 61 shows the fields for the line in the map file.

**Table 61. Line format in the map file**

Field	Name	Description
1	Latitude	Latitude of the point in decimal degrees
2	Longitude	Longitude of the point in decimal degrees
3	Altitude	Altitude of the point
4	Heading	Heading of the line at this point
5	Line Type <sup>1</sup>	Always zero

Note 1: The Line Type is not currently used.

### Feature point file format

The Feature point file holds a list of features' positions so that the RT-Range can compute the range to them. The first two lines are headers, followed by one line for each Feature point. The file is stored in CSV format and always uses the English number system (full stop for the decimal separator and comma for the list separator). The Feature point file should have an extension ".ftl".

The header lines in the Feature point file are in the following format:

feature list,YYY,TTTTTT,NNNNNN

number of features,XXX

Table 62 gives the definitions of the fields.

**Table 62. Feature point file header fields**

Field	Description
Feature list	The RT-Range will use this to identify that this is a Feature point file
YYY	This is the Feature point file reference number and it is output on RCOM and displayed in the Real-Time Display (as “Reference number of feature set”). It can be used to identify which Feature point file is being used by the RT-Range. Only an integer value from 1 to 250 can be used. Text descriptions are not supported
TTTTTT	This field is a text description, for the user’s benefit, of the Feature point file. It can contain any valid alpha-numeric characters, including spaces, but it cannot contain a comma. It can be blank (i.e. two commas: “,,”)
NNNNNN	This field should contain the filename of the Feature point file. It is currently only for the user’s benefit and it is not used by the software. The Feature point file is renamed when it is saved on the RT-Range. When it is uploaded (using FTP) then this field could be used to rename the file back to its original name. This is a future potential feature that is not supported by the current software
Number of features	The RT-Range will use this to identify this as a Feature point file. If this is not the first text on the second line, then the file cannot be used
XXX	This is the number of features in the file. It can be used to allocate memory space to hold the Feature points as the file is read. Up to a maximum of 65,530 features can be loaded

The list of the Feature points will be in the following format:

ID,Latitude,Longitude,Altitude,Heading,Type,Reserved,Description

Table 64 gives the definitions of the fields.

**Table 63. Feature point file fields**

Field	Description
ID	This is the ID of the Feature point and it can be used to identify a specific Feature point by number. It is output on the CAN bus and can be viewed in the Real-Time Display. The ID should be unique in the file, but it does not need to be sequential. It is an integer number from 1 to 65,530
Latitude	This is the WGS84 latitude of the Feature point in decimal degrees. It will need at least 7 decimal places (approximately 1 cm) to be accurate enough
Longitude	This is the WGS84 longitude of the Feature point in decimal degrees. It will need at least 7 decimal places (approximately 1 cm) to be accurate enough
Altitude	This is the altitude of the Feature point in metres. It is measured in the same reference system as the RT (either geoidal or ellipsoidal)
Heading	This is the heading of the Feature point, which is currently not used
Type	This is a category of the Feature point that allows the user to identify what the Feature point is. For example, a 50 km/h speed limit sign could be assigned a type of “4”, making it easier to identify when this type of sign is in view. OxTS does not have a classification of Feature points and it is up to each application to categorise them. This field is an integer number from 1 to 250
Reserved	This field is reserved and it should be set to 0
Description	This is a text description of the Feature point. It is not used by the software and it is provided for the user’s benefit. It can contain any valid alpha-numeric characters, including spaces, but it cannot contain a comma

An example Feature point file is shown in Figure 108.

**Figure 108. Example Feature point file**

```
feature list,7,RT-Range airfield test line,RT-RangeTest_AirfieldLine1.ftl
number of features,12
1, 51.94011276,-001.24408213,0130.261,258.874,1,0,X Post
2, 51.94015950,-001.24394702,0130.197,347.158,2,0,E Sign
3, 51.94024407,-001.24422378,0130.064,326.847,2,0,X1 Sign
4, 51.94039547,-001.24450395,0129.587,341.178,1,0,O Sign
5, 51.94038123,-001.24481045,0129.435,290.798,3,0,U Cone
6, 51.94049197,-001.24483301,0129.225,326.358,2,0,C Sign
7, 51.94049216,-001.24491855,0129.368,302.581,4,0,water tap
8, 51.94044339,-001.24500736,0129.312,236.959,1,0,J Post
9, 51.94058045,-001.24540721,0129.192,247.792,1,0,8 Post
10, 51.94063415,-001.24535482,0129.209,324.338,1,0, Stick
11, 51.94078665,-001.24601052,0129.758,253.811,1,0,I Post
12, 51.94084804,-001.24595231,0129.813,341.162,1,0,6 Post
```

### RT-Range and the Ibeo Feature Fusion ADAS reference system

The integration of the RT-Range and RT-Range S systems with Ibeo laser scanner environment perception allows test drives in public traffic.

All relevant objects are displayed in every situation. It can be automatically determined if and how well the target vehicle is visible to an on-board sensor-under-test. Incorrect measurements on vehicles other than the target vehicle can be reliably detected. Occlusion of the target vehicle, for example by pedestrians and the like, can be reliably detected and displayed.

### Introduction to the Ibeo Feature Fusion System

The Ibeo Feature Fusion is a Lidar-based system. It fuses between 2 and 6 sensors mounted on the vehicle. With 6 sensors, a 360° view around the vehicle is possible.

The Feature Fusion System provides data such as:

#### **Raw distance data for each scan point containing:**

- **position of the scan point**
- **width (i.e. duration) of the echo pulse**
- **scan layer and echo number (multi-target capability)**

#### **Objects:**

- **position of the object**
- **object tracking**
- **size and orientation**
- **velocity**
- **classification (car, bike, truck, pedestrian, unknown big, unknown small)**

### Benefits of adding the Ibeo Feature Fusion System to the RT-Range system


The key features of adding the Ibeo Feature Fusion System are:

1. Ibeo with RT-Range integration permits visualisation of RT-Range data with Ibeo Laser View (ILV) – a very sophisticated visualisation and playback tool. ILV is described in greater detail in the next section.
2. Providing information about the environment and all other vehicles. This allows data recording on public roads, not only empty test tracks.
3. Automatic calculation of visibility and occlusion of all target vehicles from the point of view of both, the laser scanners and a configurable Device under Test (DuT).
4. Blending of data from both RT-Range and Ibeo laser scanners to achieve better accuracy than is possible with either system, and to provide measurements even when the target(s) are not visible to lasers.
5. Rapid setup of RT-Range Target systems in target vehicles: utilising automatic parameter calibration and shape recognition.

### **Ibeo Laser View (ILV) visualisation**

The Ibeo visualisation of a Feature Fusion System fused with an RT-Range system is shown in Figure 109. It shows the scenario from above (bird view).

**Figure 109. Ibeo Laser View (ILV) data visualisation**

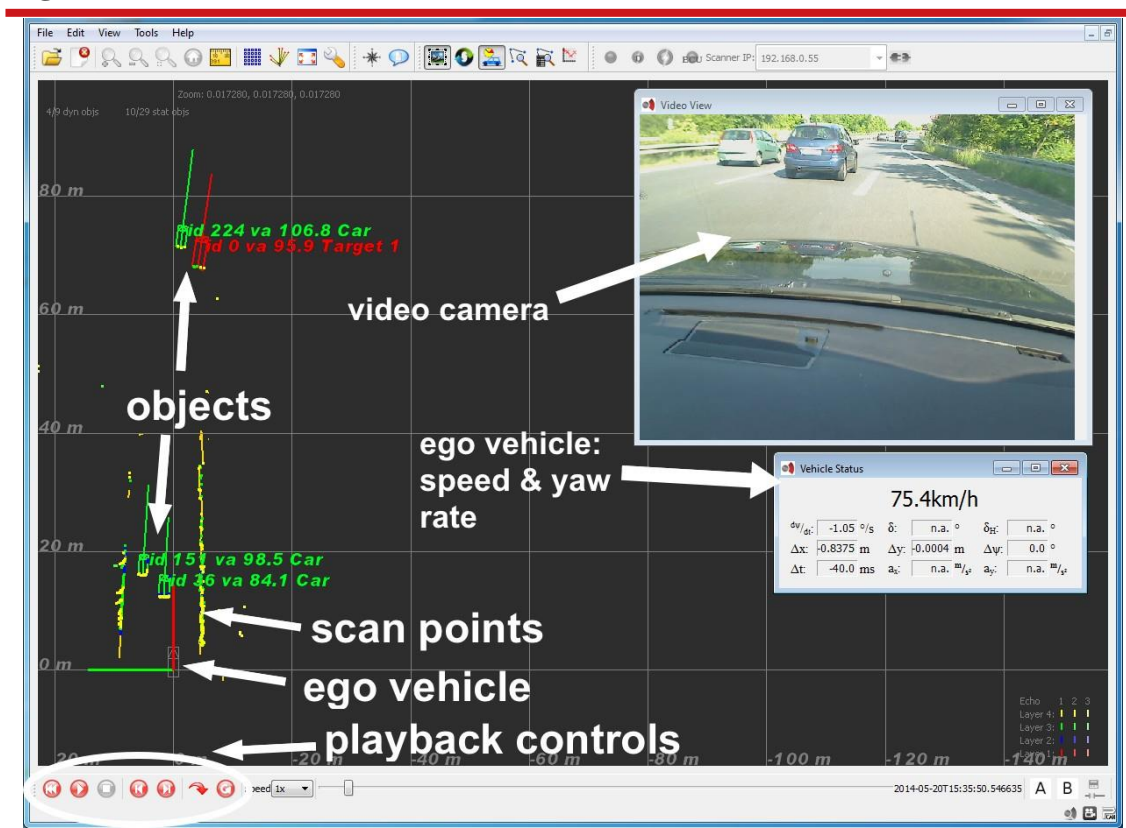

**Hunter (ego) vehicle.** This box shows the hunter vehicle in correct sizing and driving direction.

**Scan points.** Each coloured scan point represents the distance and echo pulse width (reflectivity).

**Objects:** The green rectangles represent all objects within the field of view of the Ibeo laser scanners with their correct sizing. Each object has the following information:

- **id:** Displays the object's id
- **va:** Absolute velocity in km/h
- **classification:** Car, bike, truck, pedestrian, unknown big, unknown small

**RT-Range Target objects.** Targets are displayed in red and have the classification tag as 'Target *n*' where *n* represent the target number.

**Hunter (ego) vehicle status.** The vehicle status window provides data such as the hunter vehicle speed in km/h and hunter vehicle yaw rate.

**Video camera window.** The video camera window displays the recorded video image of a camera installed in the ego vehicle. This video data is not used by object tracking; its purpose is only the visualisation.

For more information about the Ibeo-OxTS integration, please refer to the Ibeo-OxTS Integration Customer Documentation and the Ibeo Feature Fusion Customer Documentation which is available from Ibeo Automotive Systems GmbH <http://www.ibeo-as.com/contact.html>



## Revision history

**Table 64. Revision history**

Revision	Comments
051018	Initial Version
051114	Typing Corrections
051118	More Corrections and change of CAN IDs to 7A0h/7B0h range
060803	Updated for new RT-Range box
061211	Software changes
070611	Software changes
071214	Software change. Logging added; Longitudinal Offset added; Wireless LAN SSID and IP Address added
080613	Added multiple Targets
081212	Added Fixed point from RT; Post-processing measurements from Targets. Changed packing lists for new Wireless LAN antenna
090619	Removed optional SATEL radio. Added ABD robot connection. Survey Trolley Installation moved and improved. Clarified workflow for post-processing. Added Line File and Map File formats. Changes for the latest software
090917	Added Survey Trolley Assembly section
100426	Added velocity compared to lines; time gap. Added lateral offsets. Added maps in Bird's Eye View. Changed RCOM logging. Added RT2000 product references
110228	Added polygons; hidden targets; hunter measurement plane; target status on CAN bus; range accuracy outputs; lane heading and curvature; additional lane measurements from points B/C; lane heartbeat message; start line in logging window
121121	Corrections to CAN messages (default identifiers, offsets and description). Added Fixed point heading and Feature point ID, type, position and heading to CAN outputs. Updated software screenshots and description to include Feature points, Fixed point polygons. Added description about adding multiple line files. Changes to Configure Display
131210	Increased polygon points to 24. Updated ABD robot interface. Increased field of view range to 500 m. Added CAN pin assignments. Other minor updates
140611	Modified to incorporate RT-Range S system. Wiring, configuration drawings, specification changes and conformance notices
140802	Updated with information about the Ibeo fusion system. Added move table scaling
141202	Updated for real-time CAN acquisition. RT-Range front panel connections, new images and other minor revisions
151010	Added Hunter polygon, added new acceleration filters, updated styles, GUI updates
161102	Feature point Survey Wizard added, updated Data Logger section, updated Bird's Eye view
180219	WEEE update
180612	New Configuration Module UI, Bird's Eye View display module update, Post process CSV output and add measurements UI
181015	Updated Range Measurements including new interface and multi-sensor points
190902	Updated when RT-Range was introduced as a feature on the RT products and the RT-Range S Hunter was no longer used for Range calculations